
! IMPORTANT SAFEGUARDS !

WHEN USING ELECTRICAL EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

1. Do not use outdoors.
2. Do not use this equipment for anything other than its intended use.
3. The installation should be performed by a licensed electrician.
4. To prevent death, injury or damage to property, this product must be installed in accordance to National Electrical Code (NFPA70) in the US or Canadian Electrical Code (CSA 22.1) in Canada.

SAVE THESE INSTRUCTIONS
READ AND FOLLOW ALL SAFETY INSTRUCTIONS

What's In The Box



One (1) NLCBCS107C1
One(1) NLCBCS107C1 Mounting plate

What You Need




One (1) CR123A Battery
(not included)

Tools Needed


A drill and screwdriver will be needed to install the NLCBCS107C1.




1 Open latch on the back and insert the CR123A battery (not included)

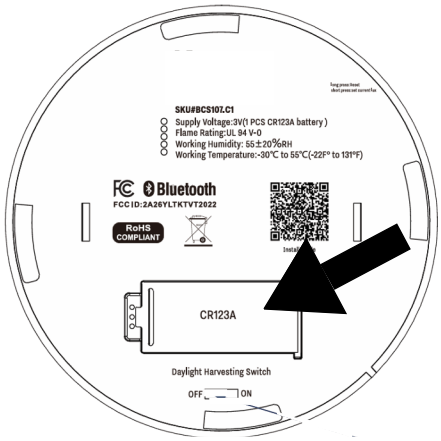


2 Use the switch on the back to select OFF or ON to Disable/Enable daylight harvesting feature.

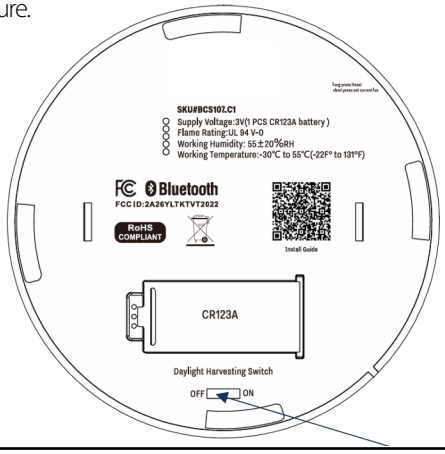

3 Screw the mounting plate to the ceiling.

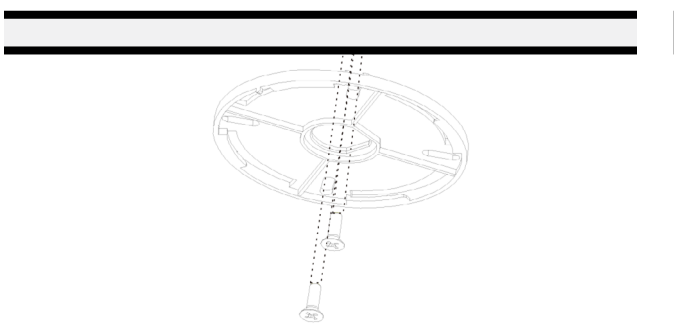

4 Install NLCBCS107C1 onto the ceiling plate.

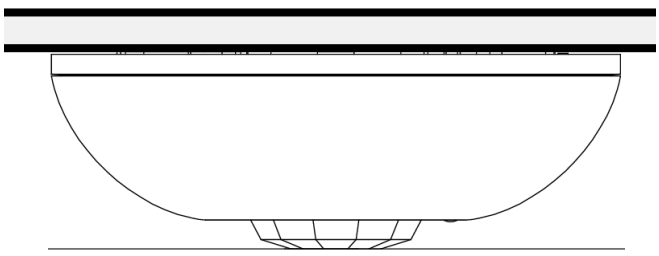

5 Short press: Calibrate daylight harvesting sensor
Long press: Press and hold the button for 3 seconds to set the NLCBCS107C1 to pairing mode. The indicator will flash blue quickly and you may pair it with app within 30 seconds.



6 Turn power **ON** and follow the Nicor NLC commissioning guide.

GET IT ON Google Play

Download on the App Store

RESTORING FACTORY SETTING INSTRUCTIONS

There are multiple options for restoring a device back to factory settings.

- If a device is currently assigned to an NLC zone, removing the device from the zone will automatically restore the device to factory settings.
- Some NLC devices include a physical reset button. Press and hold the button for 5 seconds to perform a factory reset.
- Factory settings can also be restored for multiple devices simultaneously by cycling power at the breaker multiple times. This process will restore factory settings for all NLC devices connected to the selected breaker.

  Follow the steps below:
  1. Turn off power at breaker and make sure the lights are off.
  2. Turn on power for 8 seconds; then turn the power off for 10 seconds.
  3. Immediately turn the power on and off, then wait for another 10 seconds. Repeat 3 times.
  4. Turn the power on for 8 seconds, then turn the power off for another 10 seconds. Repeat 2 times.
  5. Turn the power back on. Blinking lights indicate a successful factory reset. All previous settings made in the app will be deleted.

  Note: Waiting for at least 10 seconds will ensure that the fixture is completely powered off.
  The duration will vary depending on the driver and the power supply. If the driver can cut power to the fixture within 3 seconds, then you may change the waiting period from 10 to 3 seconds to facilitate a faster reset time.

LIMITED WARRANTY AND DISCLAIMERS OF WARRANTIES

Subject to the exclusions contained below, NICOR LLC. (NICOR) warrants that the Network Lighting Controls (NLC) made by NICOR to be free from defects in materials and workmanship, under normal consumer usage for a period of five (5) years from date of purchase. This limited warranty is a consumer's exclusive remedy, and applies only to new products purchased and used by consumers in the United States or Canada, which are accompanied by this written warranty.

This limited warranty extends only to first consumer purchaser, and is not transferable. A consumer wishing to invoke the terms of this warranty must first obtain an RGA number within 30 days of discovery of the defect, and return the product to NICOR for inspection. Once verified to be covered by this limited warranty, NICOR will, at its discretion, repair, replace or refund the purchase price of any product that does not conform to this limited warranty.

This limited warranty covers only defects in material and workmanship associated with normal installation and intended use of the product.

THIS LIMITED WARRANTY DOES NOT COVER THE FOLLOWING:

Normal wear and tear
Defects or damages resulting from improper installation, operation, storage, misuse or abuse, accident, or neglect;
Defects or damages resulting from improper service, testing, adjustment, installation, maintenance, alteration, connection to out-of specification electrical service, corrosive or damp environments, or connection to incompatible equipment or devices (e.g., connecting non-dimmable lighting products to dimmers);
Damage which occurs in transit;
Power surges or overheating due to external conditions;
Acts of nature including but not limited to lightning strikes

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL NICOR BE LIABLE, WHETHER IN CONTRACT OR IN TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCT TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.