Important safety

Please read carefully

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/ instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the appliance away from other heat emitting appliances.
- Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- Do not expose the appliance to rain.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance if it has been dropped or if there are visible signs of damage.
- Do not use the appliance for anything other than its intended use.
- Do not use any parts/accessories other than the parts supplied with this appliance, as this may cause damage.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not use this appliance if any of the openings are blocked.
- Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.
- Do not use this appliance to pick up hard, sharp objects, such as glass or nails etc.
- Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.
- Take care when equipping accessories with rotating parts, as this could cause entrapment.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.

EN | Disposal of Waste Batteries and Electrical and Electronic Equipment



This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK**.
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI**.

MADE IN CHINA.

CD151124/MD000000/V1

Problem	Possible cause	Solution
The suction is poor.	The air inlet or attachment is blocked.	Disconnect the attachment and clear any blockage.
	The dust container is almost full.	Empty the dust container following the instructions in the section entitled '**Emptying the dust container**'.
	The HEPA filter is blocked.	Clean the filter following the instructions in the section entitled '**Cleaning the HEPA filter and filter cone**'.
	The battery is running out of charge.	Recharge the vacuum cleaner following the instructions in the section entitled '**Charging the cordless vacuum**'.
The vacuum cleaner has stopped working.	The battery has run out of charge.	Recharge the vacuum cleaner following the instructions in the section entitled '**Charging the cordless vacuum**'.

Specifications


Product code: BEL01096
Battery: 11.1 V DC 2200 mAh Li-ion (included)
Adaptor input: 100–240 V ~ 50/60 Hz 0.3 A
Adaptor output: 14 V ⎓ 0.5 A 7.0 W
Average active efficiency: 82.03%
Efficiency at low load (10%): 73.50%
No load power consumption: 0.1 W
Dust container capacity: 100 ml

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK**.
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI**.

MADE IN CHINA.
©Beldray trademark. All rights reserved.
CD200720/MD100425/V6

User manual

Cordless vacuum

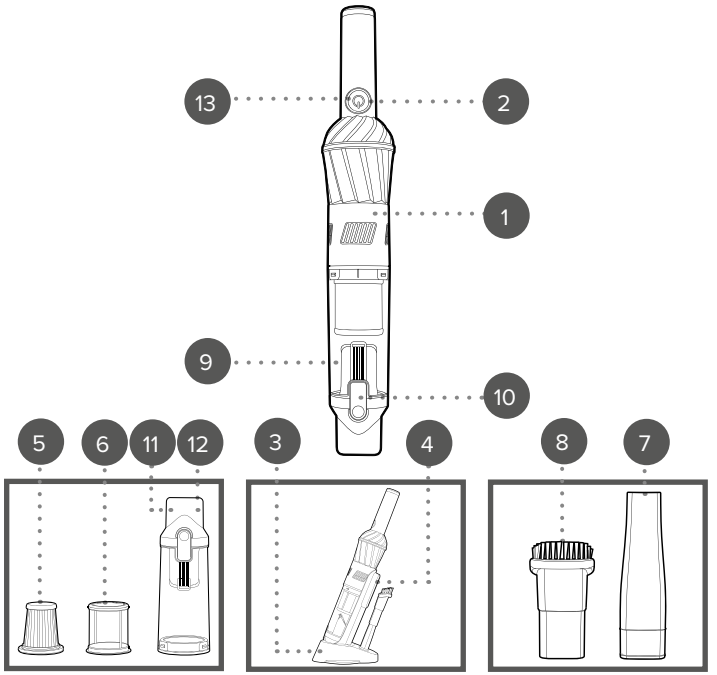

1. Cordless vacuum main unit
2. Power button
3. Charging base
4. Charging port
5. HEPA filter
6. Filter cone
7. Crevice tool
8. Brush tool
9. Dust container
10. Dust container release button
11. Suction nozzle
12. Air inlet
13. Indicator light

To register for your extended guarantee, scan the QR code or visit **guarantee.upplc.com/beldray** and register your product within 30 days of purchase.
For any further queries, visit **www.beldray.com**.

beldray®
Est.1872

Please retain instructions for future reference.

BATTERY SAFETY

- The supply terminals are not to be short-circuited.
- In the event of a battery pack leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.
- Do not leave a battery pack on prolonged charge when not in use.
- Do not use any charger other than that specifically provided for use with the product.
- Do not use any cell or battery which is not designed for use with the product.
- Keep batteries out of the reach of children.
- Do not crush, puncture, dismantle or otherwise the battery pack.
- Do not store above 60 °C.
- Avoid storage in direct sunlight.
- Do not expose the battery pack to heat or fire as it may explode.
- Do not subject the battery pack to mechanical shock.
- To dispose of the exhausted battery pack, take it to a local recycling station. Contact the local government offices for further details.
- This appliance is fitted with a non-removable 11.1 V 2200 mAh Li-ion battery pack.

Dos and don'ts

DO:
Check that the HEPA filter is kept clear of obstruction.
Make sure that the dust container and HEPA filter are cleaned regularly to preserve suction and prolong the life of the vacuum cleaner.
DON'T:
Use the vacuum cleaner without the HEPA filter or dust container in position.

Care and maintenance

Always unplug the vacuum cleaner from the mains power supply before attempting any cleaning or maintenance.
Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.
Do not use any detergents or harsh cleaning agents to clean any part of the vacuum cleaner.
Keep the HEPA filter clean after every removal of the dust container.

Instructions for use

Before first use

Before connecting to the mains power supply, clean the vacuum cleaner following the instructions in the section entitled '**Care and maintenance**'.

Charging the cordless vacuum

Before first use, the vacuum cleaner must be charged for approx. 4–5 hours. Subsequent charging times will vary dependent on use. If the vacuum cleaner battery becomes drained completely during use, it may take up to 4–5 hours to fully recharge.
STEP 1: Check that the vacuum cleaner is switched off.
STEP 2: The charging base comes disassembled. Fit the two parts together, aligning the charging port on one piece with the end of the mains power adaptor on the other. Push together until they click into place. Secure the vacuum cleaner into position in the charging base.
STEP 3: Plug the mains power adaptor into the mains power supply; the indicator light will turn red during charging. Once the battery is fully charged, the indicator light will turn blue.

NOTE: Whilst charging, the vacuum cleaner main unit may become warm. Always make sure that the mains power adaptor is unplugged from the mains power supply once the battery is fully charged.

WARNING: Do not use any mains power adaptor other than that supplied. Using an alternative will increase the risk of damage to the appliance or injury to the user.

Using the cordless vacuum

The crevice tool is ideal for cleaning radiators, corners, recesses and other hard-to-reach areas. The brush tool is useful for removing dust and dirt from shelves, cupboards and windowsills.
STEP 1: Check that the vacuum cleaner is switched off and remove it from the charging base.
STEP 2: If required, fit the selected attachment by firmly inserting it into the air inlet.
STEP 3: Turn on the vacuum cleaner by pressing the power button.

NOTE: The indicator light will flash when the battery is running low and needs to be charged.

WARNING: Do not use the vacuum cleaner without the HEPA filter, filter cone and dust container in position.

Emptying the dust container

To maintain optimum performance, the dust container must be emptied regularly. If there is a reduction in suction power, empty the dust container.
STEP 1: Hold the vacuum cleaner with the dust container facing upwards. Press the dust container release button and carefully remove the dust container cover from the dust container.
STEP 2: Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere. If necessary, clean the individual parts with a soft, damp cloth and dry thoroughly.
STEP 3: Refit the suction nozzle by aligning it with the vacuum cleaner main unit and pushing into place until it clicks.

NOTE: It is recommended that the dust container is emptied outdoors.

Cleaning the HEPA filter and filter cone

The HEPA filter can only be accessed when the dust container is removed.
STEP 1: After emptying the dust container following the instructions in the section entitled '**Emptying the dust container**', remove the dust container from the main unit by rotating clockwise until the arrows align to the unlocked position.
STEP 2: Remove the HEPA filter and filter cone by pulling them out of the dust container.
STEP 3: Shake the HEPA filter until the majority of the dust has been removed, then rinse the filter and filter cone under clean, warm water and allow to dry naturally.
STEP 4: Once both are fully dry, place the HEPA filter back into the filter cone and insert into the dust container.
STEP 5: Insert the dust container into the main unit, align arrow to unlock symbol and rotate anticlockwise until the arrows align into the locked position.

NOTE: The HEPA filter and filter cone should be thoroughly cleaned at least once every two weeks. Do not clean the HEPA filter using detergent or use external heat sources, such as a radiator to dry it. For further cleaning instructions, please see the online instruction manual.

WARNING: Do not reassemble or use the vacuum cleaner until the HEPA filter and filter cone have fully dried, as this could cause damage.

Storage

The vacuum cleaner must be cool, clean and dry before storing in a cool, dry place.
Store the mains power adaptor separately, checking that it is not bent at the connections, as this could cause damage to the wires.

Troubleshooting

Problem	Possible cause	Solution
The vacuum cleaner will not charge.	The mains power adaptor is not securely connected.	Secure the vacuum cleaner into the charging base and then switch it on at the mains power supply.
	The vacuum cleaner isn't fully inserted into the charging base.	Check that the vacuum cleaner is fully secured into the charging base.