Important safety

Please read carefully

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/ instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the appliance away from other heat emitting appliances.
- Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- Do not expose the appliance to rain.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance if it has been dropped or if there are visible signs of damage.
- Do not use the appliance for anything other than its intended use.
- Do not use any parts/accessories other than the parts supplied with this appliance, as this may cause damage.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not use this appliance if any of the openings are blocked.
- Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.
- Do not use this appliance to pick up hard, sharp objects, such as glass or nails etc.
- Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.
- Take care when equipping accessories with rotating parts, as this could cause entrapment.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.

EN | Disposal of Waste Batteries and Electrical and Electronic Equipment



This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK**.
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI**.

MADE IN CHINA.

CD151124/MD000000/V1

WARNING: Hold onto the plug to guide the power supply cord back into the vacuum cleaner. Failure to do so may cause damage to the vacuum cleaner or injury.

Troubleshooting

Problem	Possible cause	Solution
The suction is poor.	The telescopic extension tube, floor brush, 2 in 1 brush and crevice tool or air inlet is blocked.	Disconnect the attachment and clear the blockage.
	The dust container is almost full.	Empty the dust container following the instructions in the section entitled '**Emptying the dust container**'.
	The filters are blocked.	Clean the filters following the instructions in the section entitled '**Cleaning the dust container and washable filter**' and '**Cleaning the exhaust filter**'.
The vacuum cleaner has cut-out or stopped working.	The thermal cut-out device has activated due to restricted air flow, and has cut power to the motor to protect the vacuum cleaner.	Turn off and disconnect the vacuum cleaner from the mains power supply. Empty the dust container and clean the filters. Allow the vacuum cleaner to cool for 1 hour.

Specifications

Product code: BEL0371
Rated voltage: 220–240 V ~ 50–60 Hz
Rated wattage: 700 W

User manual

Vacuum cleaner

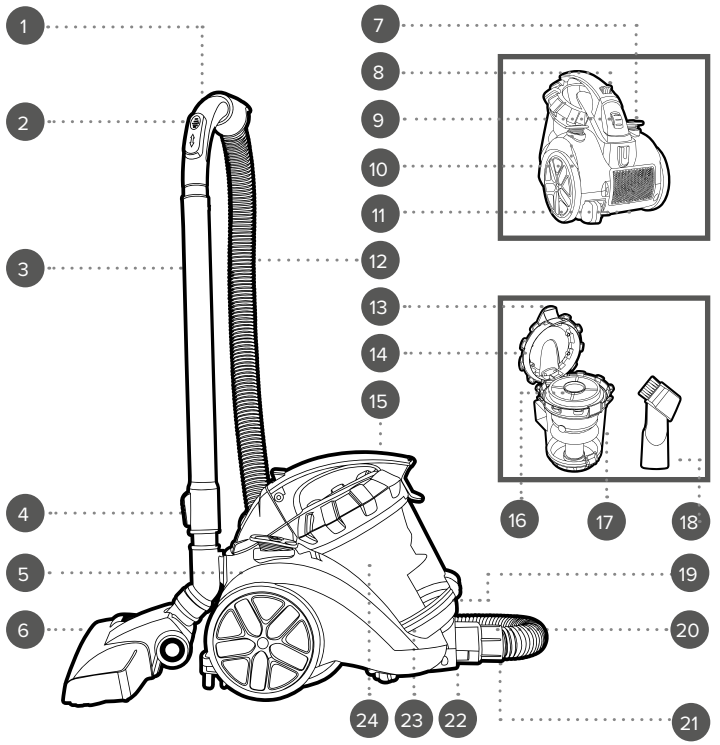

1. Suction hose neck
2. Air valve
3. Telescopic extension tube
4. Telescopic extension tube button
5. Vacuum cleaner main unit
6. Floor brush
7. Power button
8. Dust container release button
9. Variable speed dial
10. Cord rewind button
11. Exhaust filter cover
12. Suction hose
13. Dust container lid release catch
14. Dust container lid
15. Handle
16. Washable filter
17. Dust container
18. 2 in 1 crevice and brush tool
19. Dust container base release switch
20. Suction hose lock
21. Locking tabs
22. Air inlet
23. Dust container base
24. Multicyclonic cone

To register for your extended guarantee, scan the QR code or visit **guarantee.upplc.com/beldray** and register your product within 30 days of purchase.
For any further queries, visit **www.beldray.com**.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK**.
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI**.

MADE IN CHINA.
©Beldray trademark. All rights reserved.
CD140717/MD090425/V6

beldray®
Est.1872

Please retain instructions for future reference.

Thermal cut-out device

If the dust container and filters are not cleaned on a regular basis, the vacuum cleaner may overheat, which will cause the thermal cut-out device to activate due to restricted flow of air around the unit.
If the vacuum cleaner cuts out, press the power button to turn it off and unplug it from the mains power supply. Proceed to empty the dust container, clean all of the filters and allow the vacuum cleaner to cool for approx. 1 hour.

Care and maintenance

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.
Do not use any harsh or abrasive detergents or cleaning agents to clean any part of the vacuum cleaner.
The filters must be kept clean and should be cleaned after every removal of the dust container.
It is possible to remove the cyclonic cone to clean the inside of the dust container.

Instructions for use

Before first use

Before connecting to the mains power supply, clean the vacuum cleaner following the instructions in the section entitled '**Care and maintenance**'.

Assembling the vacuum cleaner

Switch off and unplug the vacuum cleaner from the mains power supply before fitting any accessories onto the air inlet.
STEP 1: Fit the dust container by pushing it onto the base of the vacuum cleaner main unit, aligning the indent on the base of the dust container with the knob on the unit.
STEP 2: To fit the suction hose to the air inlet, insert the suction hose lock into the air inlet.
To remove the suction hose, simultaneously push both locking tabs and pull firmly away from the air inlet.

Using the telescopic extension tube

The floor brush and attachments fit onto the telescopic extension tube to help to reach into confined spaces, such as behind radiators or underneath car seats.
STEP 1: Fit the telescopic extension tube by pushing the large opening of the telescopic extension tube over the end of the suction hose neck (1).
STEP 2: Push the chosen attachment onto the end of the telescopic extension tube (2).
STEP 3: Adjust the telescopic extension tube to the required length by pressing the telescopic extension tube button down and sliding the inner tube in or out.
STEP 4: Release the telescopic extension tube button to lock the telescopic extension tube into position at the selected length.

Using the floor brush

STEP 1: Push the floor brush onto the end of the telescopic extension tube or the suction hose neck if the telescopic extension tube is not being used.
STEP 2: Select which position on the floor brush is required for the floor type by pressing the switch forwards or backwards. Switching it forwards lifts the brushes, ideal for use on carpets. Switching it backwards lowers the brushes for cleaning hard floors.
STEP 3: Carefully pull out the power supply cord until it is at a suitable length; do not exceed the red mark. Plug it into the mains power supply.
STEP 4: Turn on the vacuum cleaner by pressing the power button.
STEP 5: Rotate the variable speed dial to alter the suction speed; rotating it in an upwards direction increases the amount of suction, whereas rotating it a downwards direction decreases the amount of suction.



NOTE: Open the air valve on the suction hose neck when vacuuming carpets. A lower speed setting is ideal for cleaning delicate materials such as curtains. The medium speed setting is perfect for upholstered furniture, carpets, mattresses. High speed settings should only be used for hard floors.

Using the 2 in 1 brush and crevice tool

The crevice tool is ideal for removing dust and dirt from folds in fabrics, radiators, corners, recesses and other places that are hard to reach.
The brush tool is perfect for cleaning shelves, cupboards and windowsills.
STEP 1: Push the 2 in 1 brush and crevice tool onto the end of the telescopic extension tube or the suction hose neck if the telescopic extension tube is not being used.
STEP 2: Select which attachment is to be used by rotating the head to either the crevice or brush setting.
STEP 3: Turn on the vacuum cleaner by pressing the power button.
STEP 4: Rotate the variable speed dial to alter the suction speed; rotating it in a clockwise direction increases the amount of suction, whereas rotating it an anticlockwise direction decreases the amount of suction.



NOTE: Do not use the suction hose neck without an accessory attached.

Emptying the dust container

Before emptying the dust container, switch off and unplug the vacuum cleaner from the mains power supply. It is recommended to empty the dust container outdoors.
STEP 1: Whilst securely holding the vacuum cleaner main unit, remove the dust container by pushing the dust container release button and pulling the dust container away from the vacuum cleaner main unit.
STEP 2: Holding the dust container over a bin or refuse bag, press the dust container base release switch to open the dust container base. Empty the dust container slowly and carefully to reduce the amount of dirt released back into the atmosphere. Shake the dust container gently to dislodge any stubborn debris.
STEP 3: To close the dust container, push the dust container base closed until the dust container release switch clicks into place.
STEP 4: Replace the dust container by pushing it onto the vacuum cleaner main unit, aligning the bottom of the dust container with the tab on the vacuum cleaner main unit.



WARNING: Do not use the vacuum cleaner if the dust container is filled past the max. fill mark, as this could damage the vacuum cleaner or cause injury to the user.

Cleaning the dust container and washable filter

The washable filter can only be accessed when the dust container has been removed.
STEP 1: Empty the dust container following the instructions in the section entitled '**Emptying the dust container**'.
STEP 2: Once the dust container is empty, shut the dust container and rotate the dust container lid in an anticlockwise direction. Lift up the dust container lid to remove the cyclonic cone.
STEP 3: Open the cyclonic cone using the dust container lid release catch and remove the filters from the cyclonic cone.
STEP 4: Hold the filters over a waste bin, preferably outdoors and gently shake off any dust and debris. Once the majority of the dust and dirt has been removed, clean off any residue by rinsing the filters under cold water. Allow to dry thoroughly.
STEP 5: Wash the dust container and cyclonic cone in clean, warm water and allow to dry thoroughly.
STEP 6: Once all of the parts have dried fully, refit the filters back into place and close the dust container lid. Refit the cyclonic cone into the dust container.



NOTE: If the dust container, multicyclonic cone and filters are not cleaned regularly, the thermal cut-out device will activate. For further details, see the section entitled '**Thermal cut-out device**'.



WARNING: Do not clean the filters using detergent. Always allow the filters to air dry; never use external heat sources, such as a radiator to dry them. Do not wring or twist the filters as this will cause damage; gently squeeze them.

Cleaning the exhaust filter

STEP 1: To remove the exhaust filter for cleaning, unlock the clip at the side of the exhaust filter housing.
STEP 2: Remove the exhaust filter and exhaust filter housing from the vacuum cleaner main unit.
STEP 3: Shake off the exhaust filter until the majority of the dust has been removed, then wash under clean, warm water and allow to dry thoroughly.
STEP 4: Once the exhaust filter has dried fully, slot it back into the exhaust filter housing and back into the vacuum cleaner main unit.
The dust container and filters need to be emptied and cleaned regularly to preserve suction, prevent overheating and prolong the life of the vacuum cleaner.

Storage

Check that the vacuum cleaner is cool, clean and dry before storing in a cool, dry place.
The vacuum cleaner can be stored compactly by clipping the telescopic extension tube to the back of the vacuum cleaner. This will keep the floor brush horizontal and the vacuum cleaner main unit stable.
STEP 1: Switch off and unplug the vacuum cleaner from the mains power supply.
STEP 2: Press and hold the cable rewind button until the power supply cord has completely wound back into the cable drum.