
IQ RECESSED DW QUICK INSTALL GUIDE

STEP 1 CHOOSE INSTALLATION LOCATION

IMPORTANT NOTE:
BASED ON DOOR TYPE, YOU MAY CHOOSE TO INSTALL SENSOR IN THE FRAME INSTEAD OF THE DOOR

OPTION 1:
SENSOR AT TOP OF DOOR

OPTION 2:
SENSOR ON SIDE OF DOOR

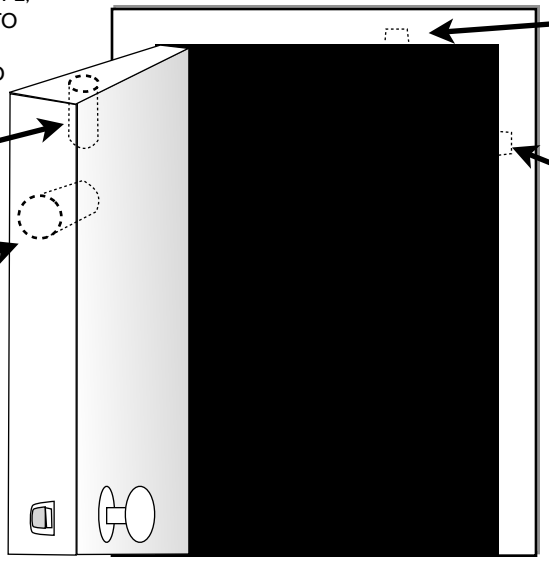

OPTION 1:
MAGNET AT TOP OF DOOR

OPTION 2:
MAGNET AT SIDE OF DOOR



MAGNET SIZE



SPECIFICATIONS

Sensor: 2.25"D x .75"H

Wireless signal range: 600ft (200M), open air.
Code outputs: tamper, tamper restore, alarm, alarm restore, low battery.
Transmitter frequency: 319.5 MHz
Unique code ID
Supervisory keep-alive interval: 70 minutes.
RF Peak field strength: typical 36000 uV/m at 3m

Operating Temperature: -10C~50C
Relative Humidity: 5-95% Non-Condensing
Storage Temperature: -40-80C

Replace battery with exact replacement every 5 years with 3V CR2 (x1).

Improper installation may lead to door damage. Please follow instructions outlined in this guide.

Note: Battery Safety

Observe polarity when inserting replacement batteries to avoid damaging the sensor.
Risk of fire, burns and explosion. Do not recharge, disassemble, burn or expose batteries to temperatures above 100C (212F)
Dispose of used batteries properly and in accordance with all local laws
Keep batteries away from children

This is a quick guide for experienced installers only. Refer to http://dealers.qolsys.com (login required)

STEP 2 LEARN INTO PANEL



Place your panel in "autolearn" mode



Pull battery tab to place device in "learn" mode




Open and close the connection to "tamper" the device



Customize name and settings as desired and and touch "ADD"

STEP 3 DRILL SENSOR HOLE

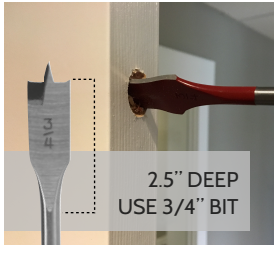




IMPORTANT: THE SENSOR WAS DESIGNED TO FIT SNUGLY IN A 3/4" HOLE. PLEASE TAKE CARE WHEN DRILLING TO ENSURE PROPER FIT

STEP 4 INSTALL SENSOR



STEP 5 DRILL MAGNET HOLE

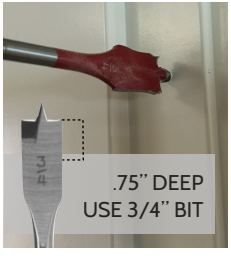



IMPORTANT: BE SURE MAGNET WILL ALIGN WITH SENSOR WHEN DOOR CLOSES

STEP 6 INSTALL MAGNET



CONNECTS USING S ENCRYPTED 319.5 MHz

Document#: IQRDW-SQG-02-17
Revision#: 2/24/17
Issue Date: FEB 2017
Qolsys Product #: QS1134-840

Qolsys Inc. proprietary.
Reproduction without permission is not permitted.
FCC ID: 2ABBZ-RF-RDWS-AAA
IC: 11817A-RFRDWS

GOT QUESTIONS?

CONTACT TECH SUPPORT
TechSupport@Qolsys.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme avec Industrie Canada exempts de licence standard RSS (s). Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris celles pouvant causer un mauvais fonctionnement de l'appareil.