ASSEMBLY AND INSTALLATION INSTRUCTIONS

LK55512

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.

Hardware Package (included): For Ceiling Light


AA	Mounting Strap X1	EE	Mounting Screw X2	II	Green Ground Screw X1	MM	Ground Pad X1
BB	Wire Connector X3	FF	Fixture Mounting Screw X2	JJ	Washer X2	NN	Fixture Ground Wire X1
CC	Hex Nut X2	GG	Lock Nut X2	KK	Threaded Pipe X1	OO	Final X1
DD	Top Cap X1	HH	Canopy X1	LL	Bolt Nut X2	PP	Coupling X1

Hardware Package (included): For Light Kit

QQ	Hex Nut X1	RR	Washer X1	SS	Wood Bead X1

Glass Shade (1 PC)

Candelabra 4W LED Blub (2 PCS)

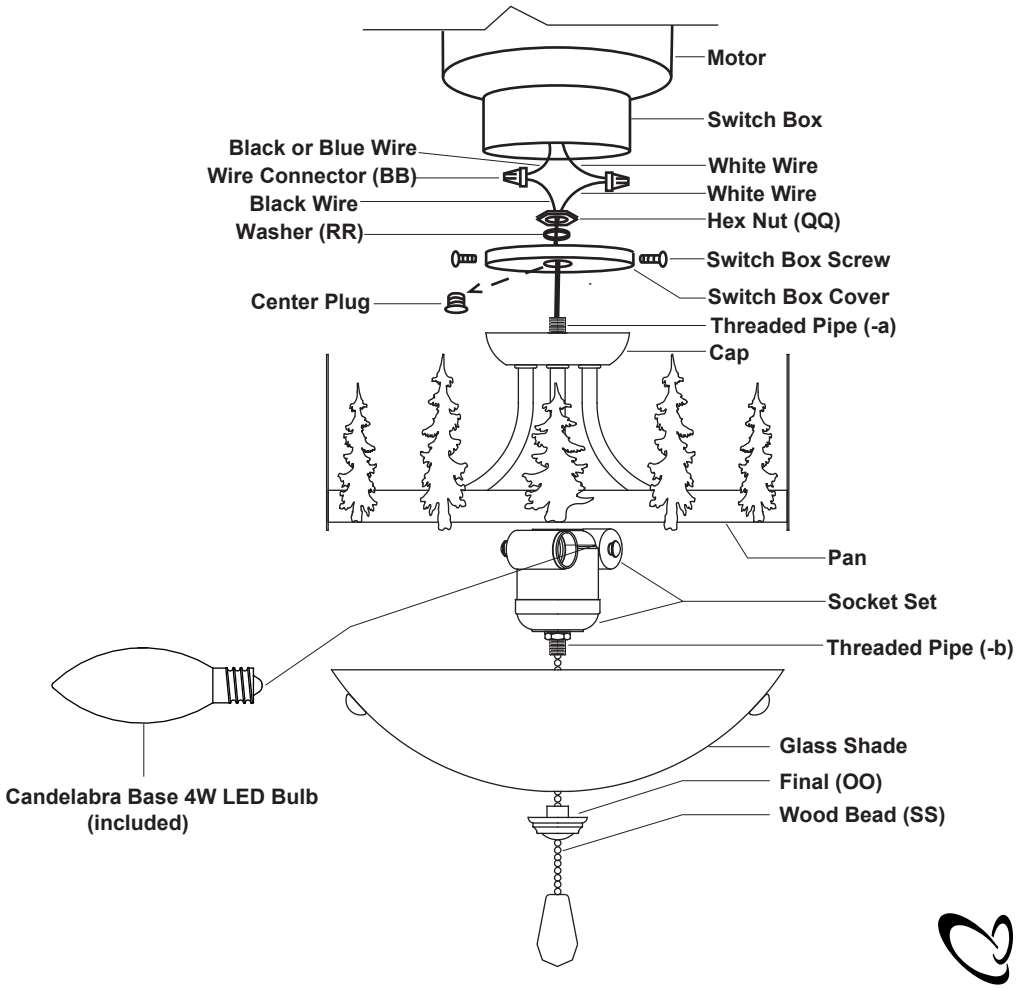

VAXCEL

230323

For Light Kit:
Installation Steps

Turn off the power at fuse or circuit box.


1. Remove the switch box cover from the switch box of the fan by loosing the three switch box screws.
2. Unscrew the center plug from the switch box cover and discard it.
3. Thread the fixture wire through the switch box cover.
4. Attach threaded pipe (-a) of the light kit to the switch box cover, then secure it with a washer (RR) and hex nut (QQ).
5. Cut the redundant wires if necessary. Pull out the wires from the switch box. Make wire connections using the wire connectors (BB):
   ---The black wire from the fixture to the black (or blue) wire from the switch box.
   ---The white wire from the fixture to the white wire from the switch box.
   Carefully put the wires back into the switch box.
6. Attach the switch box cover back to the switch box using the three switch box screws.
7. Install bulbs (included). See relamping label at socket area or packaging for maximum allowed wattage.
8. Thread the pull chain through the glass shade and the finial (OO). Carefully attach the glass shade to the pan by inserting threaded pipe (-b), then secure it with the finial (OO).
9. Turn on the power at the main fuse or circuit breaker box. (You can control the light with the wood bead (SS).)

For Ceiling Light:

Turn off the power at fuse or circuit box.

1. Take out the coupling (PP), two hex nuts (CC), washer (JJ), threaded pipe (-c) (KK), top cap (DD), canopy (HH), washer (JJ) and ground pad (MM) from the hardware package for ceiling light.
2. Secure the coupling (PP) to threaded pipe (-d), then threaded pipe (-c) (KK) into the coupling (PP) and secure it with a washer (JJ) and hex nut (CC).
3. Attach the top cap (DD) with the open side facing downward and the canopy (HH) with the open side facing upward to the fixure by inserting threaded pipe (-c) (KK), then secure them with a washer (JJ), ground pad (MM) and hex nut (CC).
4. Attach two fixture mounting screws (FF) to the mounting strap (AA), then secure them with two lock nuts (GG). Adjust the length of the fixture mounting screws (FF) if necessary.
5. Attach the mounting strap (AA) to the outlet box by using two mounting screws (EE).
6. Pull out the outlet wires and the house ground wire from the outlet box. Make wire connections using the wire connectors (BB):
   ---The black wire from fixture to the black wire from the outlet box.
   ---The white wire from fixture to the white wire from the outlet box.
   ---Attach the fixture ground wire (NN) to the mounting strap (AA) with the green ground screw (II) . Then connect it to the house ground wire with a wire connectors (BB).
   Carefully put the wires back into the outlet box.
7. Attach the canopy (HH) to the mounting strap (AA) by inserting two fixture mounting screws (FF), then secure them with the bolt nuts (LL).
8. Follow steps 7~9 as for Light Kit.

Turn on the power at fuse or circuit box.

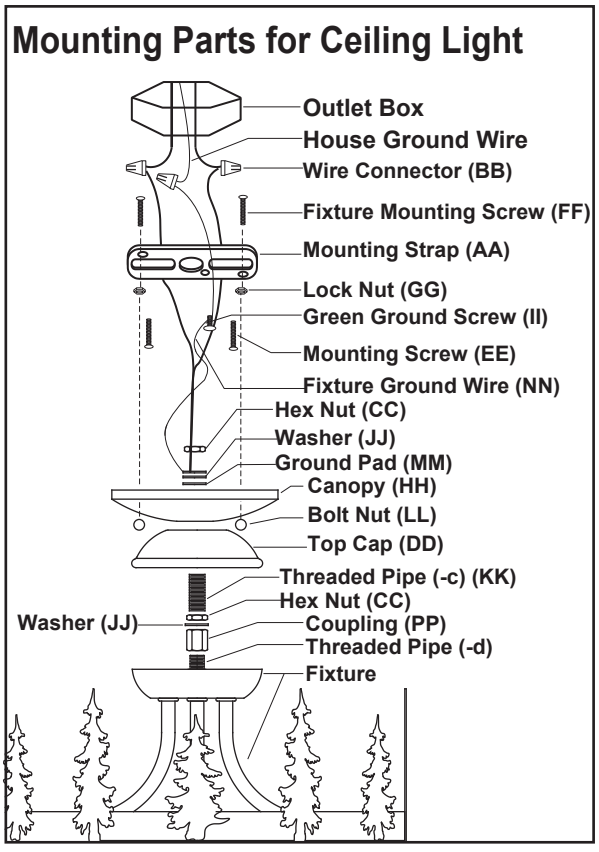

VAXCEL

230323

The following parts are available for re-order if damaged or missing.


Spare Parts List:

AA	Mounting Strap X1	EE	Mounting Screw X2	II	Green Ground Screw X1	MM	Ground Pad X1
BB	Wire Connector X3	FF	Fixture Mounting Screw X2	JJ	Washer X2	NN	Fixture Ground Wire X1
CC	Hex Nut X2	GG	Lock Nut X2	KK	Threaded Pipe X1	OO	Final X1
DD	Top Cap X1	HH	Canopy X1	LL	Bolt Nut X2	PP	Coupling X1

Assembly Kit 6127MM (1 SET)

QQ	Hex Nut X1	RR	Washer X1	SS	Wood Bead X1


Assembly Kit 6126MM (1 SET)

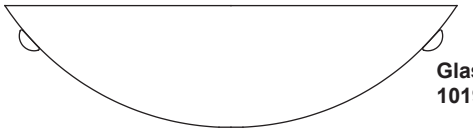

Glass Shade 10197AF



Candelabra 4W LED Blub 8096LD

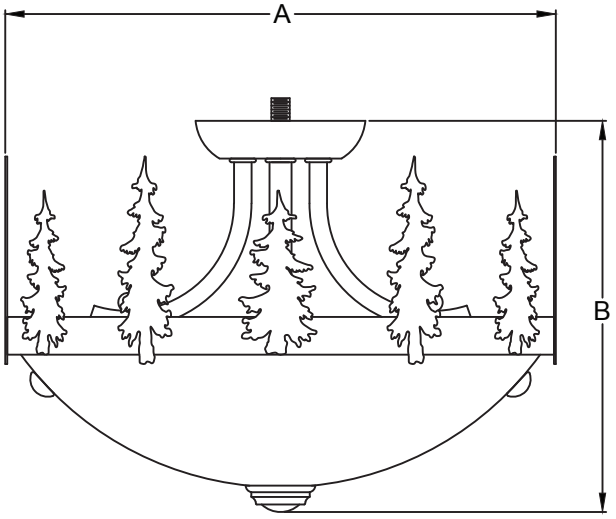

A: 11-3/4"

B: 8-1/4"

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?
info@vaxcel.com
1-800-482-9235

VAXCEL

230323