






BRODIE CHAIR

ASSEMBLY INSTRUCTIONS





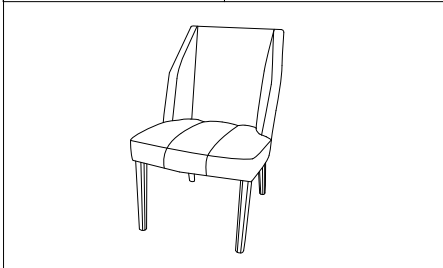


PARTS AND PACKING CONFIGURATIONS


A. CHAIR BACK: 1 PC	B. FRONT LEG: 2 PCS	C. BACK LEFT LEG: 1 PC	D. BACK RIGHT LEG: 1 PC
			




HARDWARE PACKED IN CARTON

No.	DESCRIPTION	PHOTO	QUANTITY
1	ALLEN BOLT ($\frac{3}{8}$ " x 2")		4 PCS
2	ALLEN BOLT ($\frac{3}{8}$ " x 1 $\frac{1}{2}$ ")		4 PCS
3	LOCK WASHER ($\frac{3}{8}$ ")		8 PCS
4	FLAT WASHER ($\frac{3}{8}$ ")		8 PCS
5	ALLEN KEY		1 PC


STEP 1:

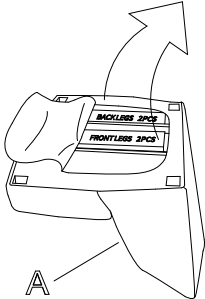


STEP 2:

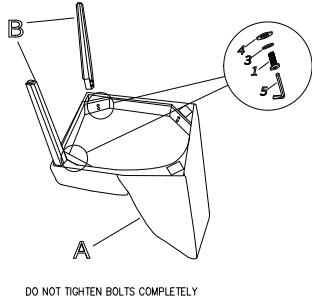

STEP 3:

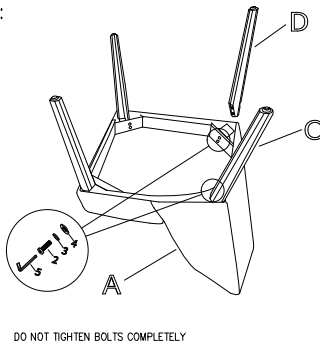

STEP 4:

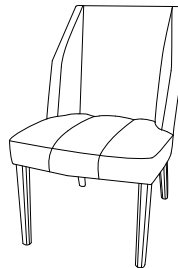

ON A FLAT, LEVEL SURFACE, PLACE THE CHAIR UPRIGHT AND LEVEL. WHEN LEVEL, PLEASE TIGHTEN ALL BOLTS FROM PREVIOUS STEPS WITH ALLEN KEY