


Model 161-OTT2 Fabric Storage Ottoman

Parts Listing

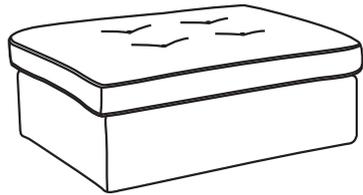

A
Body
1 Unit



B
Wood leg
4 Units



C
M6x18mm Screw
12 Units





D
M6 Allen Key
1 Unit

Assembly Instructions



Tools Needed: Allen Wrench - Provided
Please read all instructions before assembly.

Step 1: Attach wood legs(B) to the body(A) , using twelve M6x18mm Screws(C) first as shown.Tighten with M6 Allen Key(D).

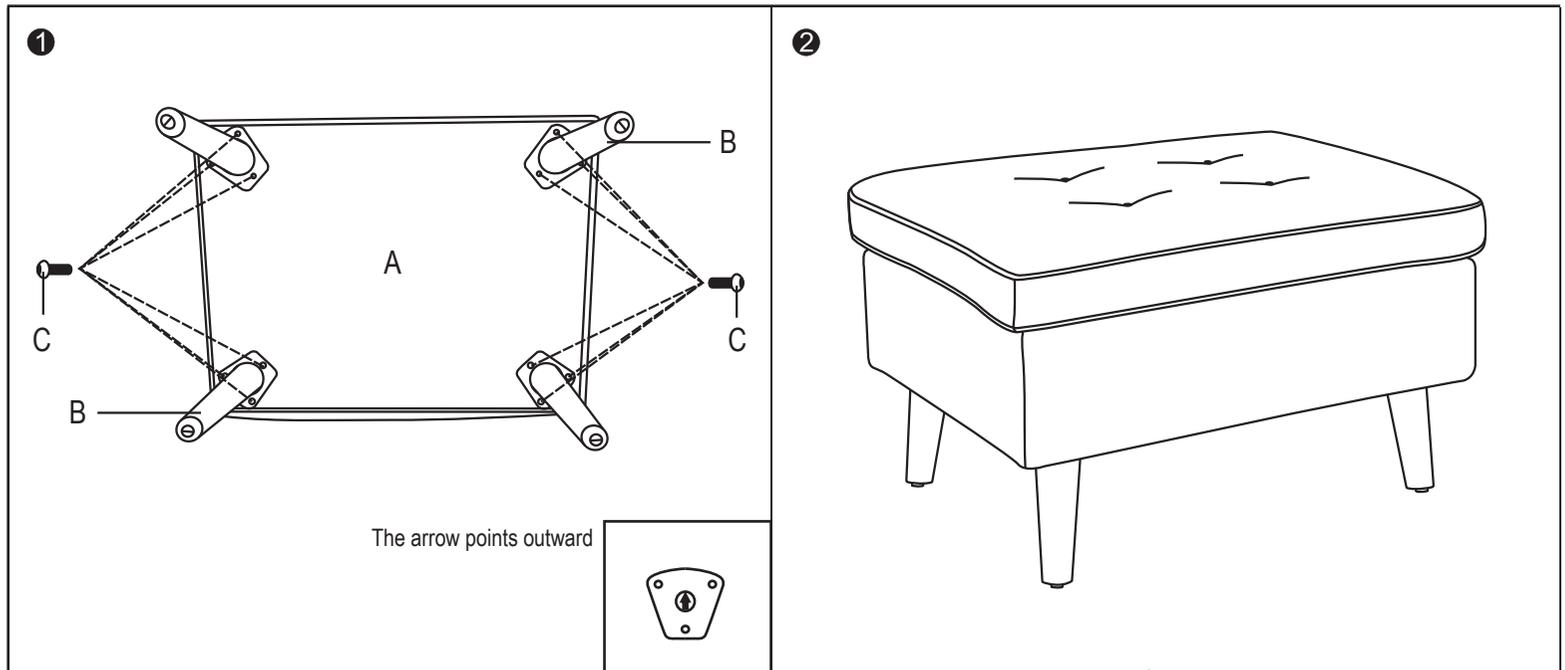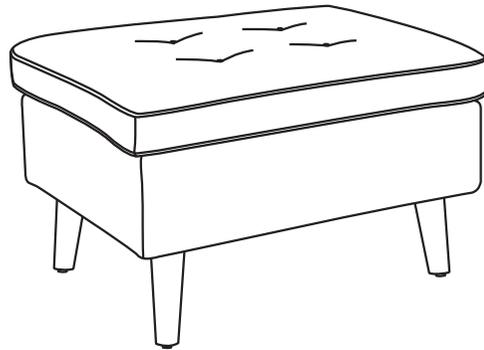

WEIGHT CAPACITY: 225 lbs.

Assembly Notes:

During assembly, hand tighten screw only when all screws are in place, you may then tighten all screws completely.

CAUTION:

1. Do not use this chair as a step ladder.
2. Check for loose screws and tighten them every 6 months.

ofm

161 Tradition Trail Holly Springs, NC, 27540
800-520-7471 (voice) 919-362-4765 (fax)
919-303-6389 (voice) www.ofminc.com
support@ofminc.com