


WWT
WESTINTRENDS
WWT

DESIGNED IN CALIFORNIA

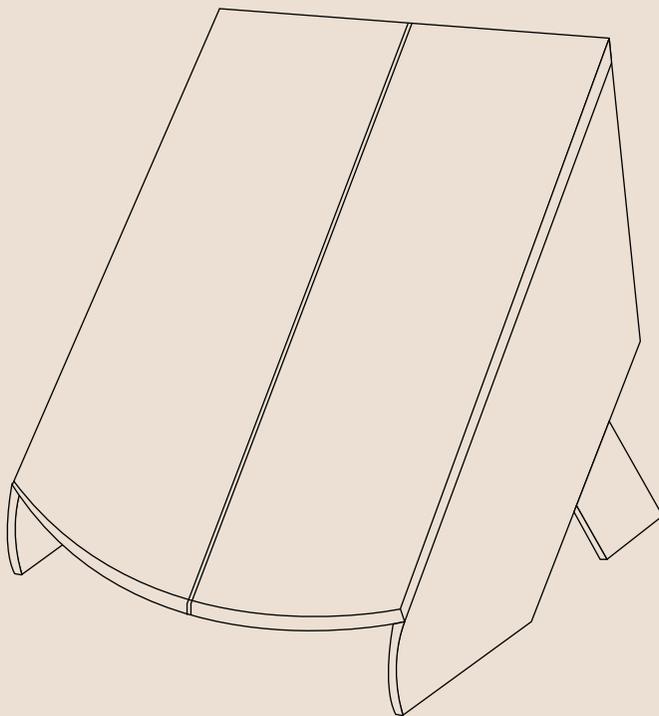

— MODERN POLY OTTOMAN —

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

[*https://westintrends.com/welcome*](https://westintrends.com/welcome)



QUESTIONS OR COMMENTS?

If you have questions reach out to
cs@westintrends.com

FOLLOW, SHARE, & LEARN



PRODUCT REGISTRATION

[*https://westintrends.com/apps/product-registration*](https://westintrends.com/apps/product-registration)



ACCESSIBILITY - COMMUNITY - VALUE - SUSTAINABILITY

! CARE & MAINTENANCE

Please keep this instruction for your future reference.

- Be careful when assembly, avoid hurting the top surface.
- Clean this item with lukewarm water, mild detergent & soft cloth.
- Firmly secure all bolts before use, do not use any part of this item as a step ladder.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Do not overtighten screws. (Insert all screws before tighten screws.)
- Please do not exceed the weight limitations of this item.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



WRENCH
(PROVIDED)



OTTOMAN
180 LBS
CAPACITY



1 PERSON
ASSEMBLY



UP TO 30 MIN.
ASSEMBLY

HARDWARE

1

BOLT
M6 x 45mm



2 PCS

2

SCREW
M6.3 x 50mm



4 PCS

3

M6 NUT



2 PCS

4

M6 WASHER



2 PCS

5

WRENCH



1 PC

6

ALLEN
WRENCH



1 PC

PARTS

A

OTTOMAN TOP



1 PC

B

RIGHT PANEL



1 PC

C

LEFT PANEL



1 PC

D


FRONT LEG



2 PCS

PRODUCT ASSEMBLY - OVERALL VIEW


Look at following overall view of this ottoman and learn the exact position of each parts to be assembled.

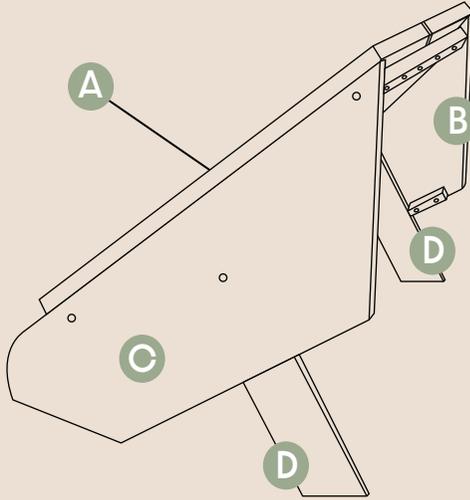

PRODUCT ASSEMBLY

1

Place **Part A Ottoman Top panel** upside down on flat floor.
Attach **Part C Left Panel** to **Part A Ottoman Top** with 2 pcs of **Hardware #2 Screw**.
Pay attention to protect the surface paint.

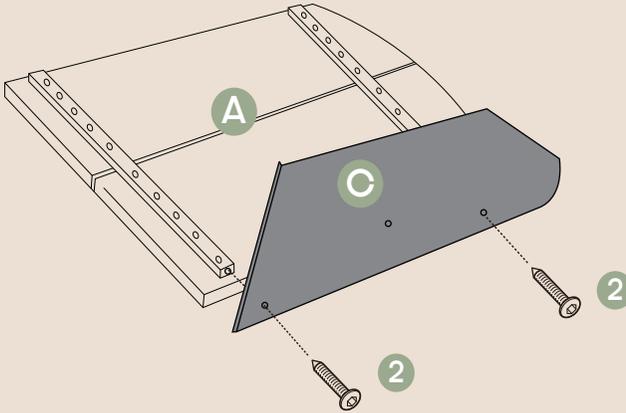


PRODUCT ASSEMBLY

2

Do the same to attach **Part B Right Panel** to **Part A Ottoman Top** with 2 pcs of **Hardware #2 Screw**.


Make sure the position blocks are facing each other.

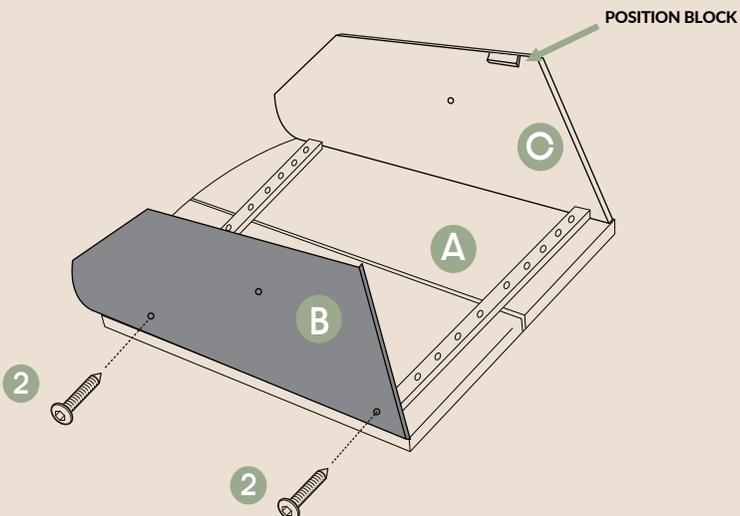

PRODUCT ASSEMBLY

3

Attach 2 pcs of **Part D Front Leg** to **Part B and C Side Panels** with 2 sets of **Hardware #1 Bolt, #4 Washer and #3 Nut**.

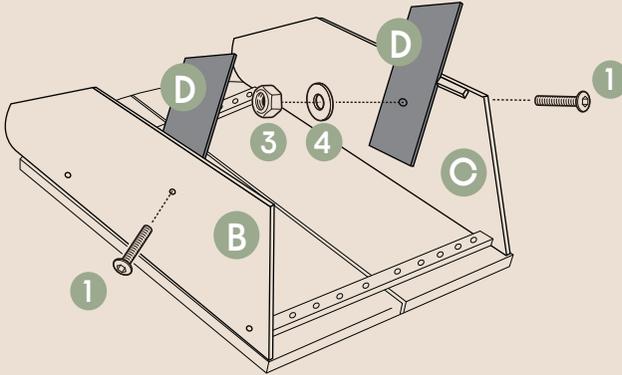



PRODUCT ASSEMBLY

4

Tighten all the screws when the parts are loosely attached.

Enjoy the chair now.

Turn the front legs backward to fold for better storage.

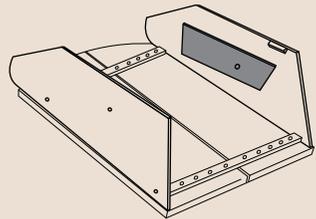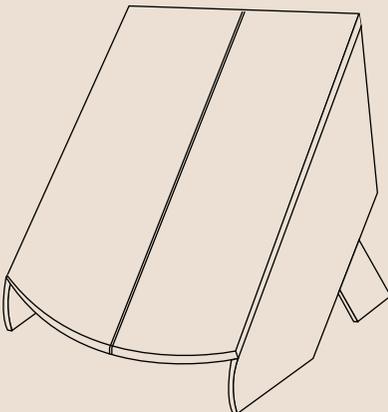

REGISTRATION & REFUND POLICY

<https://westintrends.com/apps/product-registration>



<https://westintrends.com/policies/refund-policy>



HAVING TROUBLE

- **Not sure how to assemble or missing pieces?**

Please contact our Customer Service Team for assistance at cs@westintrends.com

Have Order #, Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning - **DO NOT exceed 1500 PSI** - this will remove any debris and dirt.