

**IMPORTANT**


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

**Part List**


B.  
Side Panel  
1 pc.

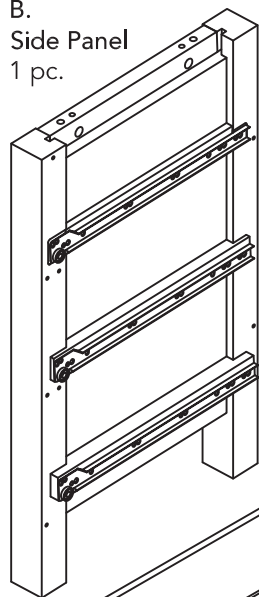


C.  
Side Panel  
1 pc.

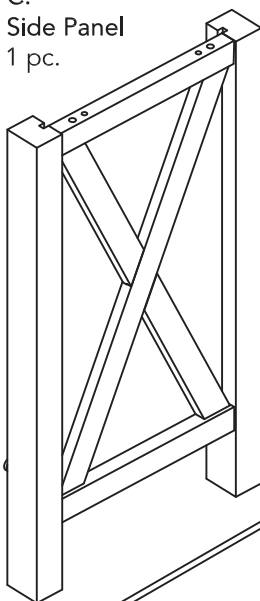


D.  
Middle Panel  
1 pc.

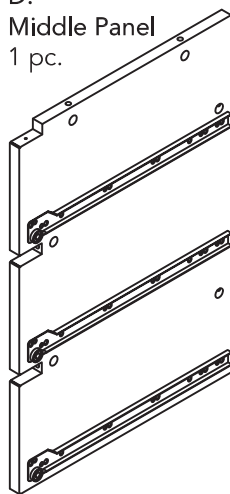


M5.  
Drawer Bottom  
2 pcs.

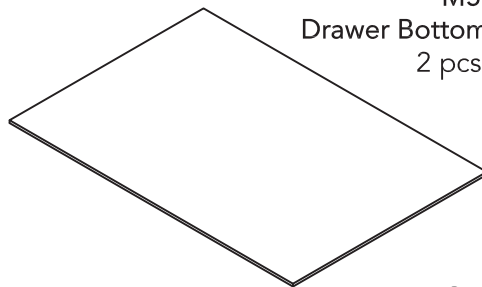


O5.  
Drawer Bottom  
4 pcs.

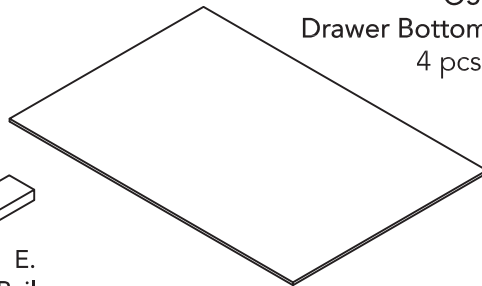


M3.  
Drawer Side  
4 pcs.

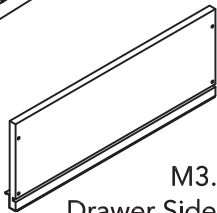

M4.  
Drawer Side  
4 pcs.

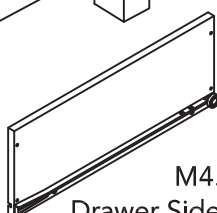


E.  
Middle Rail  
1 pc.

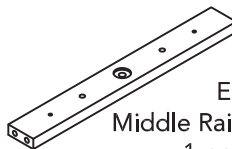

L.  
Center Leg  
1 pc.



M6.  
Support  
6 pcs.

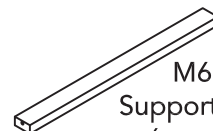**Hardware List**

Cam Lock Screw  
38 pcs. (+4 extra)



Cam Lock  
38 pcs. (+4 extra)



M4x38  
1 1/2" Round Head Screw  
4 pcs. (+1 extra)



M4x25  
1" Round Head Screw  
4 pcs. (+1 extra)




M3x32  
1 1/4" Flat Head Screw  
66 pcs. (+1 extra)



M3x19  
3/4" Flat Head Screw  
36 pcs. (+1 extra)



5/32"x1 1/4"  
Machine Screw  
12 pcs.

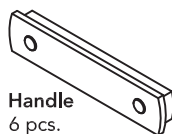

Handle  
6 pcs.



Dowel  
2 pcs. (+1 extra)

**Carton 5185-431 is also needed for assembly.**


Tool(s) required for assembly: Phillips screwdriver, Level, Pencil, Drill (8 volts or less), 3/8" Drill Bit

homestyles Customer Service: [www.homestylesfurniture.com](http://www.homestylesfurniture.com),  
servicedesk@homestylesfurniture.com, 888-680-7460

## Assembly Instructions 2/15


### IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.

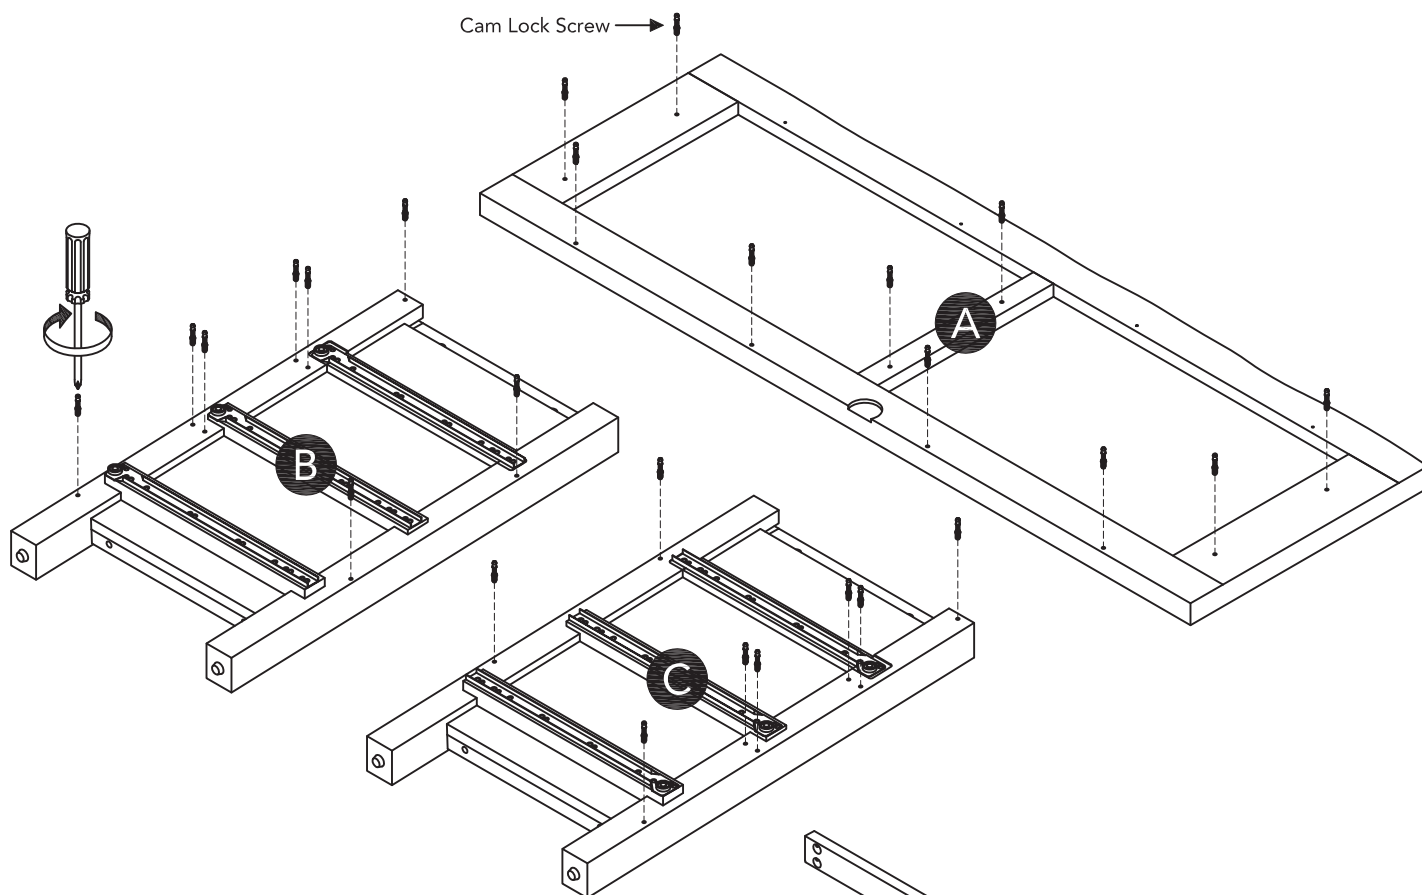

### STEP 1

Insert Cam Lock Screws into pre-drilled holes in Top (A), Side Panels (B), (C), Front rails (G), (H), (I) and Back Panels (J), (K), then tighten.

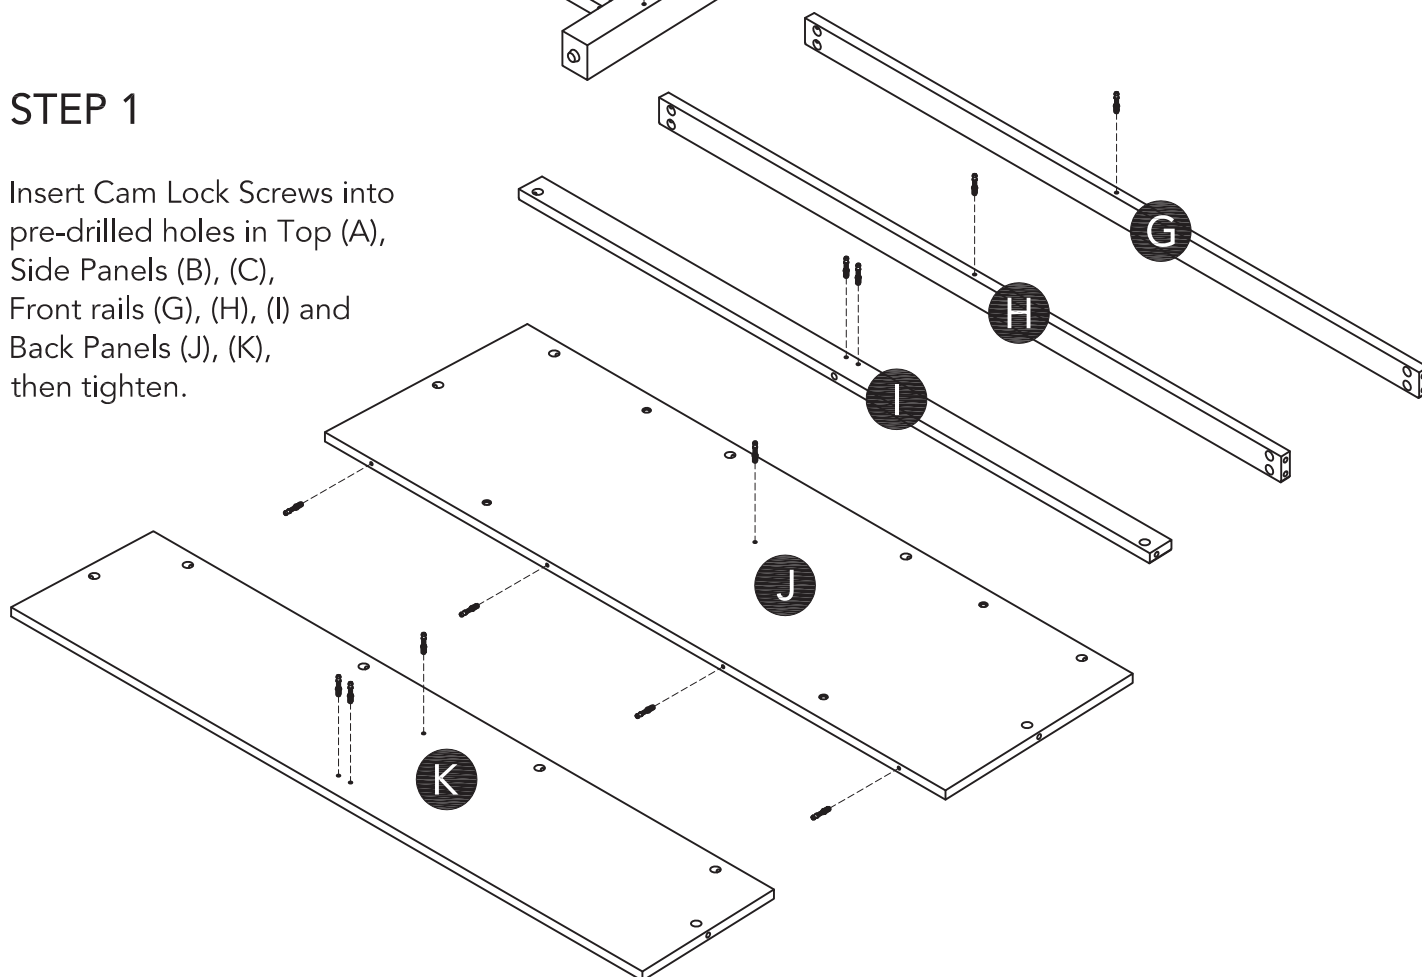

## STEP 2

Attach Back Panel (J) to Back Panel (K) with Cam Locks.  
(See Figure 1)


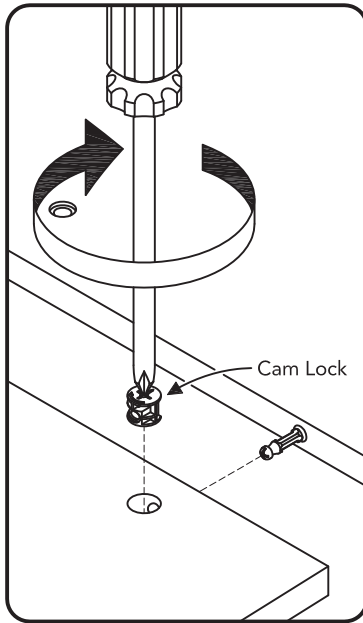




Figure 1

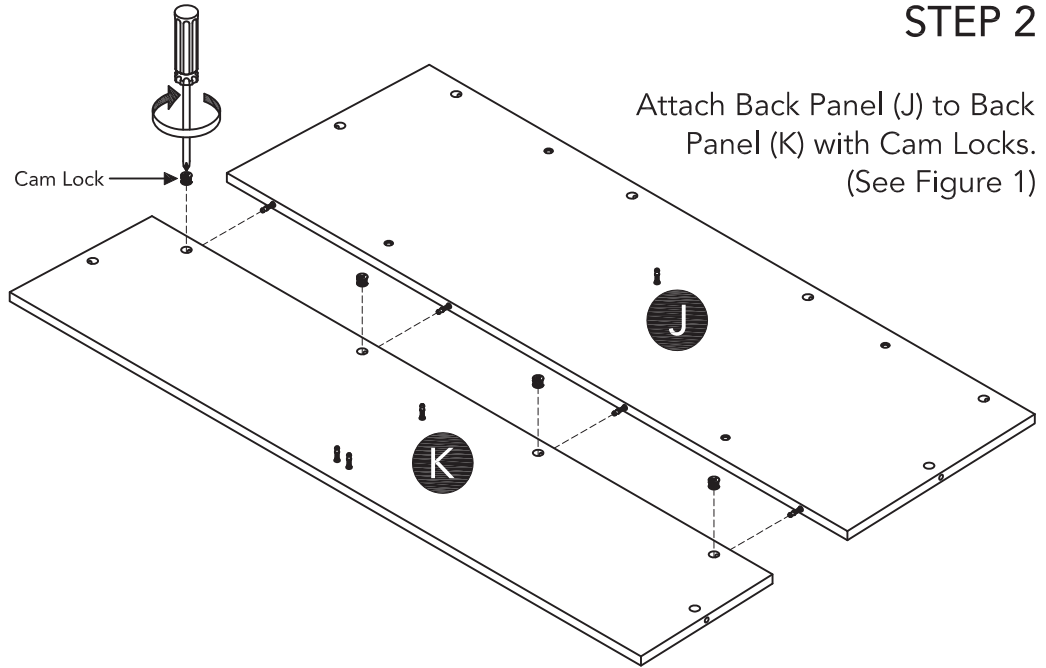

## STEP 3

Attach Middle Rail (E) to Middle Panel (D) with Dowels and 1 1/2" Round Head Screws.

Attach Center Leg (L) to unit, then tighten.

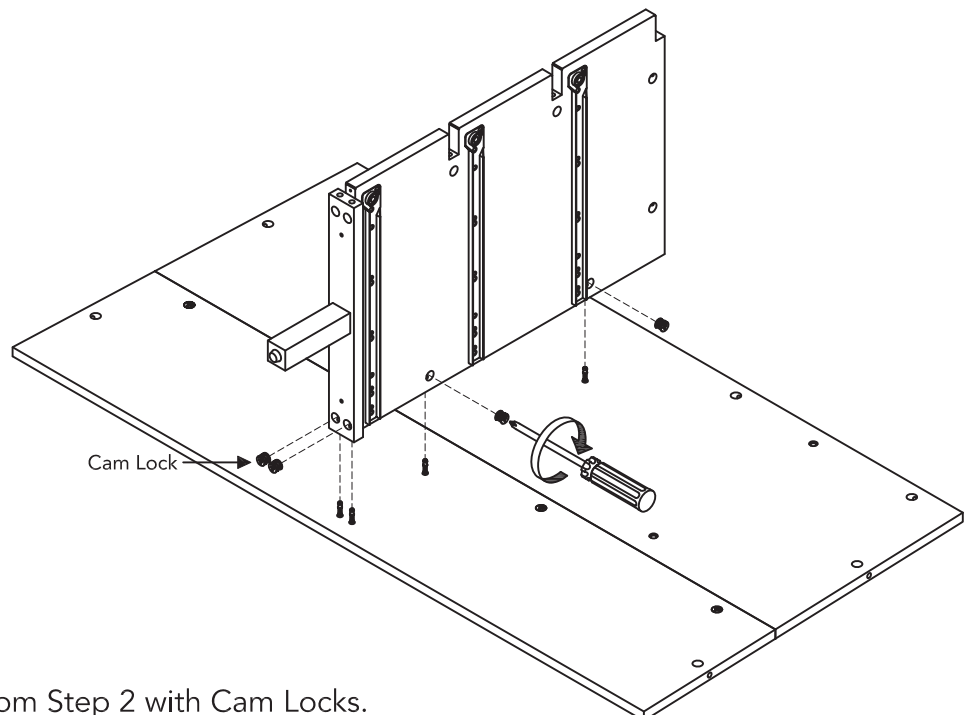
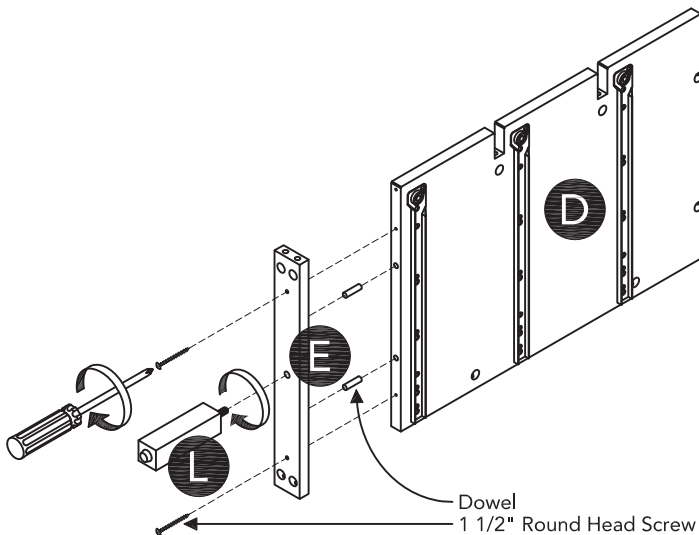


## STEP 4

Attach unit from Step 3 to unit from Step 2 with Cam Locks.

## STEP 5


Attach Front Rails (G), (H) and (I) to unit with Cam Locks.

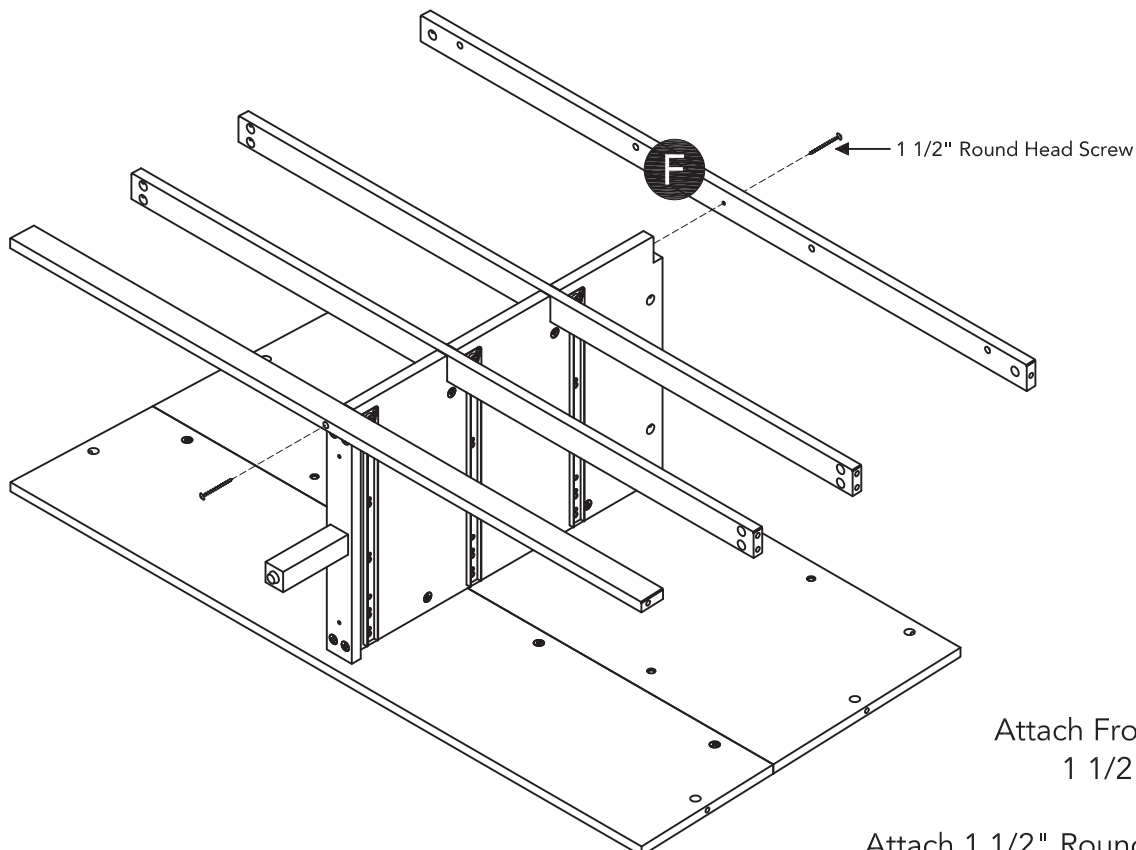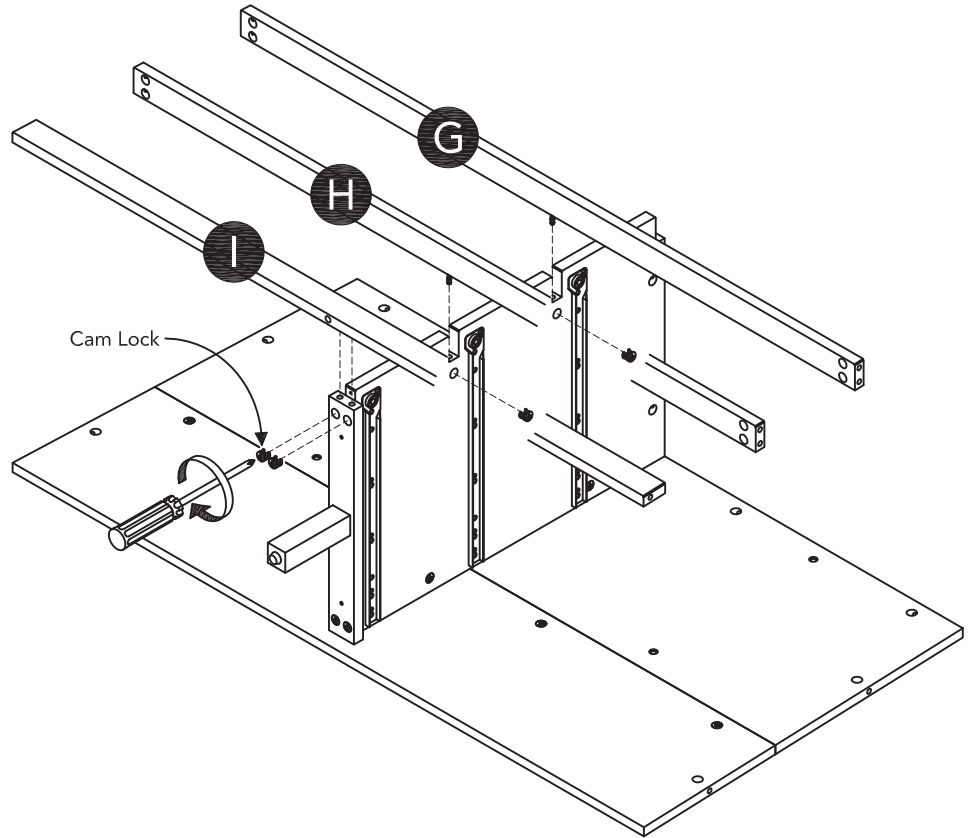

## STEP 6


Attach Front Rail (F) to unit with 1 1/2" Round Head Screw.

Attach 1 1/2" Round Head Screw to unit.

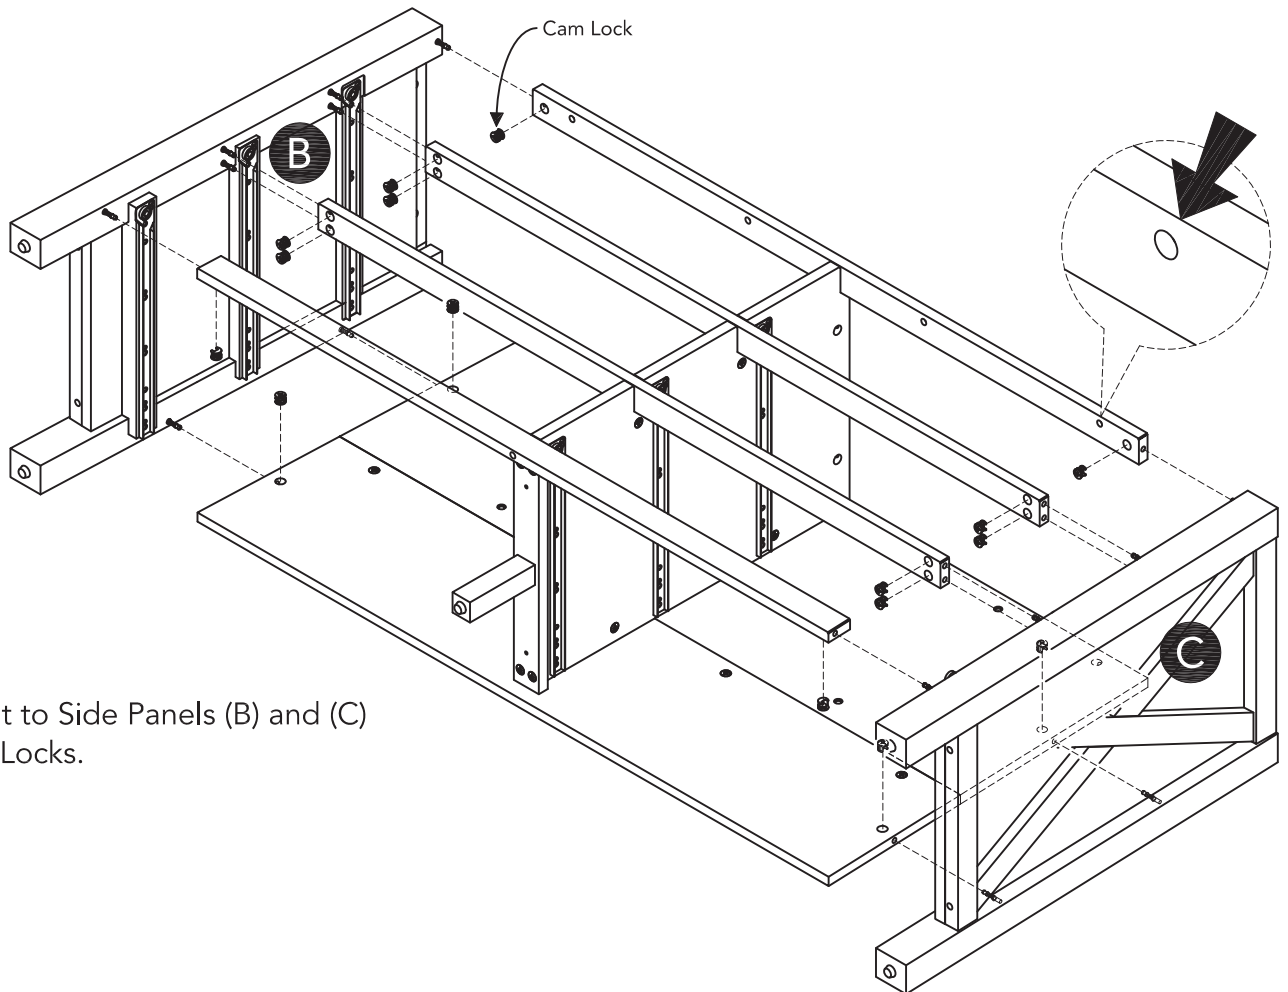

## STEP 7

Attach unit to Side Panels (B) and (C) with Cam Locks.

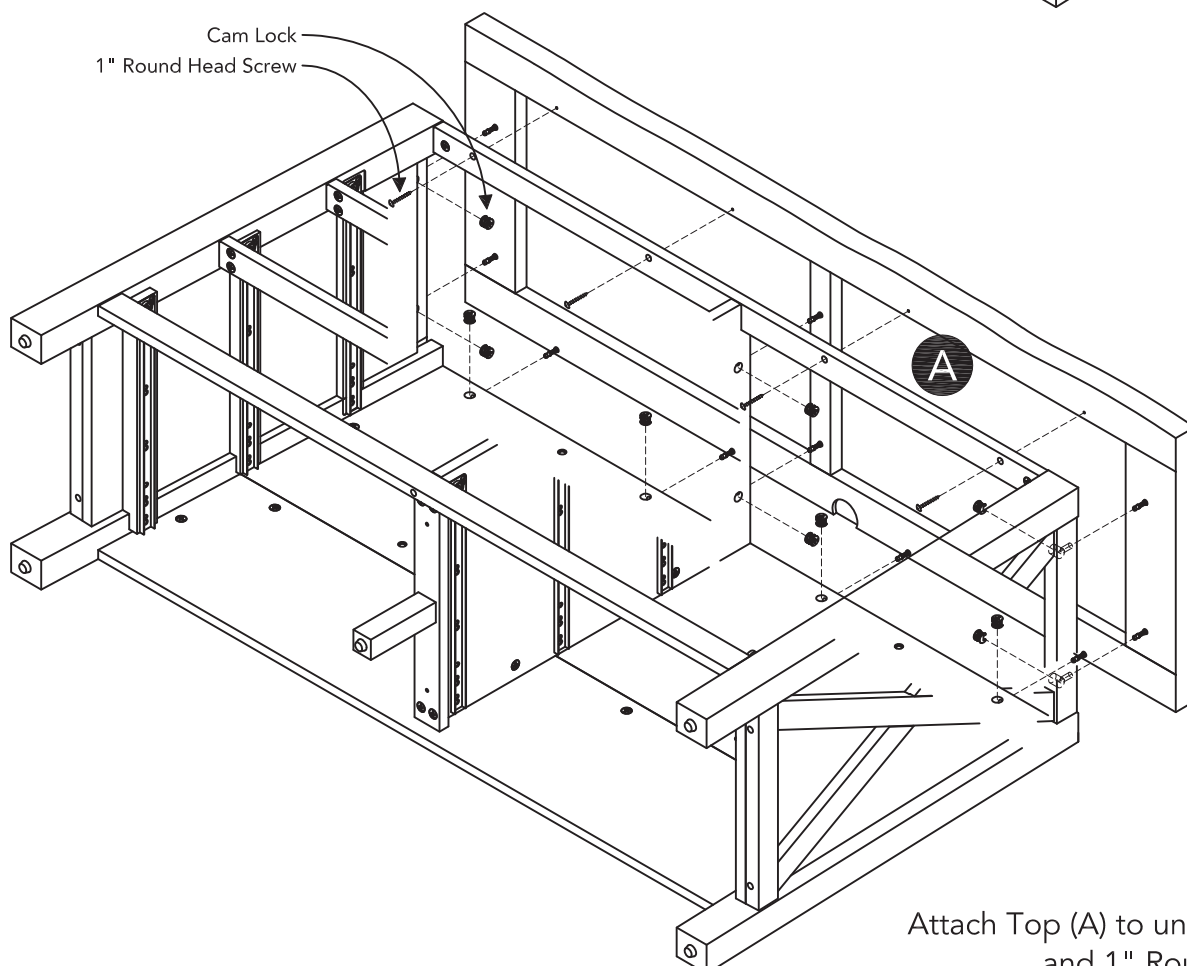

## STEP 8

Attach Top (A) to unit with Cam Locks and 1" Round Head Screws.

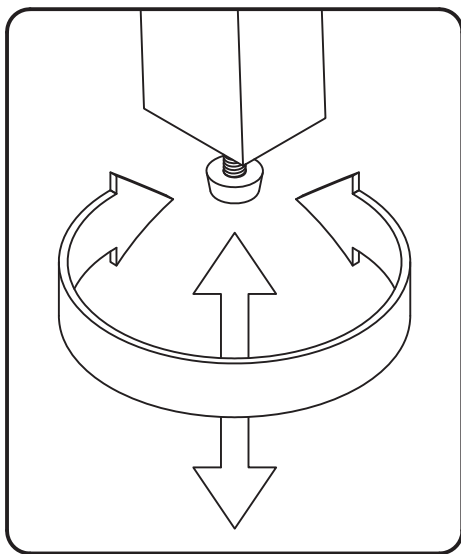
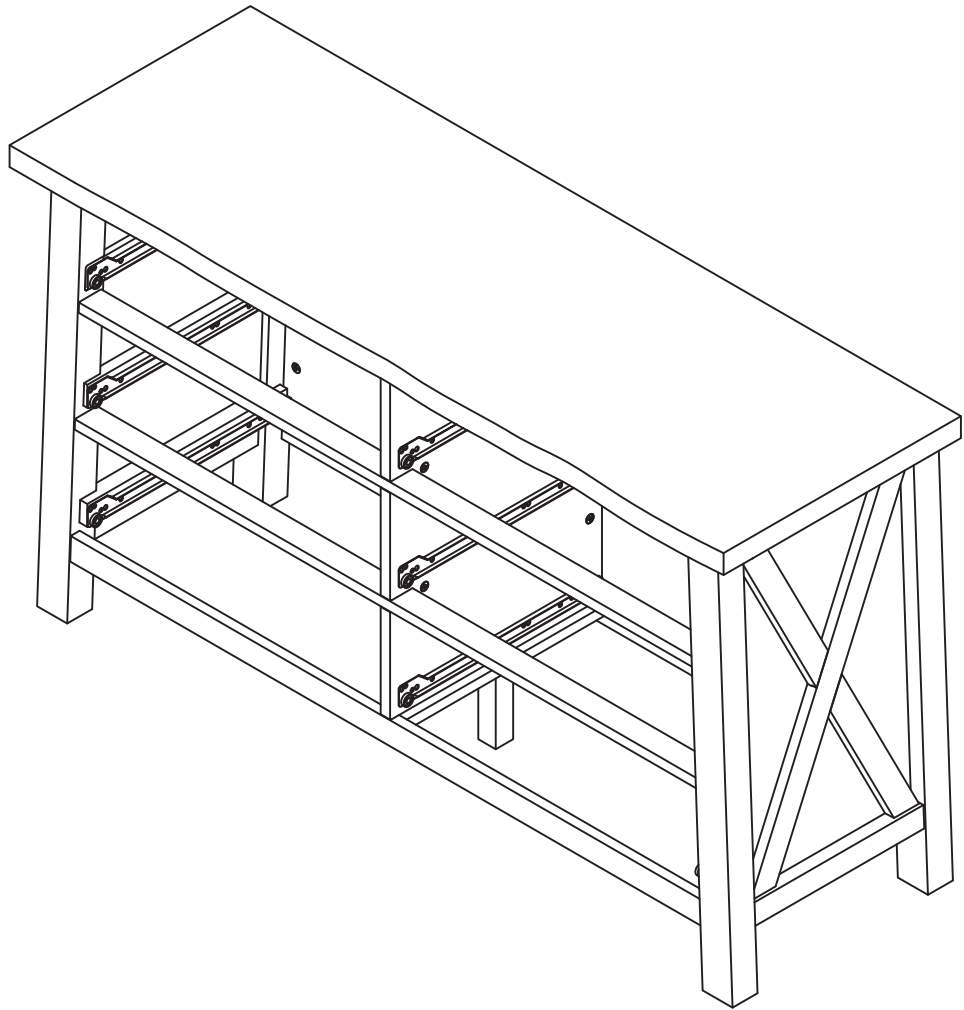


Figure 2

## STEP 9

Turn unit to its upright position.

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 2)

# Assembly Instructions 7/15

## IMPORTANT

- To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

## STEP 10

Place unit at desired location.

Mark wall with pencil just above and in-line with hole in Top (A). (See Figure 3)

Move unit.

Drill a 3/8" hole in wall 2" below mark.

Insert Anchor into the wall hole and attach Tipover Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 4)

Move unit back into place and insert Tipover Restraint into unit through hole in Top (A). (See Figure 5)

Attach Tipover Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 6)

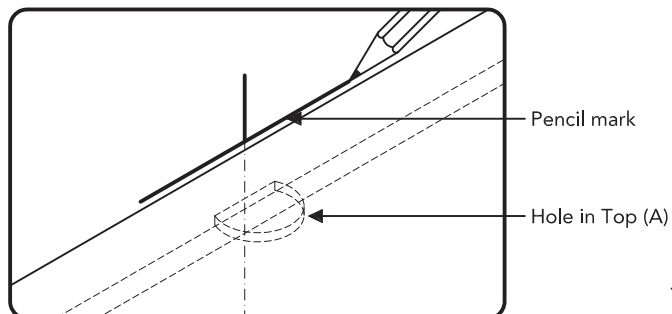
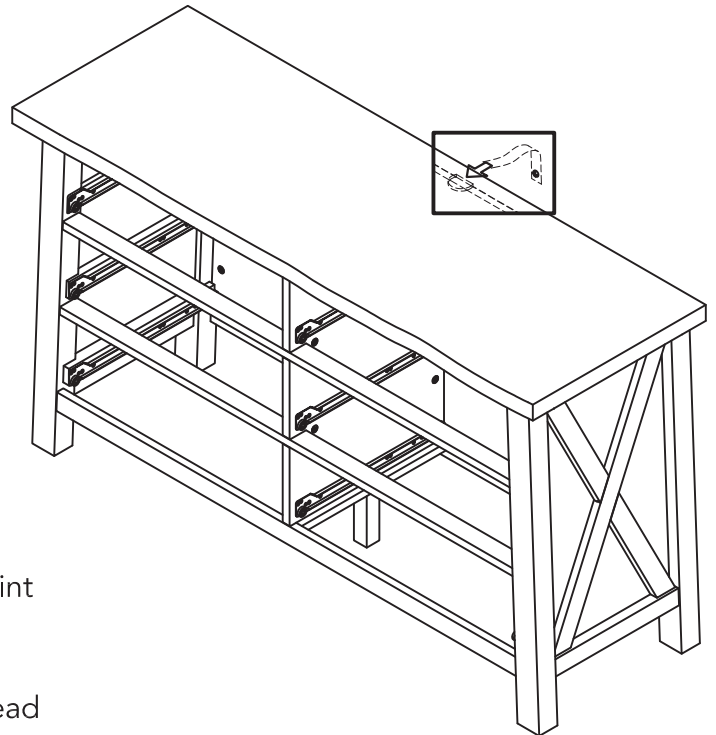


Figure 3

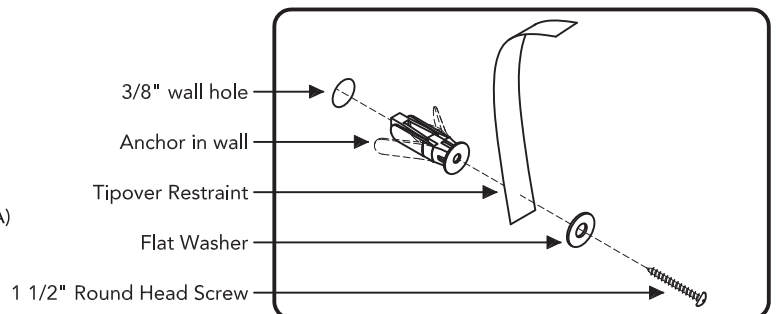


Figure 4

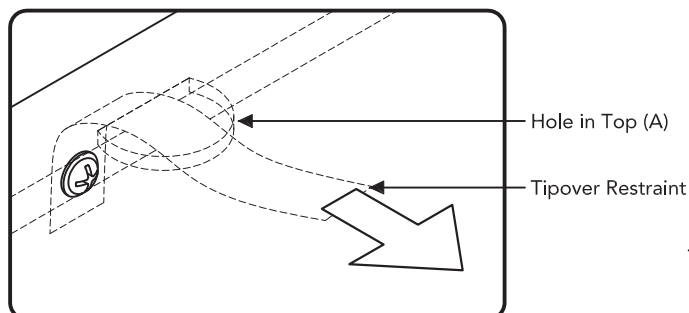


Figure 5


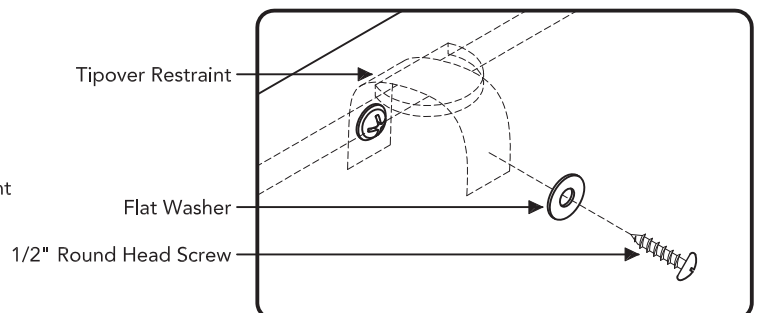


Figure 6

## Hardware List



**Tipover Restraint**  
1 pc.



**Anchor**  
1 pc. (+1 extra)



**M3x38**  
**1 1/2" Round Head Screw**  
1 pc. (+1 extra)




**M3x13**  
**1/2" Round Head Screw**  
1 pc. (+1 extra)



**Flat Washer**  
2 pcs. (+1 extra)



## Drawer (M)

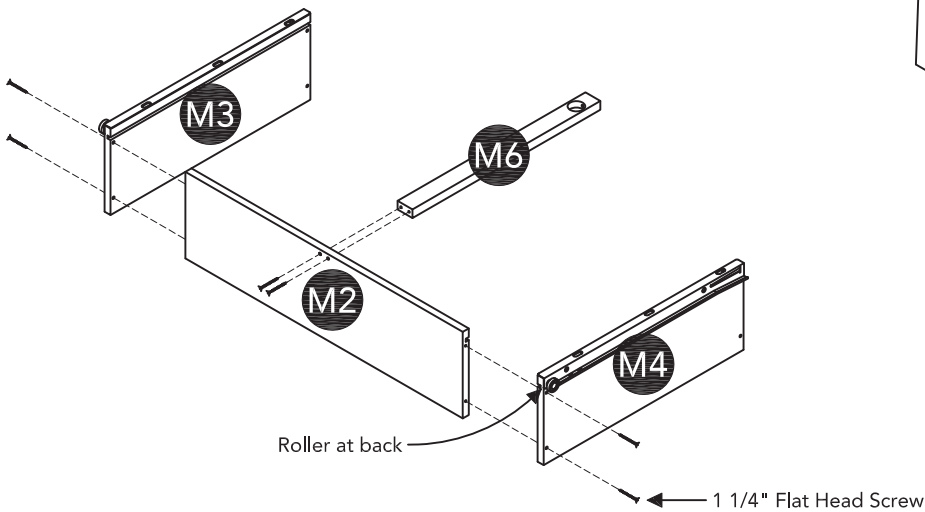


### STEP 11

Attach Drawer Sides (M3), (M4) and Supports (M6) to Drawer Back (M2) with 1 1/4" Flat Head Screws.

### STEP 12


Insert Drawer Bottom (M5) into groove.

Attach Drawer Front (M1) to unit with 1 1/4" Flat Head Screws.

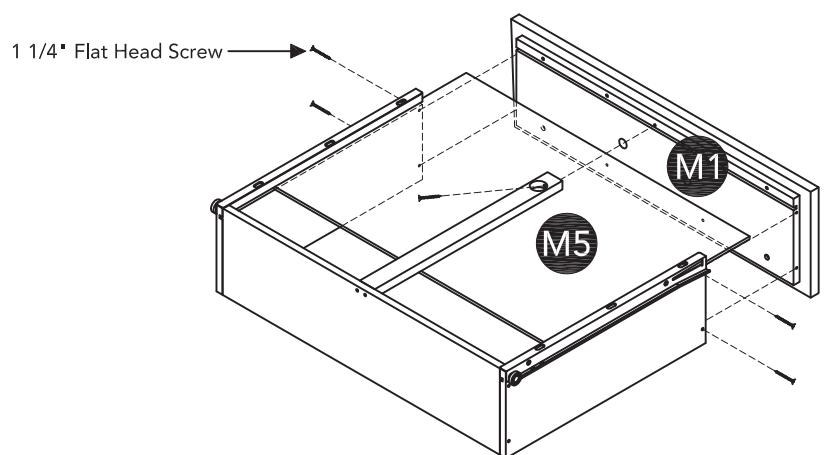







### STEP 13

Attach Handle with Machine Screws.

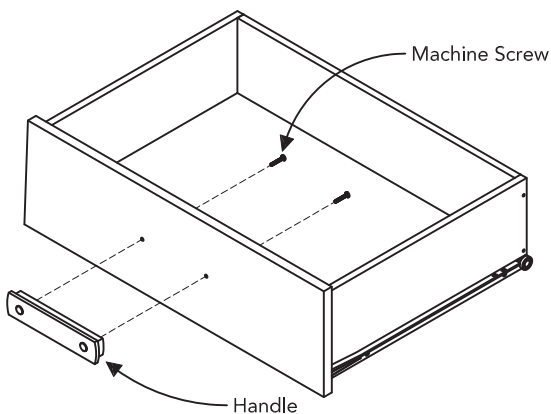

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.


## Part List

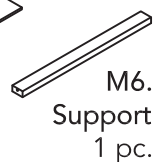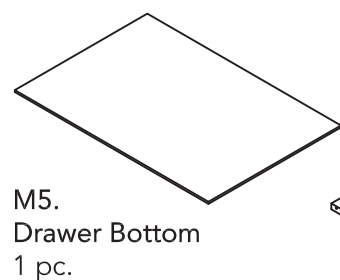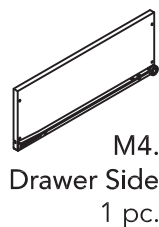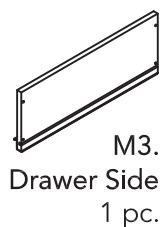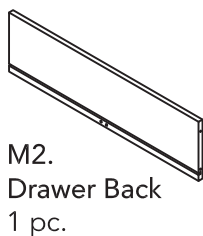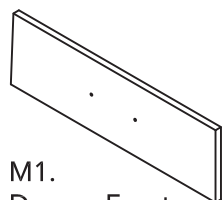



# Assembly Instructions 9/15

## Drawer (N)

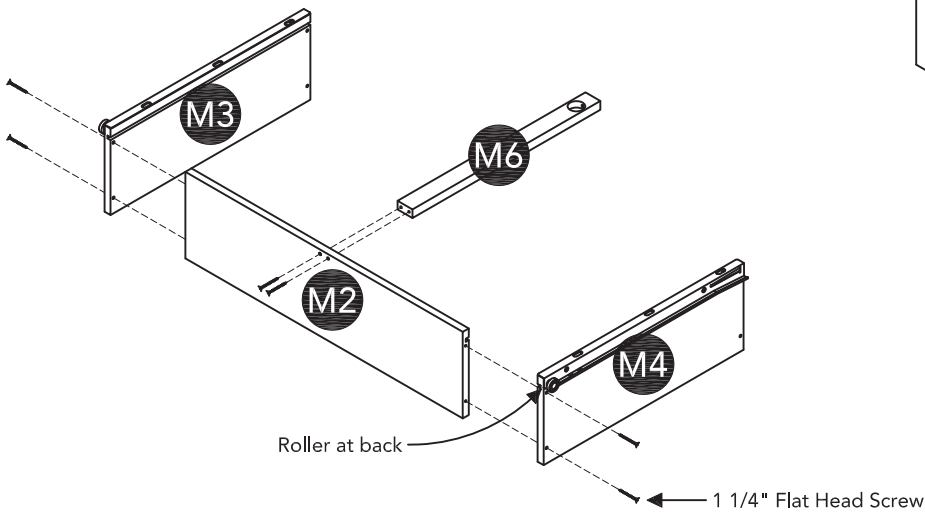


### STEP 14

Attach Drawer Sides (M3), (M4) and Supports (M6) to Drawer Back (M2) with 1 1/4" Flat Head Screws.

### STEP 15


Insert Drawer Bottom (M5) into groove.

Attach Drawer Front (N1) to unit with 1 1/4" Flat Head Screws.

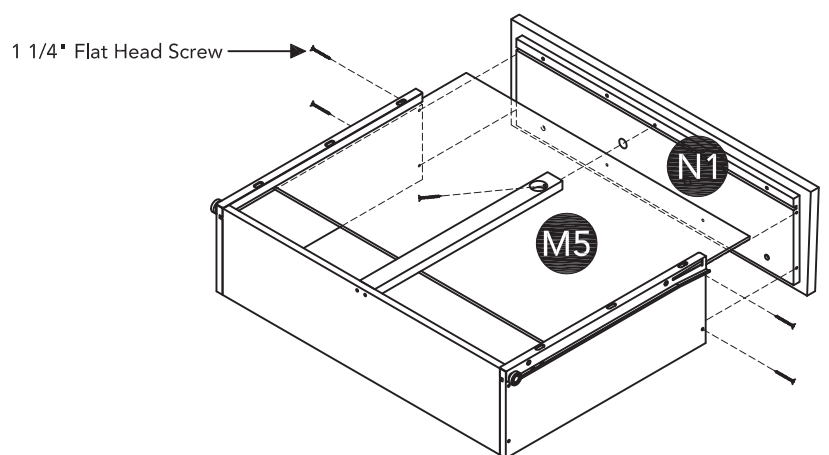







### STEP 16

Attach Handle with Machine Screws.


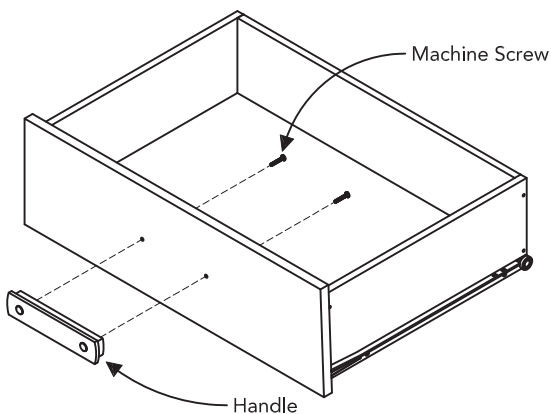


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

## Part List

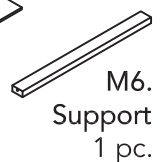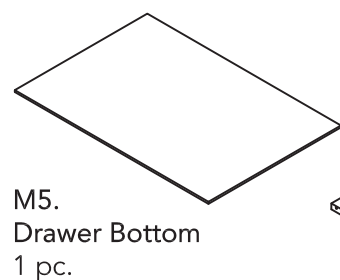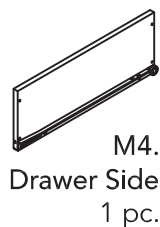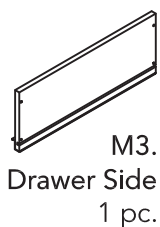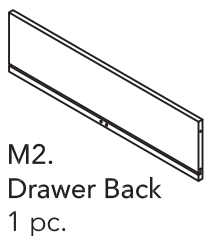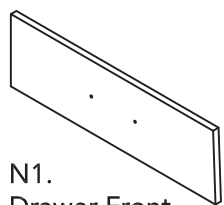

## Drawer (O)

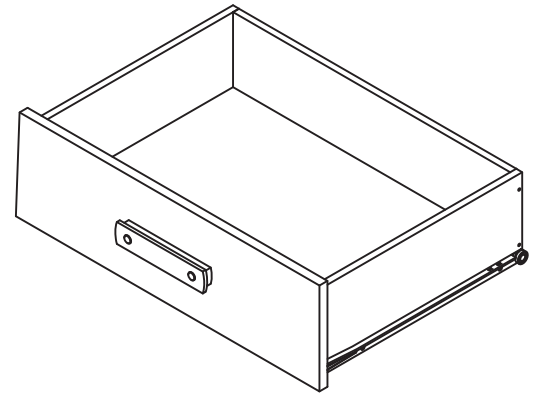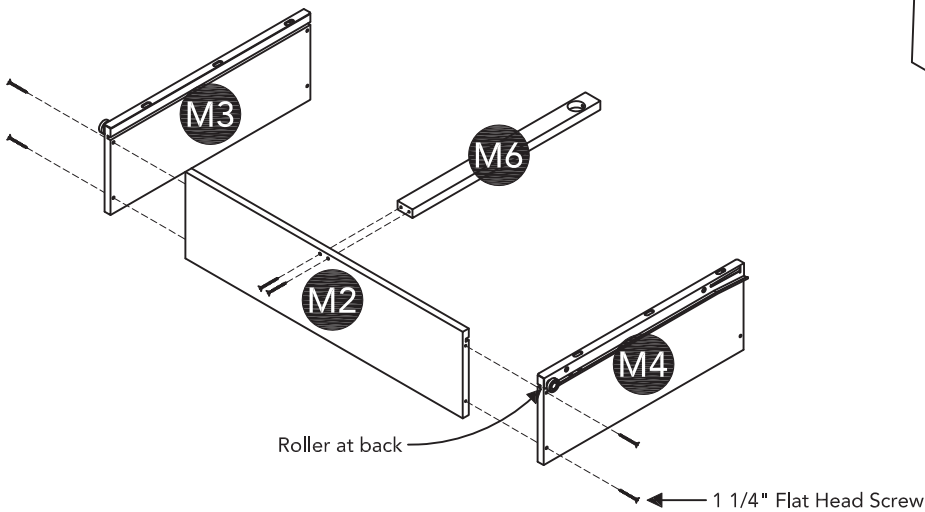



### STEP 17

Attach Drawer Sides (M3), (M4) and Supports (M6) to Drawer Back (M2) with 1 1/4" Flat Head Screws.

### STEP 18

Insert Drawer Bottom (O5) into groove.

Attach Drawer Front (O1) to unit with 1 1/4" Flat Head Screws.





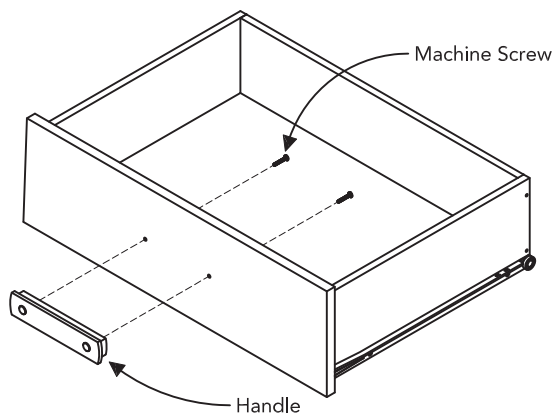
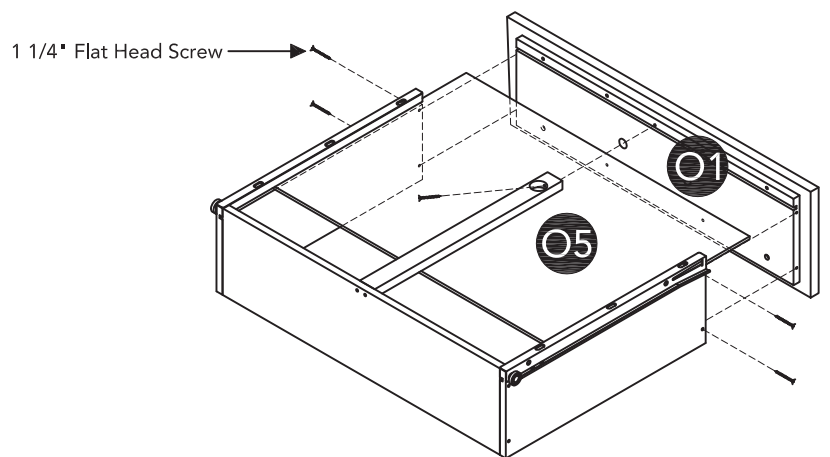


### STEP 19


Attach Handle with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

## Part List

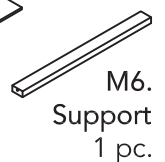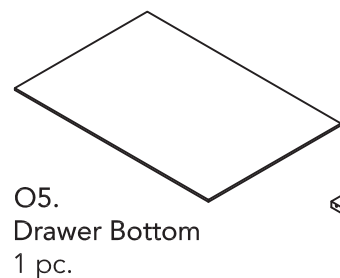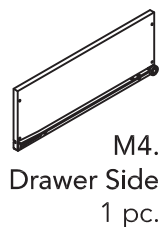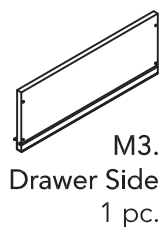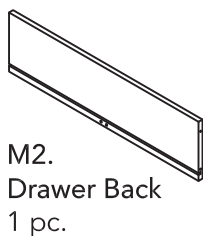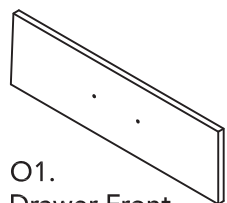

## Drawer (P)

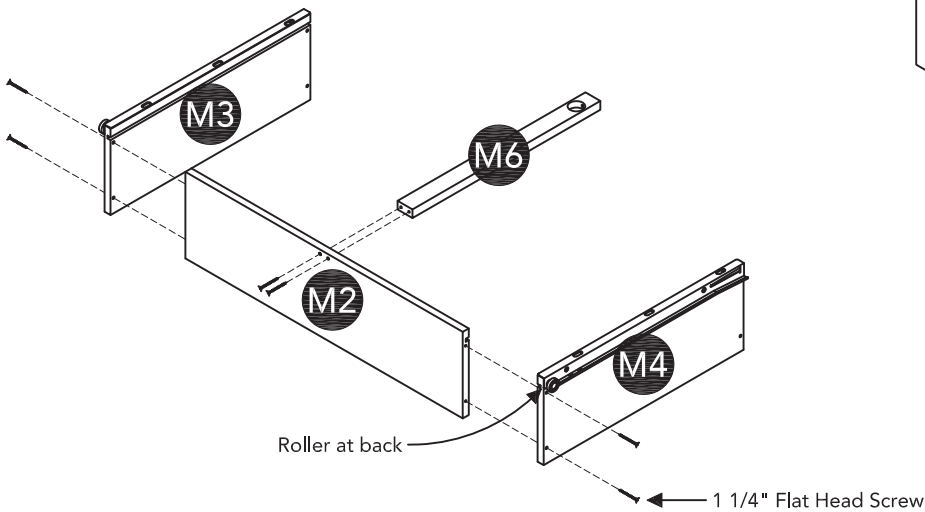


### STEP 20

Attach Drawer Sides (M3), (M4) and Supports (M6) to Drawer Back (M2) with 1 1/4" Flat Head Screws.

### STEP 21


Insert Drawer Bottom (O5) into groove.

Attach Drawer Front (P1) to unit with 1 1/4" Flat Head Screws.

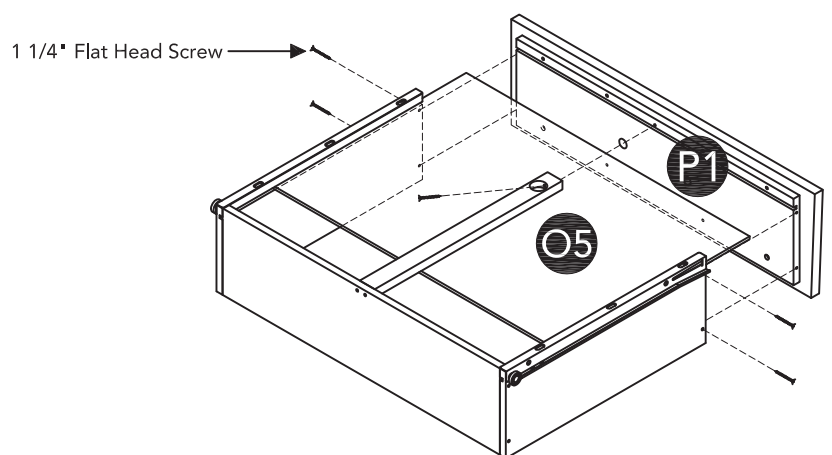







### STEP 22

Attach Handle with Machine Screws.

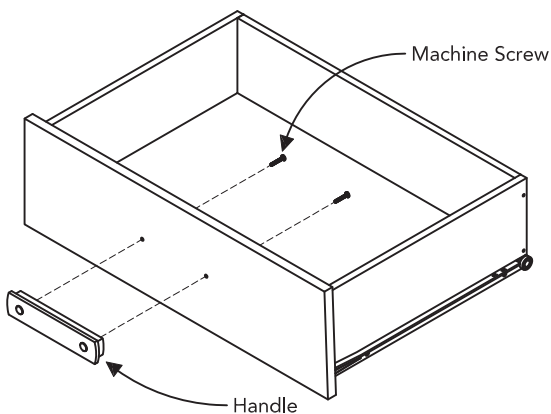


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

## Part List

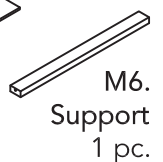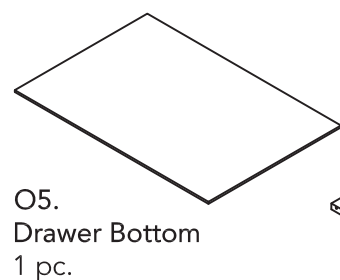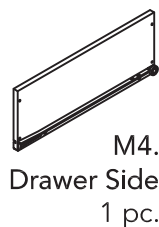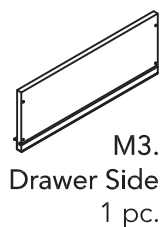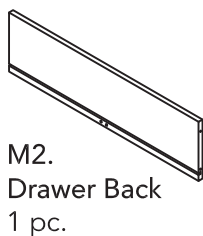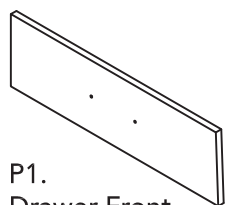

## Drawer (Q)

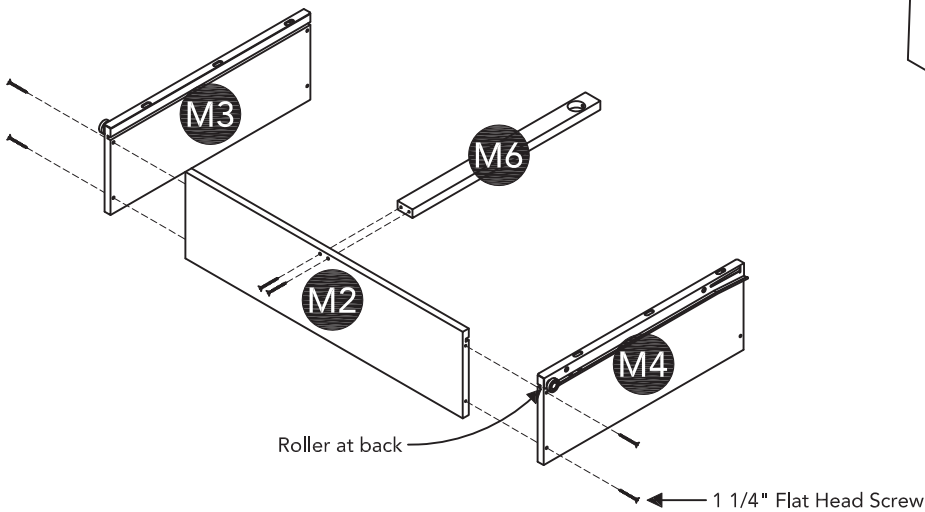


### STEP 23

Attach Drawer Sides (M3), (M4) and Supports (M6) to Drawer Back (M2) with 1 1/4" Flat Head Screws.

### STEP 24


Insert Drawer Bottom (O5) into groove.

Attach Drawer Front (Q1) to unit with 1 1/4" Flat Head Screws.

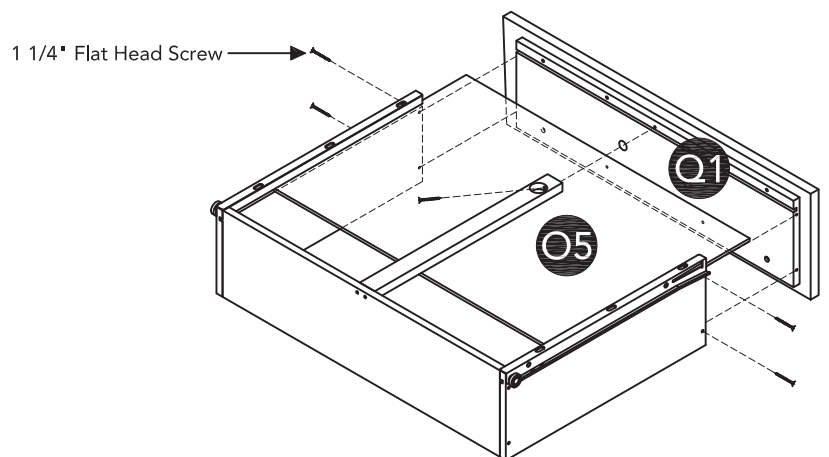







### STEP 25

Attach Handle with Machine Screws.

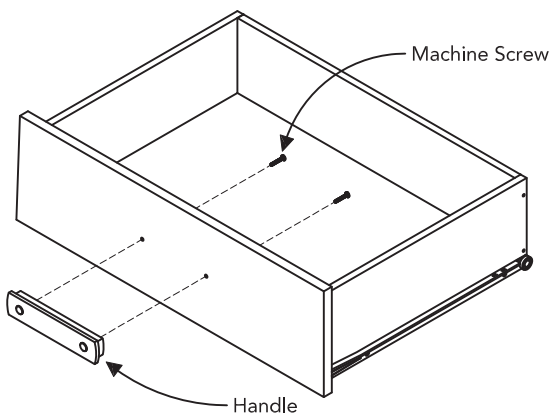


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

## Part List

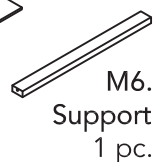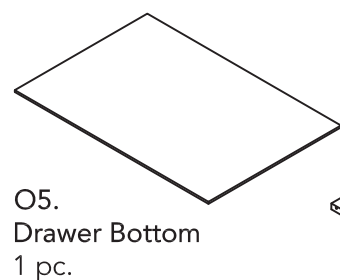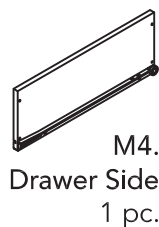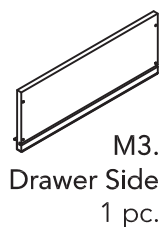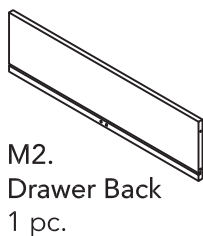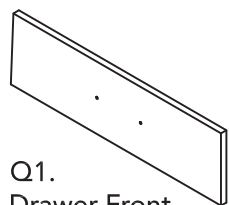

## Drawer (R)

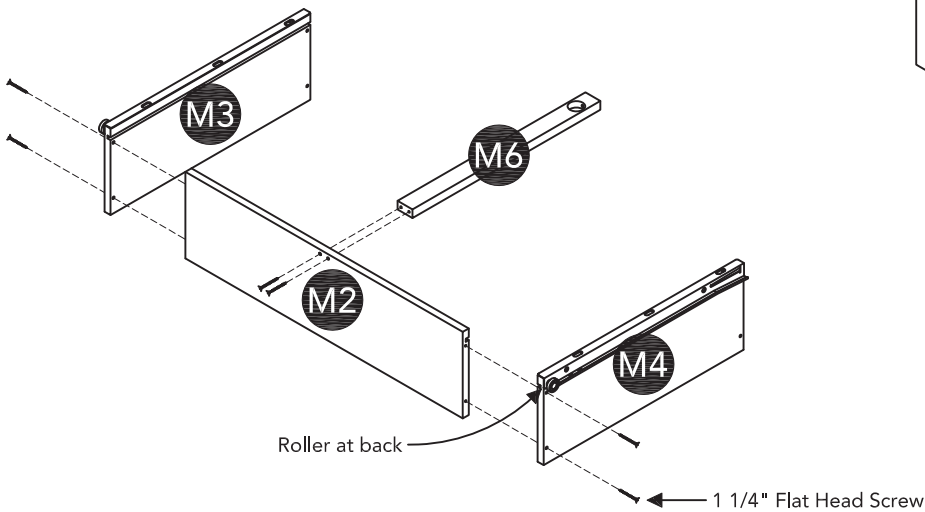


### STEP 26

Attach Drawer Sides (M3), (M4) and Supports (M6) to Drawer Back (M2) with 1 1/4" Flat Head Screws.

### STEP 27


Insert Drawer Bottom (O5) into groove.

Attach Drawer Front (R1) to unit with 1 1/4" Flat Head Screws.

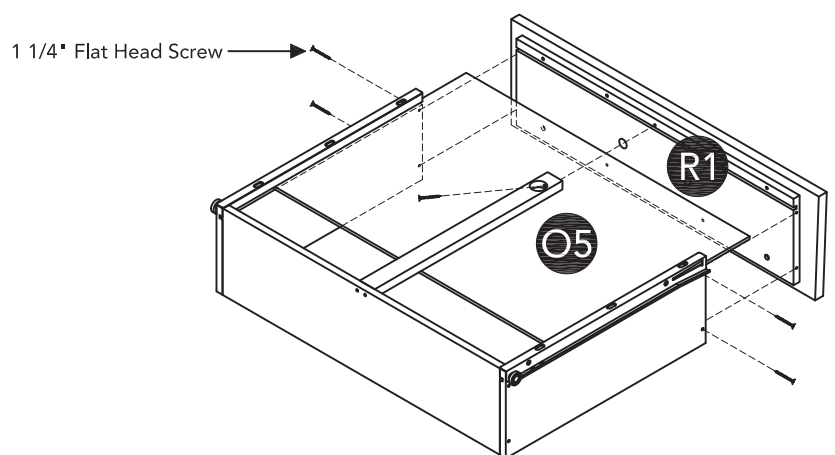







### STEP 28

Attach Handle with Machine Screws.

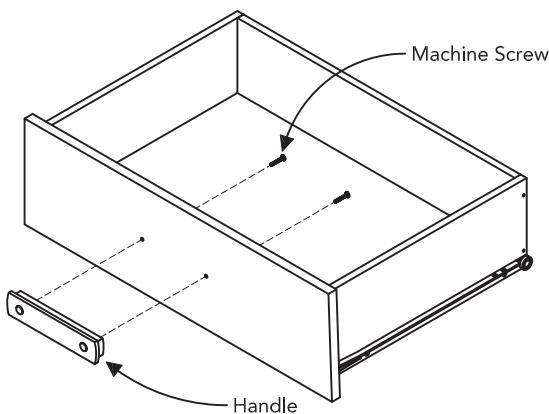



Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

## Part List

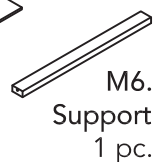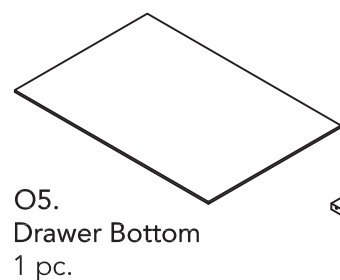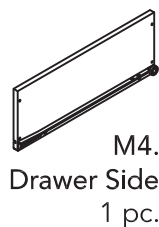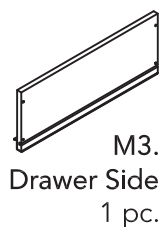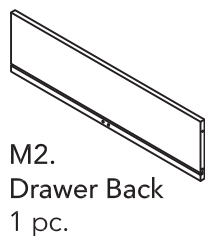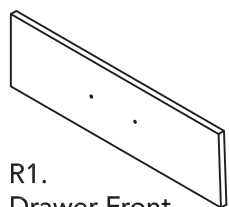

### STEP 29

Loosen slightly screws pre-installed on back of drawer fronts.

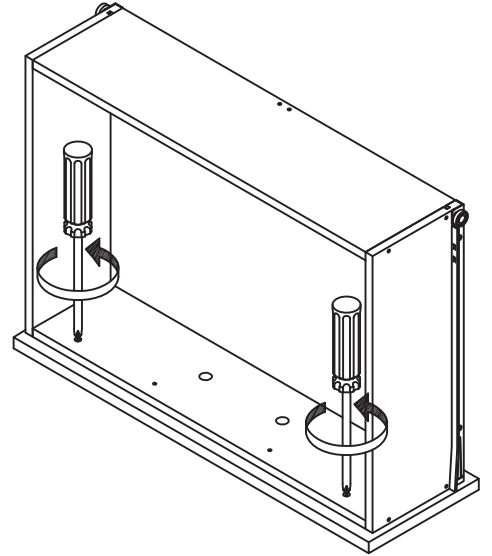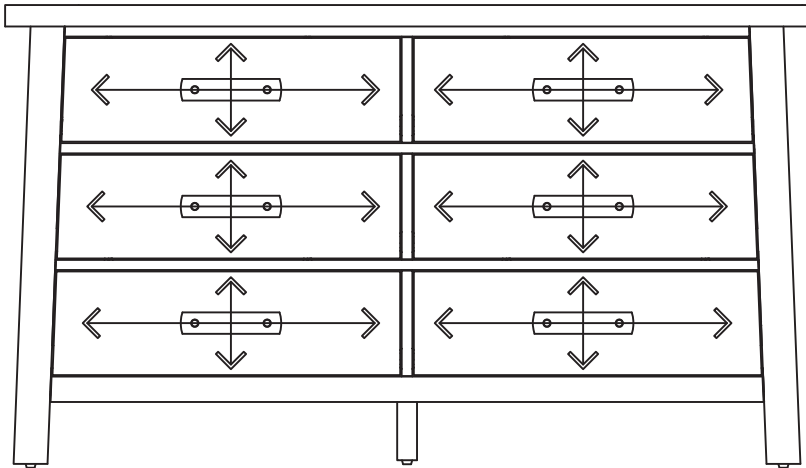

### STEP 30



Insert drawers into unit, then adjust drawer front panels left or right and up or down until drawer gaps look proportional.

### STEP 31

Pull each drawer open slowly, then re-tighten screws from Step 29.


Make sure drawer front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

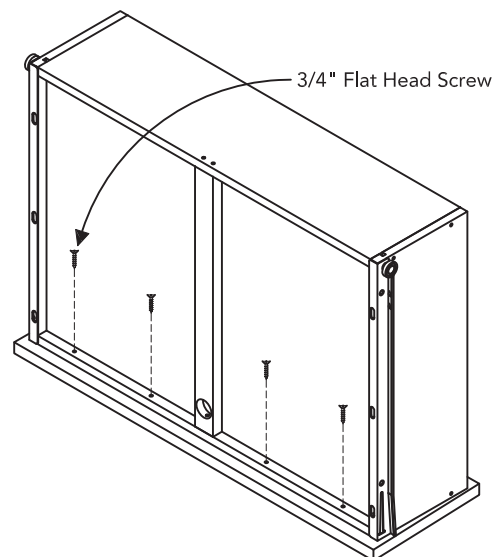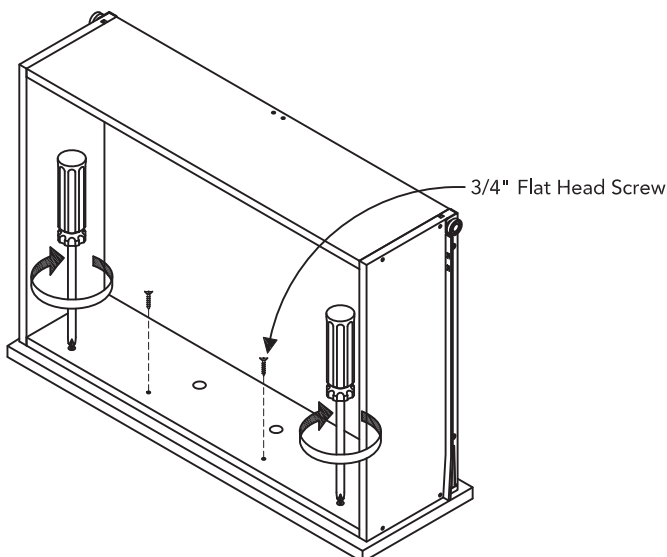

## STEP 32

Slide Drawers (M), (N), (O), (P), (Q) and (R) into position.

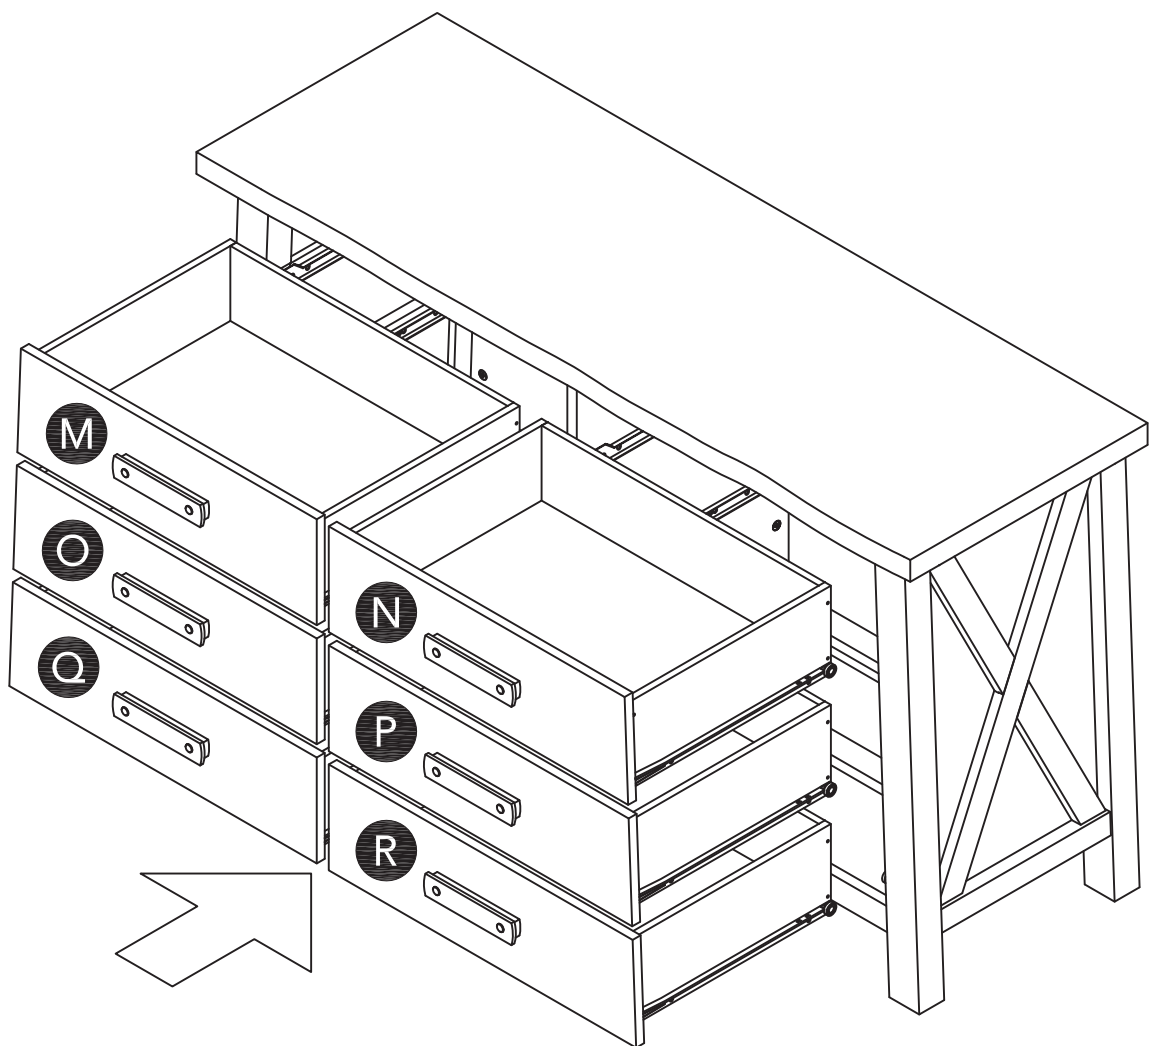



# CARE INSTRUCTIONS

## NEVER

allow liquids to remain on furniture.  
Absorption causes parts to warp  
and split and finishes to delaminate.

## NEVER

use glass cleaners on  
finished furniture. Ammonia  
chemically attacks the finish.



Do not use power tools  
above 8 volts to assemble.  
**PREVENT  
CRACKING**



Do not place  
in direct sunlight.  
**PREVENT  
FADING**



Do not write  
directly on surface.  
**PREVENT  
MARKING**



Do not place hot  
objects on surface.  
**PREVENT  
FINISH DAMAGE**



Do not use rubber  
based placemats.  
**PREVENT  
DISCOLORING**



Do not use commercial  
waxes and polishes.  
**PREVENT  
YELLOWING**

## CLEAN

with a soft cloth moistened  
in lukewarm soap and water.  
Buff with a dry clean cloth.



**homestyles** will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **homestyles** is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.

**homestyles** Customer Service: [www.homestylesfurniture.com](http://www.homestylesfurniture.com),  
[servicedesk@homestylesfurniture.com](mailto:servicedesk@homestylesfurniture.com), 888-680-7460