

# 88 5051 601

## St. Ives


### King Headboard

#### IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


*Home Styles*

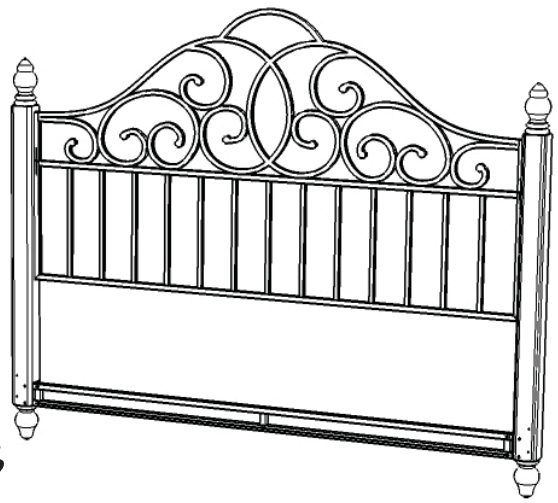

## Part List



**A.**  
Metal Frame  
1 pc.

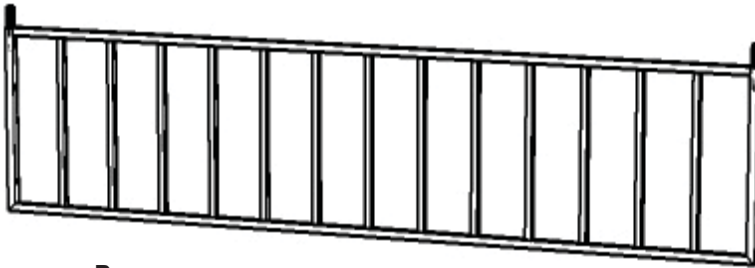

**B.**  
Metal Frame  
1 pc.



**C.**  
Post  
1 pc.



**D.**  
Post  
1 pc.

**E.**  
Stretcher  
1 pc.

## Hardware List



Small Hex Wrench  
1 pc.




Hex Wrench  
1 pc.



Head Cap Bolt (short)  
4 pcs. (+1 extra)



Head Cap Bolt (middle)  
8 pcs. (+1 extra)

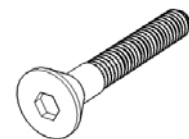


Head Cap Bolt (long)  
6 pcs. (+1 extra)

# Assembly Instructions


## IMPORTANT

- \* Do not tighten up all the screws until each part is properly assembled.
- \* You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- \* Use a soft cloth between these parts and the floor.

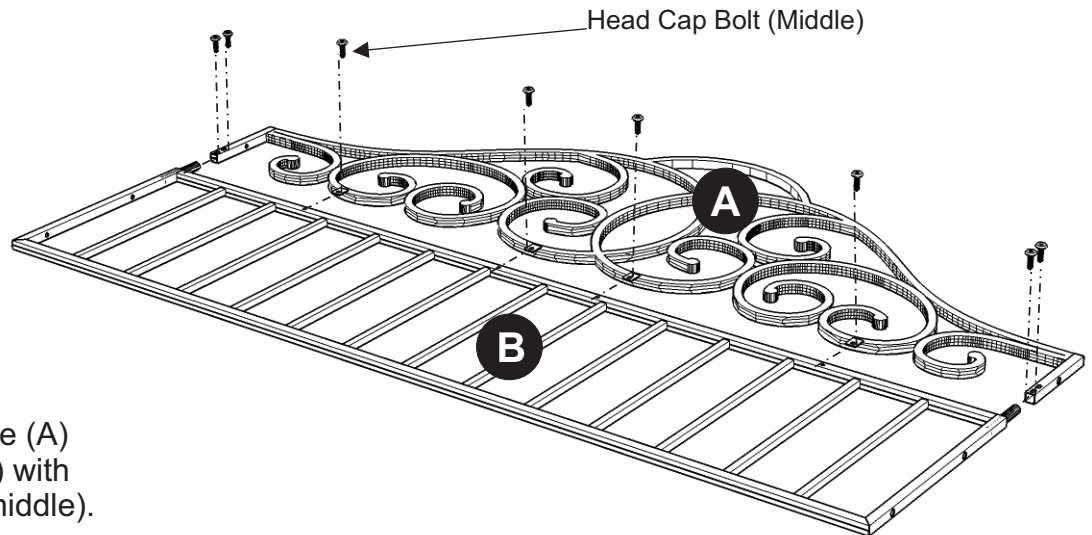

## STEP 1

Attach Metal Frame (A) to Metal Frame (B) with Head Cap Bolts (middle).

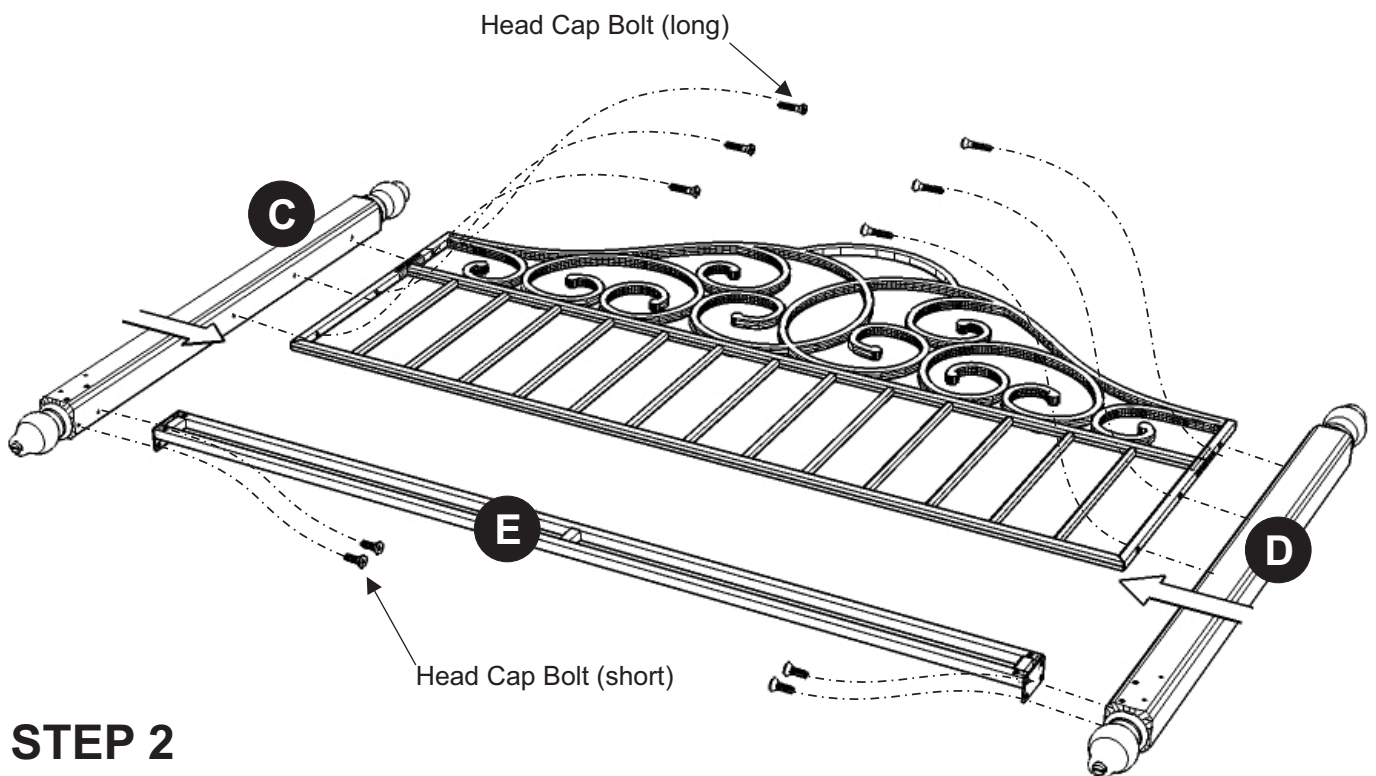

## STEP 2

Attach Post (C) and Stretcher (E) to unit with Head Cap Bolts (long) and Head Cap Bolts (short).

Attach Post (D) to unit with Head Cap Bolts (long) and Head Cap Bolts (short).