



OUTDOOR POLY BAR CHAIR SET WITH CONNECTING TRAY & CUP HOLDER

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

https://westintrends.com/welcome



OUESTIONS OR COMMENTS?

If you have questions reach out to cs@westintrends.com

FOLLOW, SHARE, & LEARN













PRODUCT REGISTRATION


https://westintrends.com/apps/product-registration




(!) CARE & MAINTENANCE


Please keep this instruction for your future reference.


- Be careful when assembling, avoid damaging the painted surface.
- Clean the chair with lukewarm water, mild detergent & soft cloth.
- Firmly secure all connections before use. Do not use any part of this item as a step ladder.
- Do not use or store this item in the proximity of open flame or flammable/ combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Please do not exceed the weight limitations of this item.








PARTS

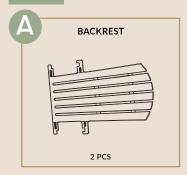


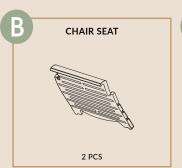

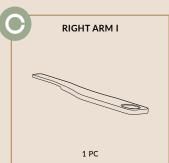


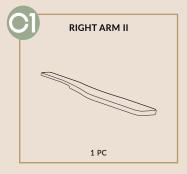

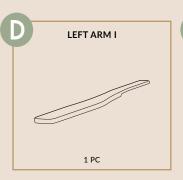

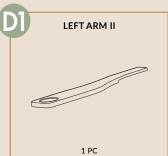

PARTS

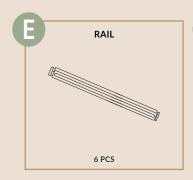

















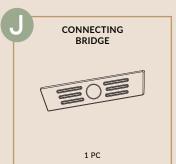

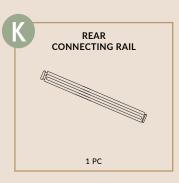

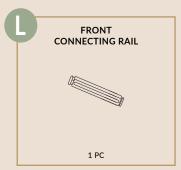

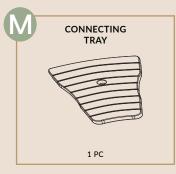



PRODUCT ASSEMBLY - OVERALL VIEW


Look at following overall view of this chair set and learn the exact position of each part to be assembled.






Attach Part H Right Leg I to Part A Backrest by following the steps below:

- 1. Place Part H Right Leg I on flat surface. Make sure the cup holder is facing forward.
- 2. Press the upper bar of the backrest into the positioning slot of the leg (Figure 1).
- 3. Insert the lower bar into the holding position of the leg (Figure 2).

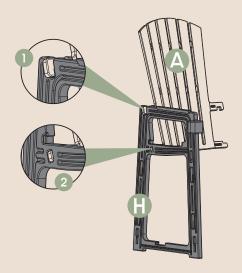

2


Do the same to attach Part G Left Leg I to Part A Backrest.

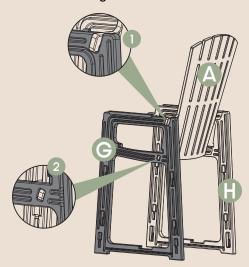



Insert **Part B Chair Seat** to the assembled frame until the groove sits in the slot in the legs (Figure 1). Keep the seat angled upwards as below.


Pay attention not to press down the seat at this stage.

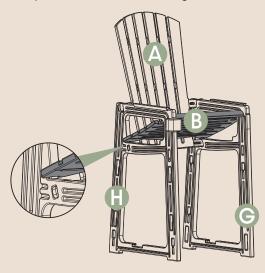



Place **Part F Supporting Rail** between 2 pcs of the legs as below. Make sure the tenons with grooves are facing downward (Figure 1).

Press hard on **Part F Supporting Rail** to lock the tenons firmly into the mortise in the legs (Figure 2).

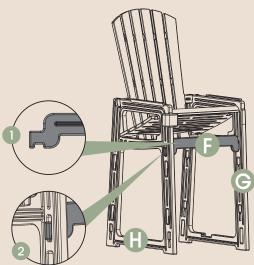




Press the seat down until it is locked on the supporting rail firmly.

Place Part E Rail between Part G Left Leg I and Part H Right Leg I as below. Make sure the arrows are inside and pointing downward (Figure 1).


Press hard on Part E Rail to lock the tenons firmly into the mortise in the legs (Figure 2).

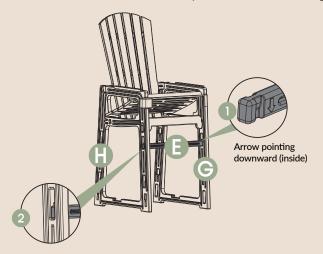



Place Part I Footrest between Part G Left Leg I and Part H Right Leg I as below. Make sure the arrows are inside and pointing downward (Figure 1).


Press hard on Part I Footrest to lock the tenons firmly into the mortise in the legs (Figure 2).

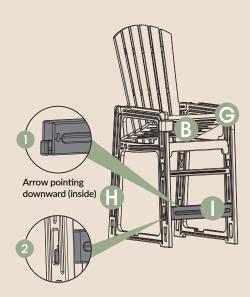



Place 2 pcs of **Part E Rail** between **Part G Left Leg I** and **Part H Right Leg I** as below. Make sure the arrows are inside and pointing downward (Figure 1).


Press hard on Part E Rail to lock the tenons firmly into the mortise in the legs (Figure 2).

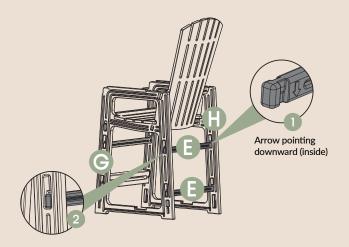




Attach Part C Right Arm I to Part H Right Leg I by following the steps below:

- 1. Match the groove in Part C Right Arm I with the tenon on top of Part H Right Leg I and slide the arm horizontally backwards (Figure 1).
- 2. Pull the arm upwards when it moves to the lock. Slide again till the lock is trapped in the groove (Figure 2).

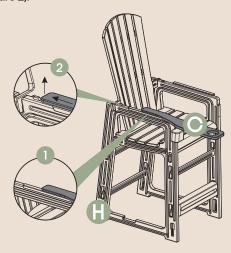




Do the same to attach Part D Left Arm I to Part G Left Leg I.

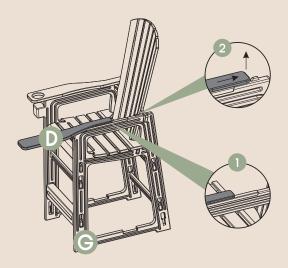




Attach Part H1 Right Leg II to Part A Backrest by following the steps below:

- 1. Place **Part H1 Right Leg II** on a flat surface. Press the upper bar of the backrest into the positioning slot of the leg (Figure 1).
- 2. Insert the lower bar into the holding position of the leg (Figure 2).

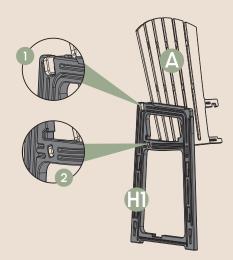




Do the same to attach another Part G1 Leg II to Part A Backrest.

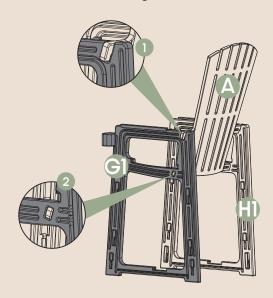

12

Insert **Part B Chair Seat** to the assembled frame until the groove sits in the slot in the legs (Figure 1). Keep the seat angled upwards as below.


Pay attention not to press down the seat at this stage.

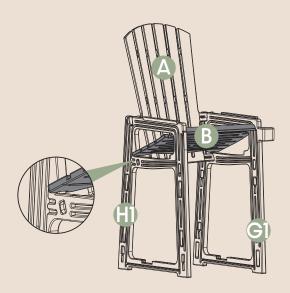

13

Place **Part F Supporting Rail** between 2 pcs of the legs as below. Make sure the tenons with grooves are facing downward (Figure 1).


Press hard on **Part F Supporting Rail** to lock the tenons firmly into the mortise in the legs (Figure 2).

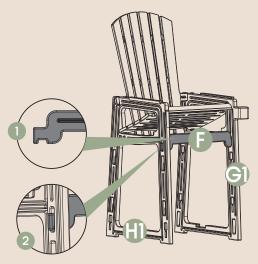

14

Place **Part E Rail** between **Part G1 Left Leg II** and **Part H1 Right Leg II** as below. Make sure the arrows are inside and pointing downward (Figure 1).

Press hard on **Part E Rail** to make the tenons locked firmly into the mortise in the legs (Figure 2).

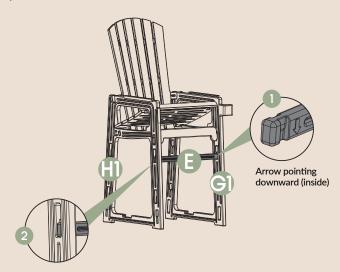




Place Part I Footrest between Part G1 Left Leg II and Part H1 Right Leg II as below. Make sure arrows are inside and pointing downward (Figure 1).

Press hard on Part I Footrest to lock the tenons firmly into the mortise in the legs (Figure 2).


Press the seat down until it is locked on the supporting rail firmly.

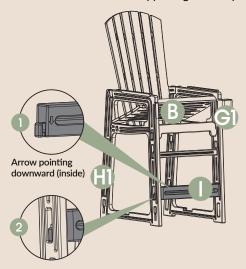



Place 2 pcs of **Part E Rail** between **Part G1 Left Leg II** and **Part H1 Right Leg II** as below. Make sure the arrows are inside and pointing downward (Figure 1).


Press hard on Part E Rail to lock the tenons firmly into the mortise in the legs (Figure 2).

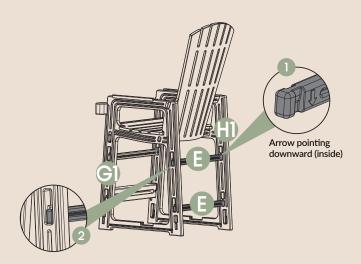




Attach Part C1 Right Arm II to Part H1 Right Leg II by following the steps below:

- 1. Match the groove in **Part C1 Right Arm II** with the tenon on top of **Part H1 Right Leg II** and slide the arm horizontally backwards (Figure 1).
- 2. Pull the arm upwards when it moves to the lock. Slide again till the lock is trapped in the groove (Figure 2).

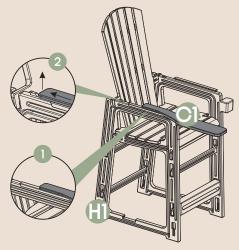


18

Do the same to attach Part D1 Left Arm II to Part G1 Left Leg II.

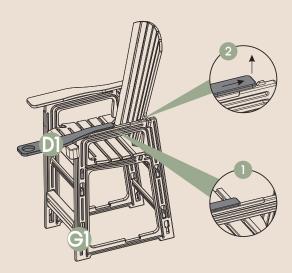

19

Place the 2 pcs of assembled chairs in the position shown below.

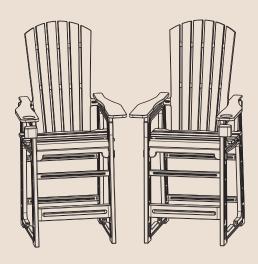



Connect two chairs with **Part J Connecting Bridge**. Keep the groove downwards with its short edge facing the front.

Press hard on the connecting bridge until it trapped firmly into the legs of both chairs.




Keep the groove downward and short edge facing front.




Place Part L Front Connecting Rail between two chairs as below. Make sure the arrows are inside and pointing downward (See Figure 1).

Press hard on **Part L Front Connecting Rail** to make the tenons lock firmly into the mortise in the legs (Figure 2).

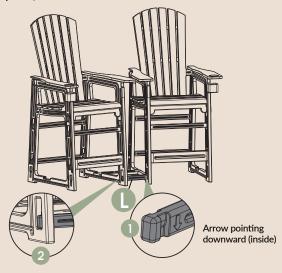


22

Do the same to attach Part K Rear Connecting Rail to two chairs as below.

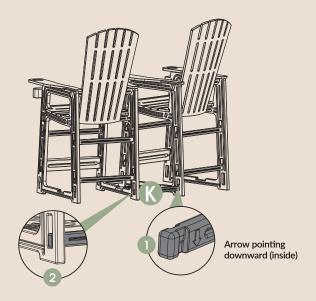

23


Align **Part N Umbrella Holder** to **Part J Connecting Bridge**. Turn it clockwise to attach the umbrella holder to the connecting bridge.

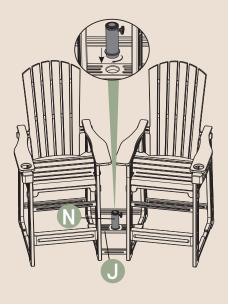

24

Place **Part M Connecting Tray** onto the arms of both chairs. Align the arms with the grooves at the bottom of the connecting tray.

Press hard on the connecting tray until the arms are connected to the tray firmly.

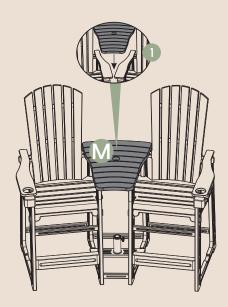



Check and tighten all the connections again to ensure the chair set is steady enough.

Enjoy the chair set now.



REGISTRATION & REFUND POLICY

https://westintrends.com/apps/product-registration



https://westintrends.com/policies/refund-policy



HAVING TROUBLE

• Not sure how to assemble or missing pieces?
Please contact our Customer Service Team for assistance at cs@westintrends.com

Have Order #. Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning - DO NOT exceed 1500 PSI - this will remove any debris and dirt.