




## Shower Arm with Shower Head Installation Instructions

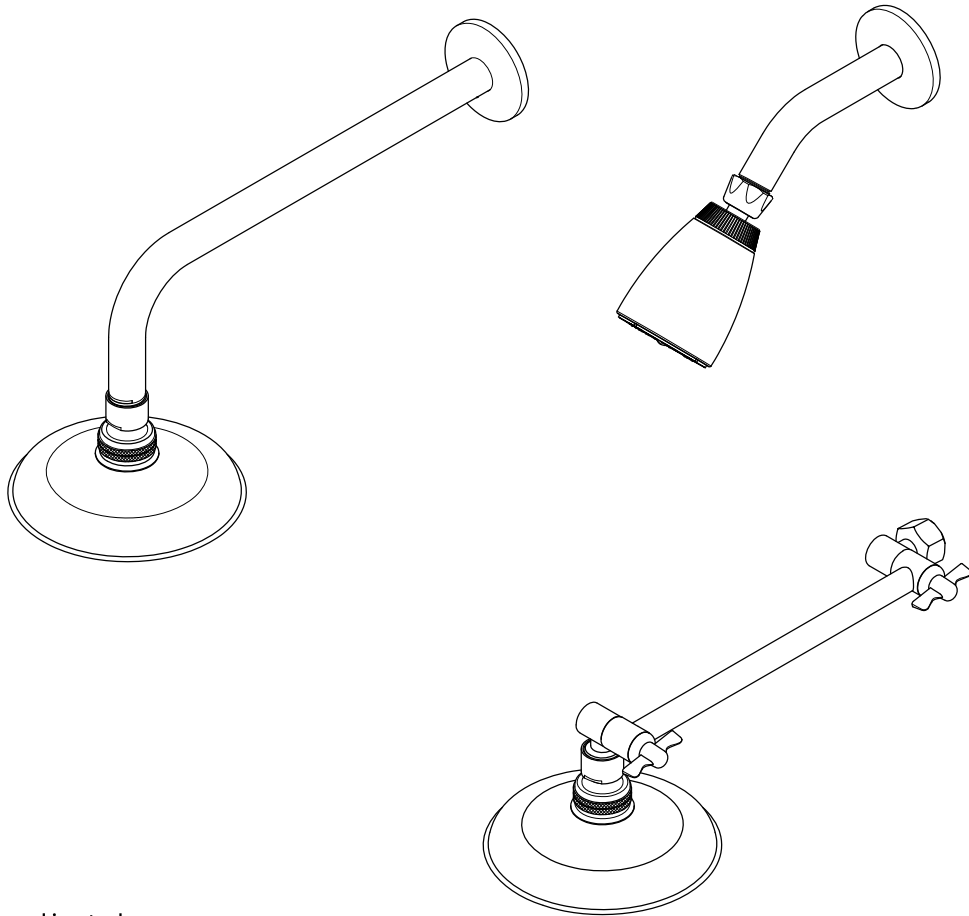

[www.kingstonbrass.com](http://www.kingstonbrass.com)

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS  
TECHNICAL SUPPORT E-mail: [service@kingstonbrass.com](mailto:service@kingstonbrass.com)  
12775 Reservoir Street, Chino, CA 91710

### NOTICE

Failure to follow all directions may cause leaks  
which may result in water damage

### ! CAUTION

Failure to follow all installation directions may  
cause product to detach from the wall and  
cause serious injury

## Tools Required



Adjustable Wrench



Plier



Teflon Tape



Protection Cloth

## Remove the Original Shower Heads and Arm :

1. Unscrew the showerhead from the shower arm by turning it counter-clockwise.
2. Use pliers to remove the shower arm by turning it counter-clockwise.
3. Clean any debris from the inner threads of the stub-out elbow.

## Install the Shower Arm :

Refer to the installation drawing shown on the next page.

1. Wrap 3 or 4 revolutions of Teflon tape clockwise around the threads of the shower arm.
2. Screw the shower arm onto the stub-out elbow and hand-tighten it. Adjust the arm to point downward.
3. Avoid over-tightening, as this can cause damage and leaks.
4. Turn on the water for 1 minute to check for leaks. If leaks occur, loosen and re-tighten the shower arm.
5. Apply a small bead of silicone caulking to the back of the wall flange and press it against the wall.

If you are installing a shower arm with female threads.

After adding 3 to 4 revolutions of Teflon tape, thread a close nipple on stub-out elbow and then thread shower arm onto nipple.

- ✱ If leaking persists, it may be necessary to add more Teflon tape on the threads to ensure proper water seal.

## Install the Shower Head :

6. Wrap Teflon tape 3 or 4 times clockwise around the 1/2 NPT male threads of the shower arm. If using a straight thread (1/2 NPSM), Teflon tape is optional, but ensure the shower head's inner thread is also straight and has a rubber washer.
7. Install the new shower head by turning it clockwise slowly and carefully, ensuring a proper connection. Avoid over-tightening, as this can cause damage and leaks.
8. Turn on the water to check for leaks. If leaks are found, loosen and re-tighten the shower head, repeating steps 1 and 2.

※ If leaking persists, it may be necessary to add more Teflon tape on the threads to ensure proper water seal.

