












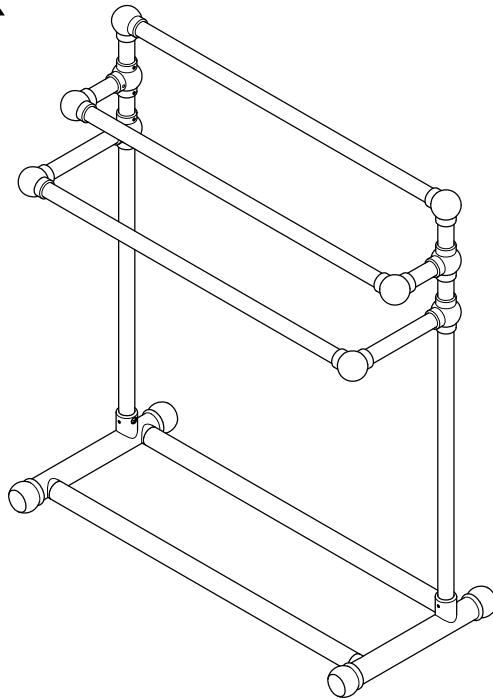

## Pedestal Towel Rack Installation Instructions



### Parts:

□ Shape Base	Straight Tube	Front Bar Set	Side Bar (Long)	Side Bar (Short)
 1 Pc	 2 Pcs	 2 Pcs	 2 Pcs	 2 Pcs
3-Way Ball Joint assembly (L)	Bolt Set	Top Bar Assembly	Screw	3-Way Ball Joint assembly (R)
 1 Pc	 2 Pcs	 1 Pc	 2 Pcs	 1 Pc



### ⚠ WARNING

#### Lifting hazard.

Single person lift could cause injury.  
Use assistance when moving or lifting.

[www.kingstonbrass.com](http://www.kingstonbrass.com)

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS  
TECHNICAL SUPPORT E-mail: [service@kingstonbrass.com](mailto:service@kingstonbrass.com)  
12775 Reservoir Street, Chino, CA 91710

### Tools Required




Allen Wrench



Phillips Screwdriver



Adjustable Wrench

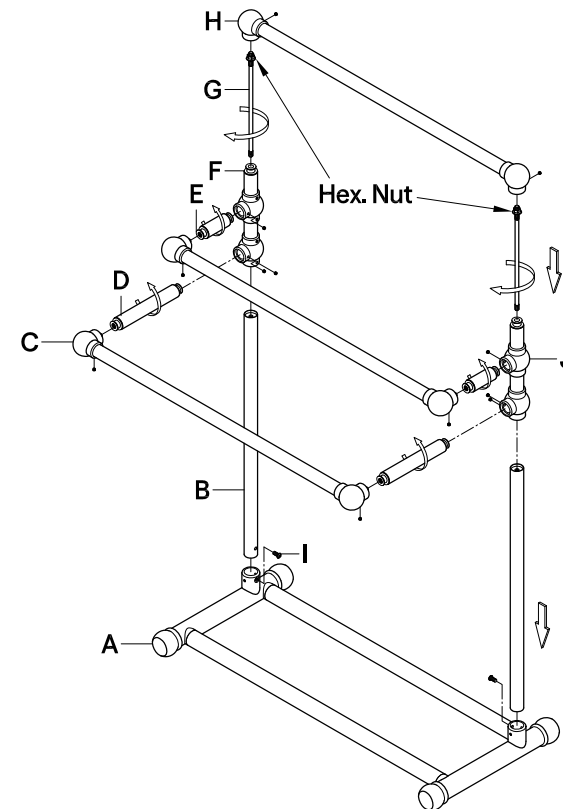

### Installation Steps:

- Step 1. Place the base (A) on a flat level surface and insert both risers (B).
- Step 2. Insert the 3-way ball joint assembly (F, J) on the riser (B). Insert both bolts (G) through the 3-way ball joint assembly (F, J) to thread-connect with risers (B). Then tighten up the Hex. nuts to secure F & J and tighten up the screws (I).
- Step 3. Insert top bar assembly (H) onto the 3-way ball joint assembly (F, J) and secure by tightening the set screws using an Allen wrench.
- Step 4. Assemble the lower and upper towel bars by threading the long (D) and short (E) horizontal bars.
- Step 5. Insert the upper and lower towel bars onto the 3-way ball joint assembly (F, J) and secure using an Allen wrench.
- Step 6. Check all threaded connections.

### Cleaning

Clean with a damp cloth only.  
Avoid using metal or abrasive polishes.

©2025 LVC Kingston LLC. All Rights Reserved.  
2025-05-D