


MOCOA UPHOLSTERED BED QUEEN ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD PANEL


1 PC

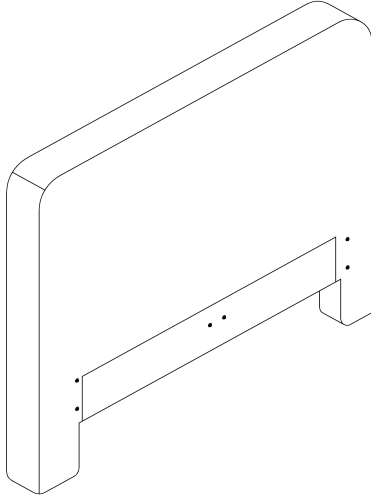

HARDWARE KIT PACKED IN BOX#2

| | | | |
|---|-------------------------|--|-------|
| 1 | ALLEN BOLT (6x40mm) | | 3 PCS |
| 2 | PHILLIPS SCREW (7x35mm) | | 4 PCS |
| 3 | FLAT WASHER (6mm) | | 3 PCS |
| 4 | ALLEN KEY (5mm) | | 1 PC |

FULLY ASSEMBLED

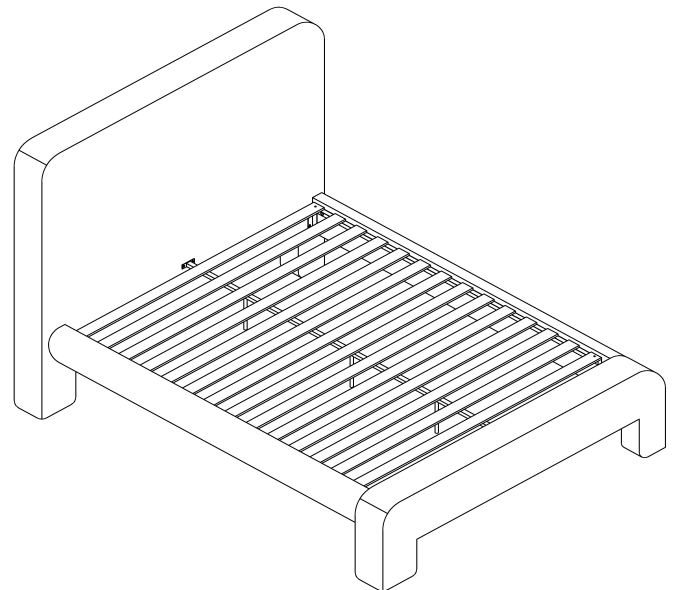

BOX#2

B. LEFT SIDE RAIL 1 PC

C. RIGHT SIDE RAIL 1 PC


D. FOOTBOARD 1 PC

E. SUPPORT LEG 3 PCS


F. CENTER SLAT SUPPORT 1 PC

G. SLAT ROLL 1 SET


B

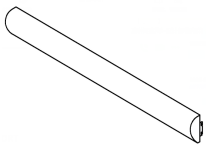

C

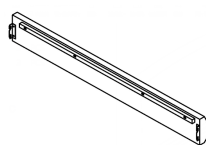


D

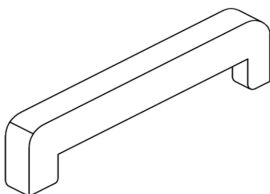


E



F




G

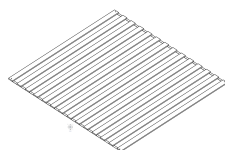


MOCOA UPHOLSTERED BED QUEEN ASSEMBLY INSTRUCTIONS



STEP 1

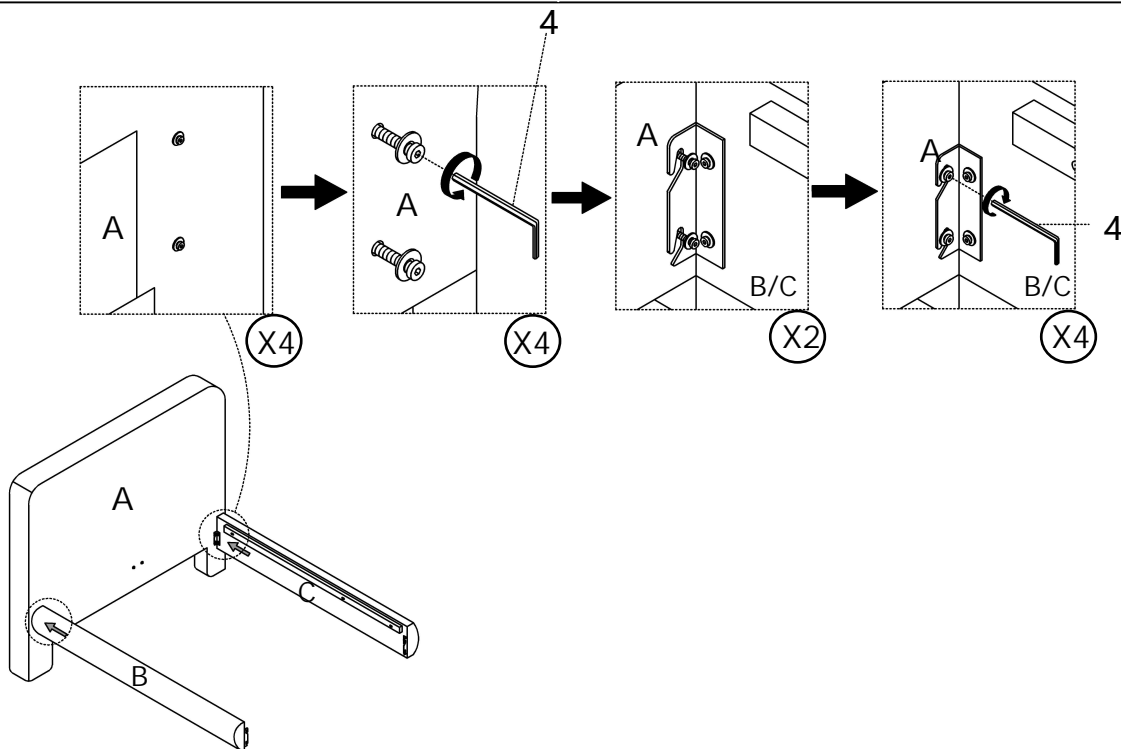

STEP 2

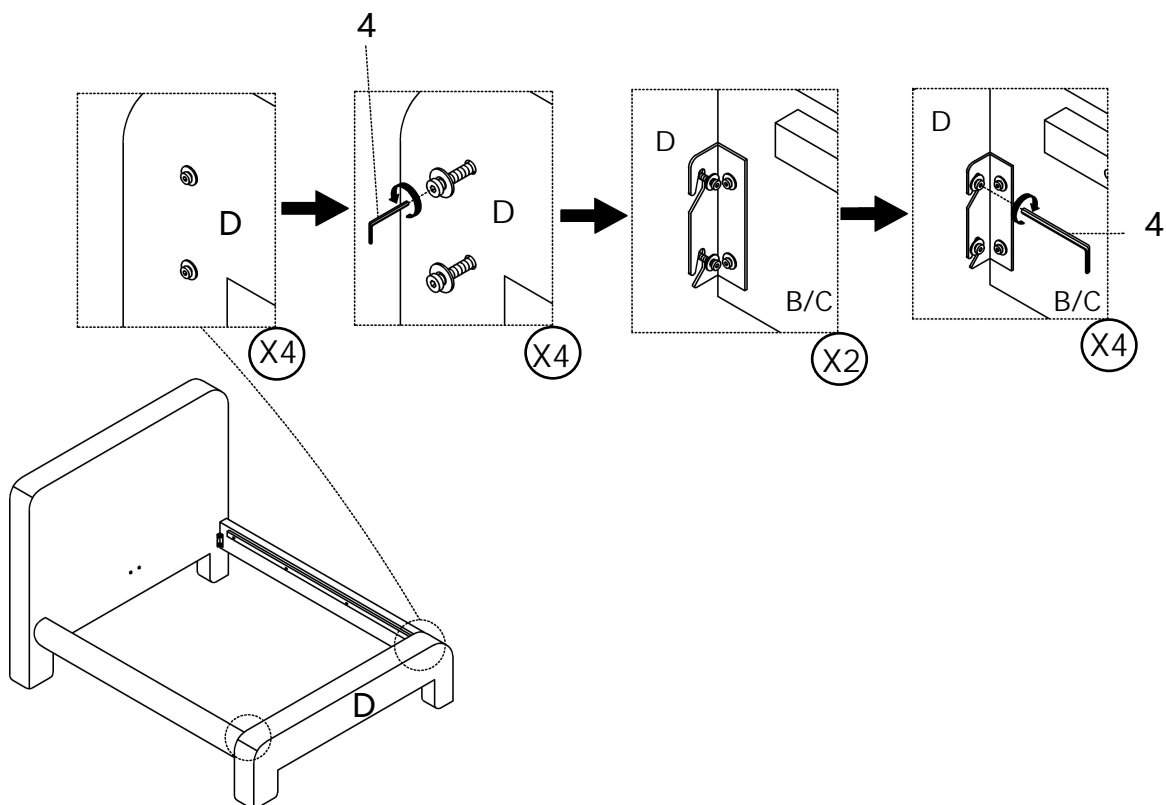


STOP

IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 3, 4, & 5 AND
REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 3.


MOCOA UPHOLSTERED BED QUEEN ASSEMBLY INSTRUCTIONS



STEP 3

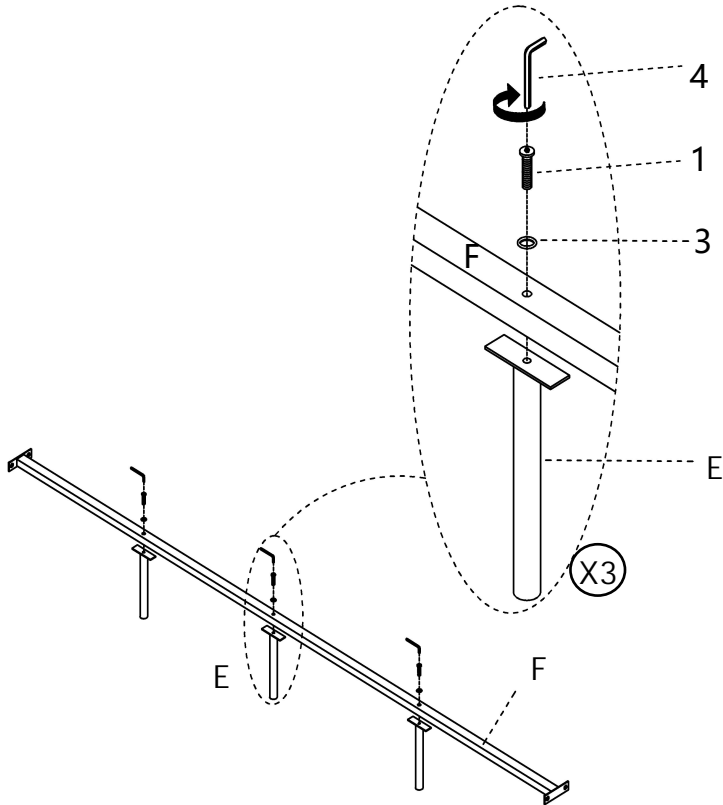


STEP 4

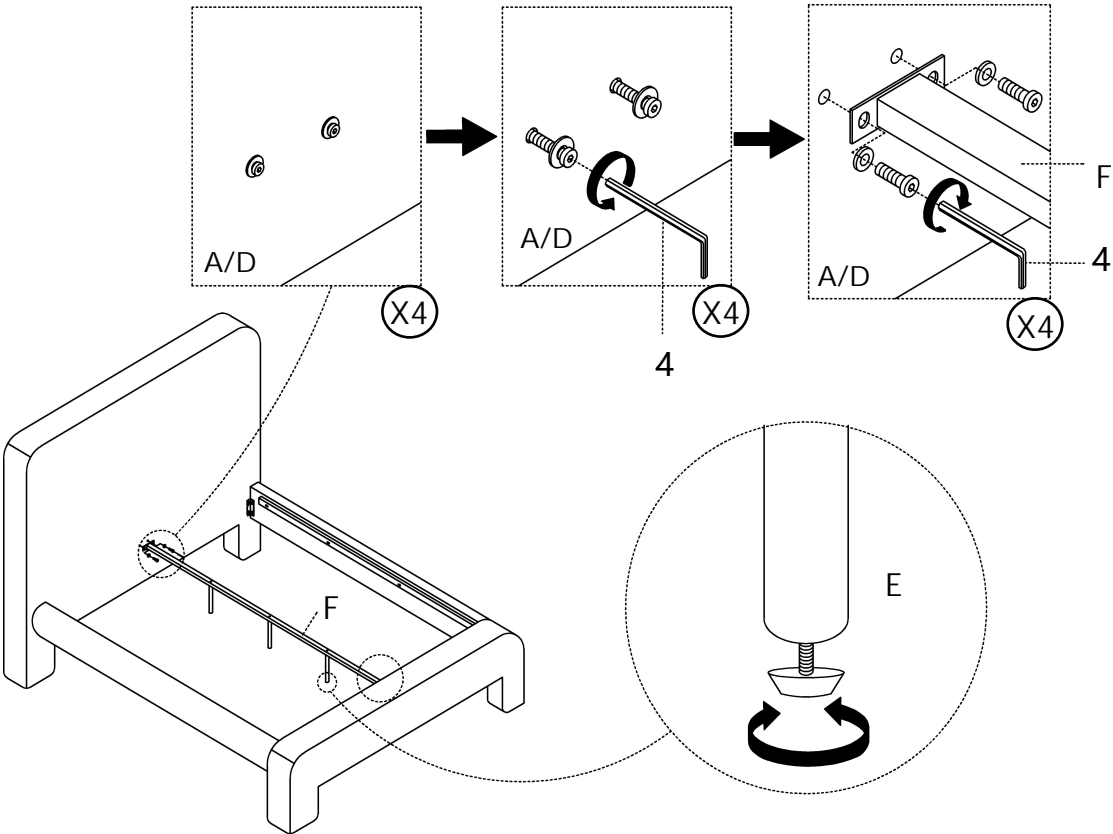


MOCOA UPHOLSTERED BED QUEEN ASSEMBLY INSTRUCTIONS



STEP 5

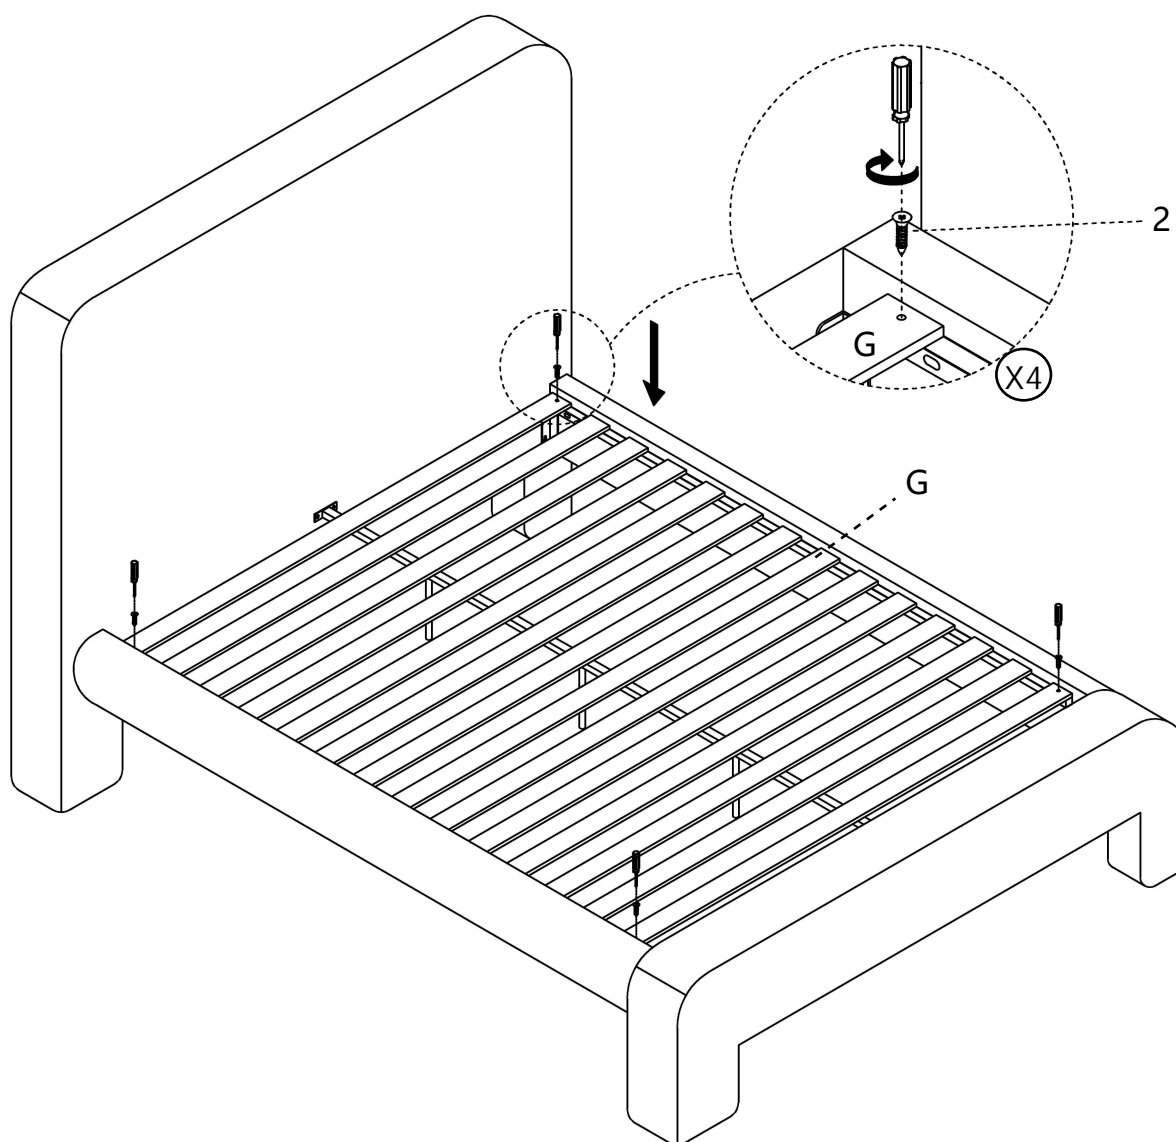

MOCOA UPHOLSTERED BED QUEEN ASSEMBLY INSTRUCTIONS

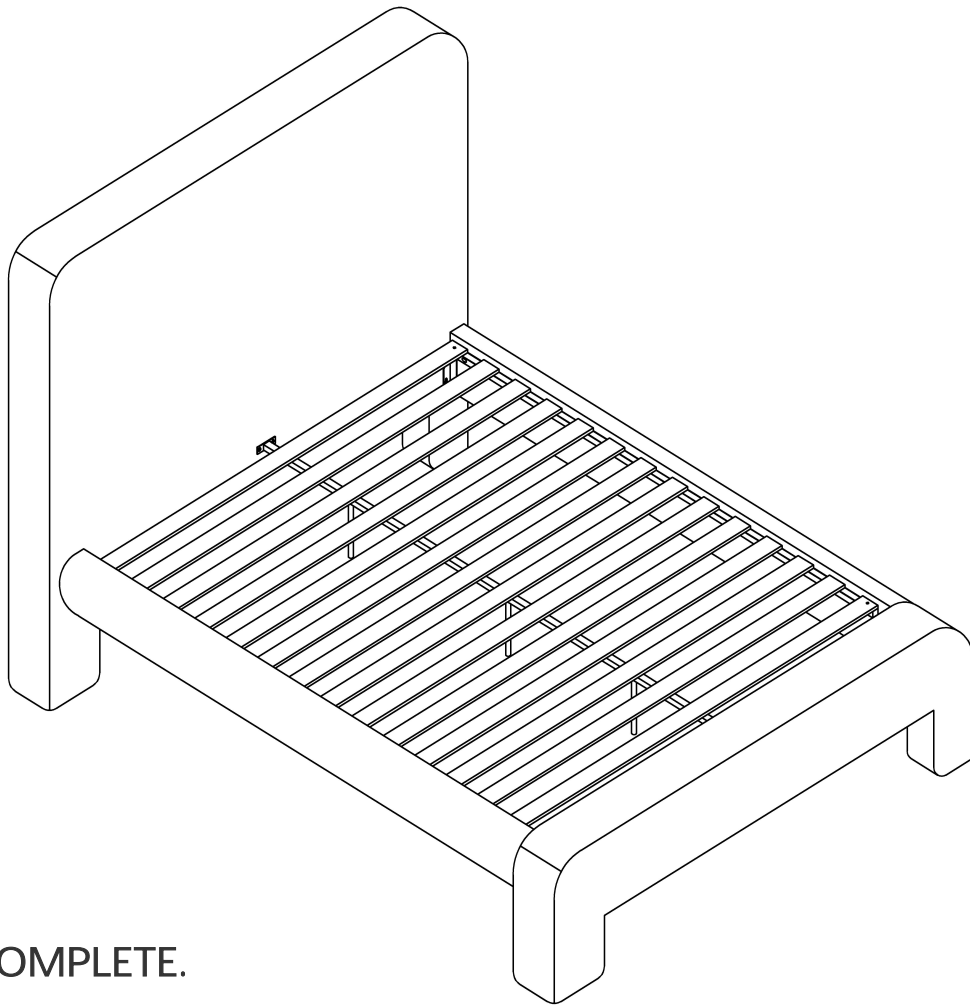


ASSEMBLY COMPLETE.

INSTRUCTIONS FOR ADJUSTING LEVELERS:

POSITION THE BED IN YOUR ROOM.
LOCATE LEVELERS UNDER EACH
SUPPORT LEG (E).

TURN COUNTER-CLOCKWISE TO
EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH LEG
SUPPORT IS APPLYING EQUAL UPWARD
PRESSURE ON THE CENTER SLAT.

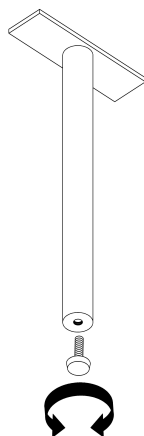

MAINTENANCE INSTRUCTIONS:

- PERIODICALLY CHECK ALL FITTINGS AND TIGHTEN IF NECESSARY, AS THEY CAN LOOSEN OVER TIME.
- ALWAYS REMOVE BOX SPRING AND MATTRESS BEFORE MOVING THE BED.
- LIFT THE BED WHEN MOVING IT. DRAGGING THE BED CAN DAMAGE THE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING THE BED.

MOCOA UPHOLSTERED BED QUEEN ASSEMBLY INSTRUCTIONS



APPENDIX A:ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

| | |
|------------------------|-------|
| E. SUPPORT LEG | 3 PCS |
| F. CENTER SLAT SUPPORT | 1 PC |
| G. SLAT ROLL | 1 SET |

STEP 1 :

USE ALLEN KEY (4) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

