
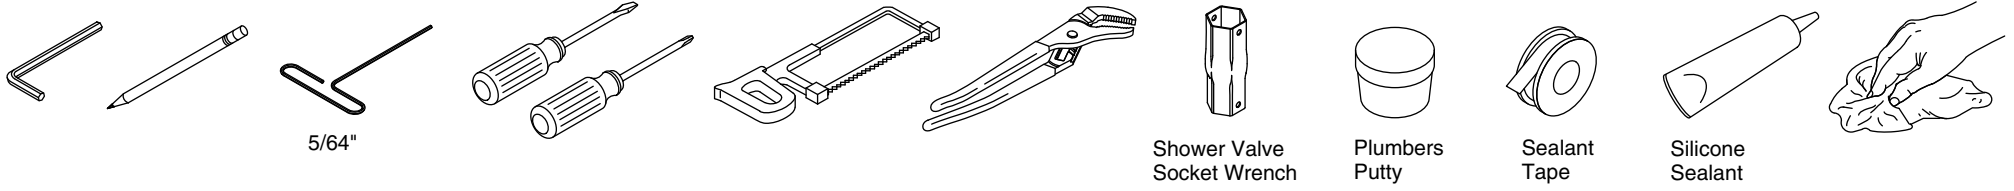
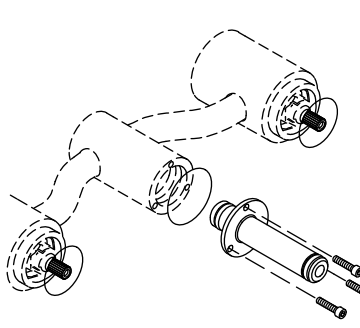
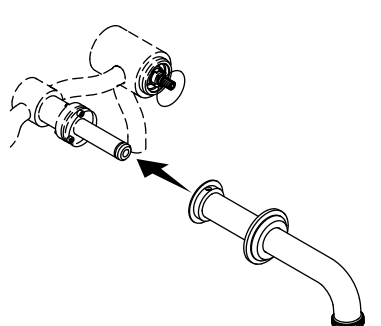
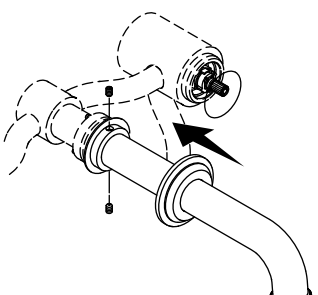
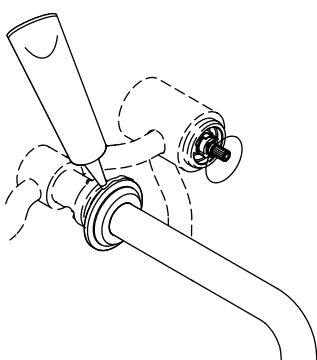
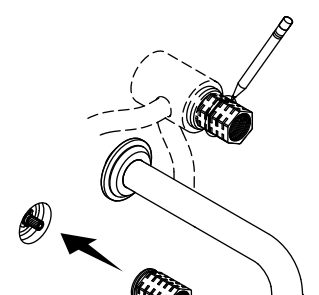
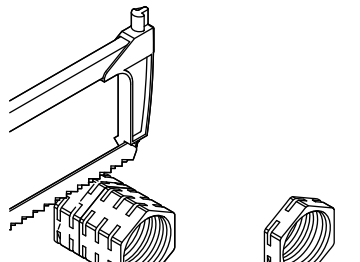
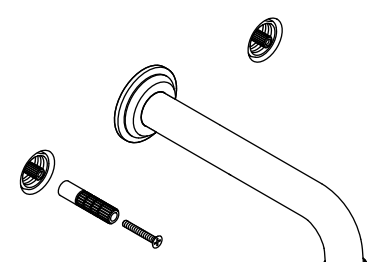
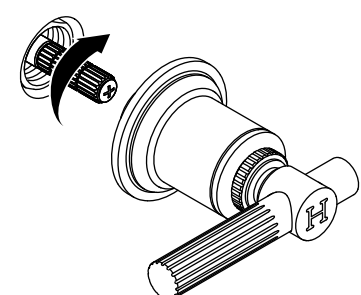
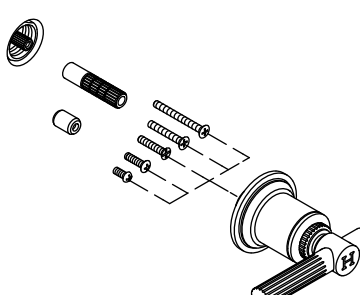
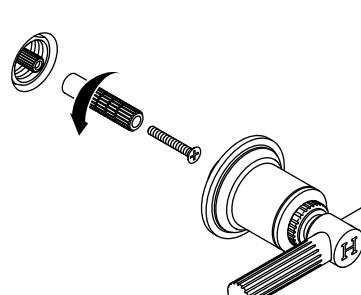
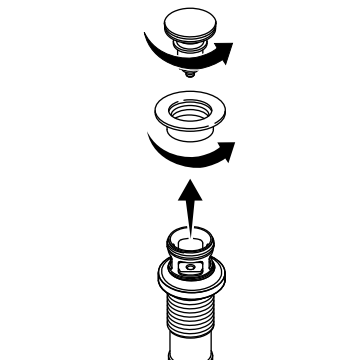
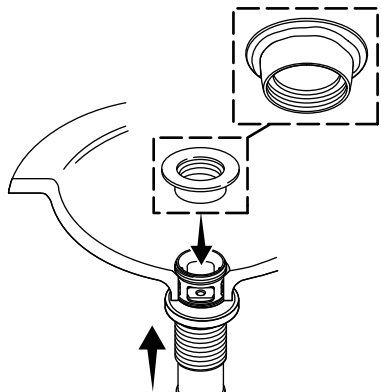
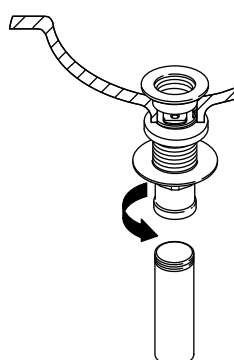
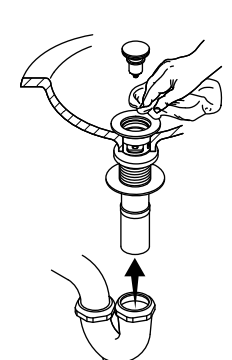


# KALLISTA®

## Installation Guide

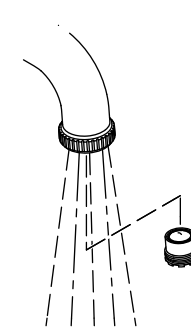

<p><b>Record your model number.</b></p>	<p><b>⚠ WARNING: Risk of scalding.</b> High water temperature can cause severe burns. Set the water temperature at or below 120°F (49°C) following the adjustment procedure in the valve Installation and Care Guide.</p> <p><b>⚠ NOTE:</b> Do not install aerator until after flushing the spout.</p>	<p><b>Important Information</b> Follow all local plumbing and building codes.</p>	<p><b>1</b> Attach the spout shank to the valve with the three socket head screws.</p> 	<p><b>2</b> With the spout pointing down, slide the spout over the shank until flush with the finished wall.</p> 
<p><b>3</b> Secure the spout with the setscrews. Slide the escutcheon over the spout until flush with the wall.</p> 	<p><b>4 Optional:</b> If desired, apply a bead of clear silicone sealant around the escutcheon.</p> 	<p><b>5</b> Using a shower valve socket wrench, fully thread the sleeve onto the valve. Mark where the sleeve is flush with the wall.</p> 	<p><b>6</b> Remove the sleeve and cut at the notch closest to the inside of the mark. The cut sleeve should not protrude beyond the finished wall.</p> 	<p><b>7</b> Reinstall the sleeve. Install the longest extension onto the valve stem with the longest screw.</p> 
<p><b>8</b> Place the handle horizontally onto the stem extension. Thread the escutcheon into the sleeve.</p> 	<p><b>9</b> If the escutcheon is not flush with the wall when fully threaded, use the short stem extension or cut the extension to 11/16" (17 mm) past the finished wall. Use the appropriate length screw.</p> 	<p><b>10</b> To adjust handle position, rotate the extension one tooth. Repeat until aligned.</p> 	<p><b>11</b> Disassemble the drain.</p> 	<p><b>12</b> Apply plumbers putty to the flange and thread onto the drain body.</p> 
<p><b>13</b> Tighten the nut. Apply sealant tape to the drain pipe threads.</p> 	<p><b>14</b> Install the stopper. Connect the trapway. Wipe away excess putty.</p> 	<p><b>15</b> Remove the aerator with the key. Run the water for 1 minute to flush debris.</p> 	<p><b>16</b> Reinstall the aerator with the key.</p> 