
# **Avington / Mia / Hayes**

Two Door Wall Cabinet With Cubbies

Model # AXCBSAVN04-WH

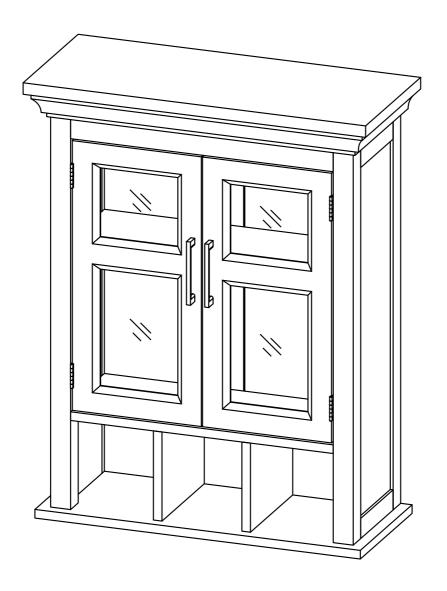

brooklyn + max





### It's time to register your product warranty.

It's quick and easy. And you'll be happy you did.



- ✓ Activate your **1-year** warranty
- ✓ Automatic entry to win a \$500 gift certificate
- ✓ Earn instant rewards and save



simpli-home.com/product-registration

## Review your product and collect rewards!

Thank you for your purchase! We hope you enjoy it. We'd love your feedback. Please share a review and get instant rewards!






simpli-home.com/product-review



## Share photos and get your cash back!



Send us images or share them on social and qualify for instant rewards. You may even receive store credit on your entire purchase!





simpli-home.com/share-images

#### **For Fastest Customer Service:**



- 1. Open your phone's camera.
- 2. Point your phone's camera at the QR code to scan.
- 3. Click on the pop up.
- 4. You'll be taken to our customer service page.
- 5. Fill the form with your order information and issue.
- 6. Submit form.
- 7. A customer service associate will contact you.

#### Other ways to contact us...



#### **Email Us**

customer service@simpli-home.com



#### **Visit Us**

Visit our site directly at www.simpli-home.com



#### Call Us

1-866-518-0120 Monday to Friday 9am to 5pm EST

\*If you've purchased from a retailer and you wish to return the product, please contact the retailer directly.

**IMPORTANT**: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

### **Safety Information**

#### This furniture is designed for indoor use.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

**WARNING**: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.


#### May require 2 people for ease of assembly.


#### **Care & Maintenance**

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with a soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place this furniture in direct sunlight. Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

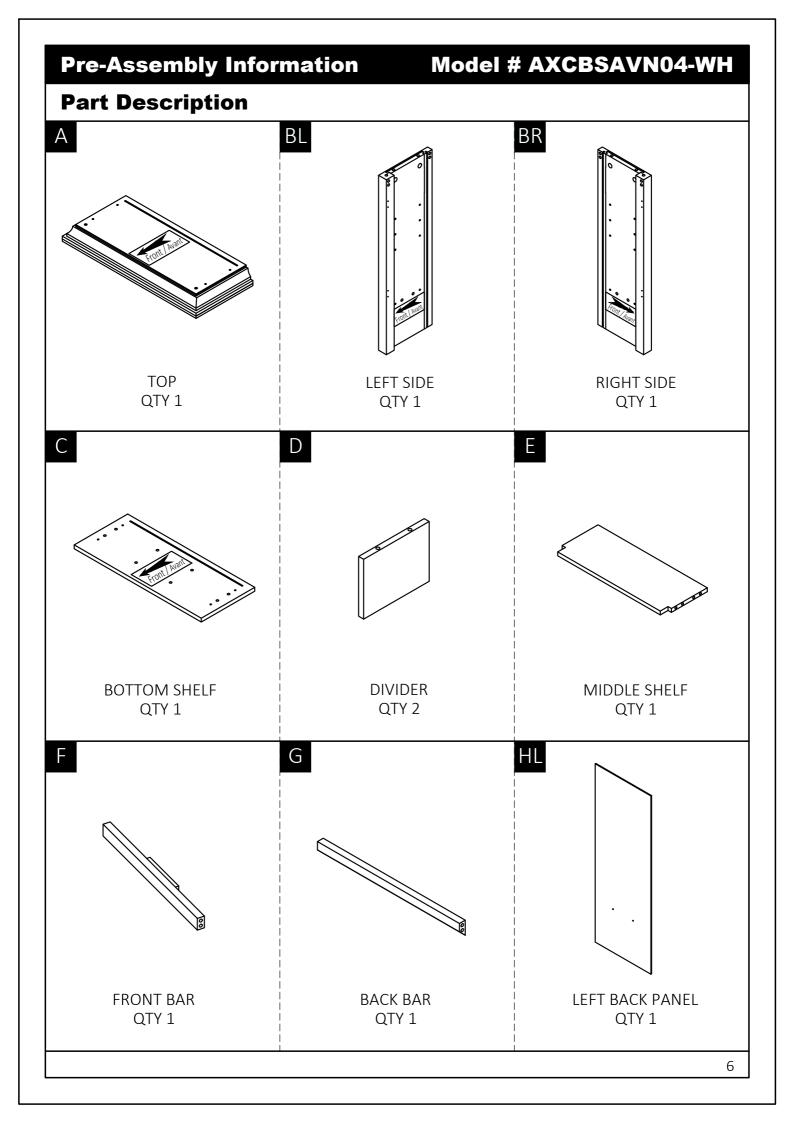

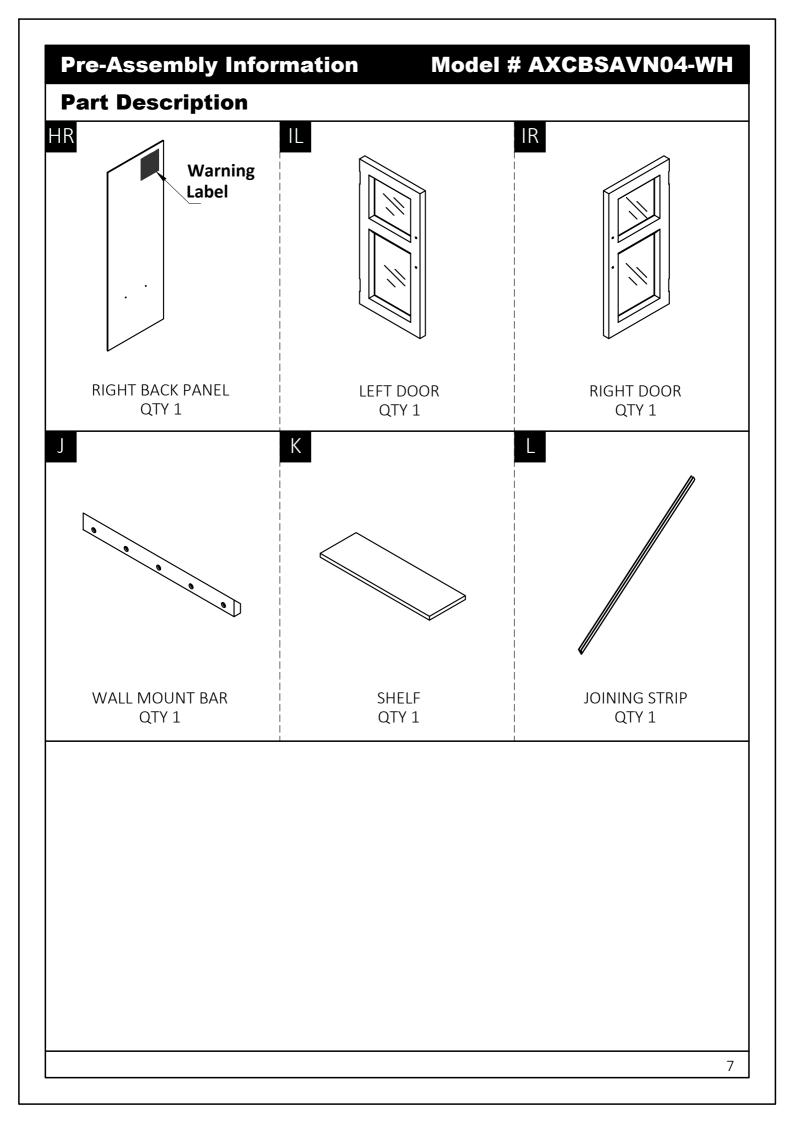

## **Model # AXCBSAVN04-WH Pre-Assembly Information Hardware Description** 3 **CAM LOCK PIN** WOOD DOWEL CAM LOCK Ø8 X 30mm HINGE QTY 8 SETS **QTY 26** QTY 4 5 6 4 PHILLIPS SCREW PHILLIPS SCREW MAGNET AND PLATE M4 X 50mm M3 X 15mm QTY 2 SETS QTY 9 **QTY 24** 9 8 **HANDLE** SHELF SUPPORT M4 X 25 mm WALL ANCHOR QTY 4 QTY 2 SETS QTY 4 10 Required -






PHILLIPS SCREW ROUND HEAD M4 X 15mm QTY 4




Flathead screwdriver Phillips screwdriver Rubber mallet **Not Included** 


## **Components - Key Diagram**

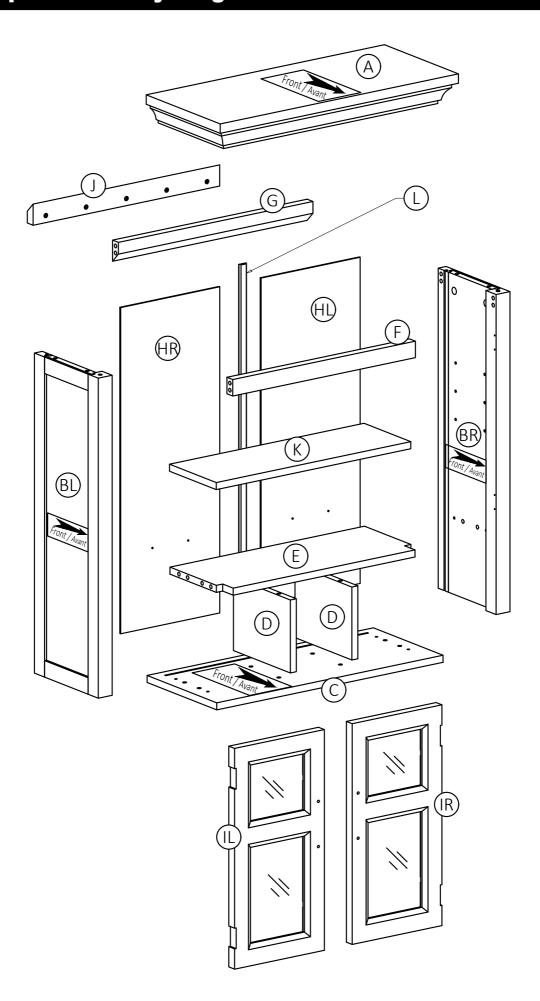


#### **Assembly**

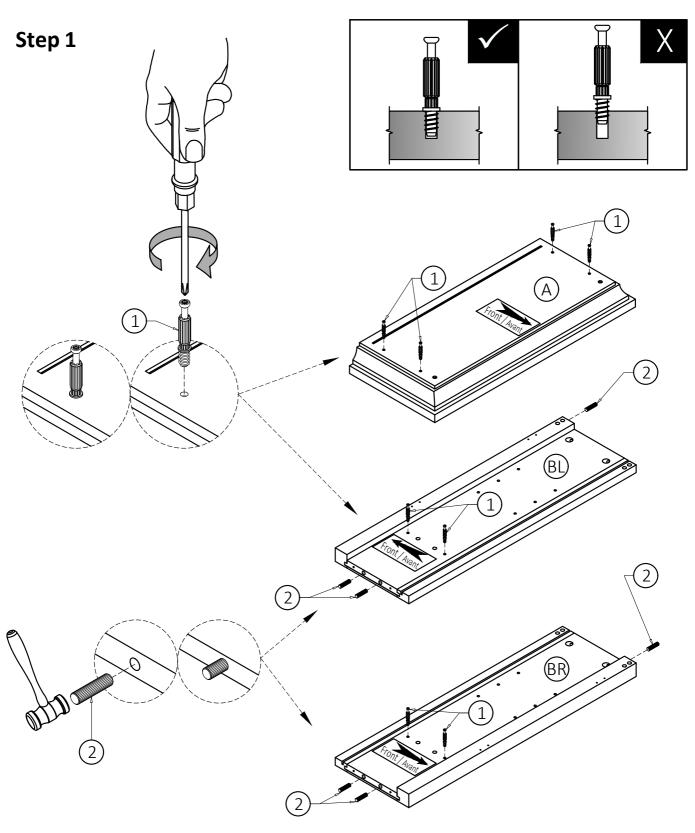


- 1. Attach Cam Lock Pins (1) into pre-drilled holes on parts (A), (BL), (BR).
- 2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.
- 3. Insert three Dowels (2) into guide holes on each Side (BL), (BR).
- 4. Use rubber mallet to tap Dowels 2 into bottom of holes securely. 1/2 length of Dowels should be exposed.

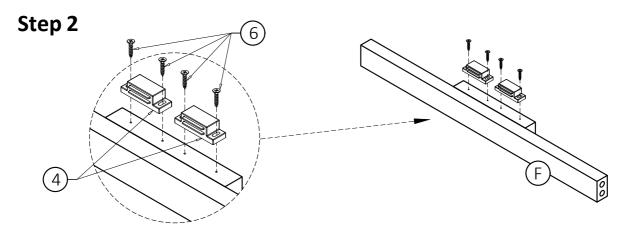


- 1. Attach Magnets (4) using Phillips Screws (6) into pre-drilled holes Front Cross Bar (F).
- 2. Use Phillips screwdriver to secure screws. Do not over-tighten.

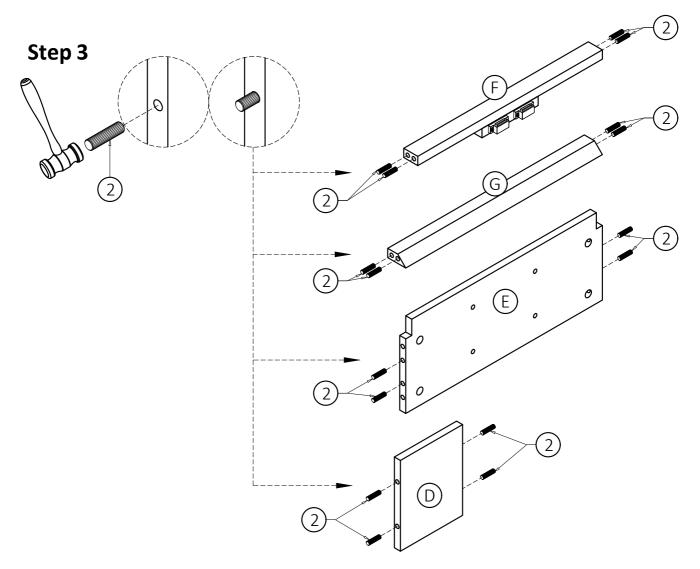

- 1. Insert four Dowels 2 into guide holes on each part  $\mathbb{D}$ ,  $\mathbb{E}$ ,  $\mathbb{F}$ ,  $\mathbb{G}$ .
- 2. Use rubber mallet to tap Dowels 2 into bottom of holes securely. 1/2 length of Dowels should be exposed.

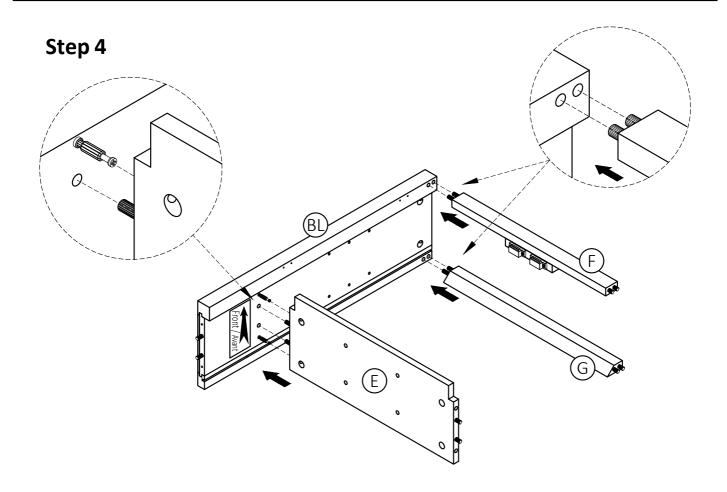


1. Align Wood Dowels with guide holes and attach parts E, F, G to Left Side BL.

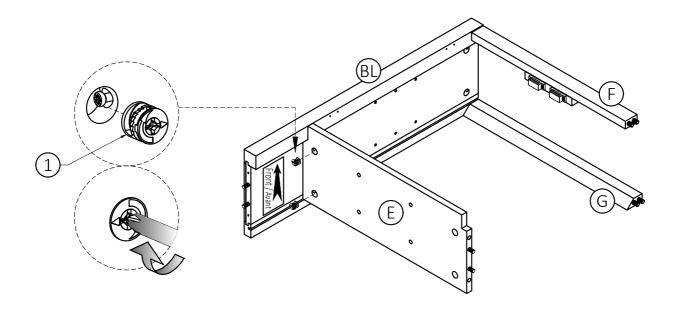


- 2. Insert two Cam Locks 1 into guide holes on Bottom Shelf (E).
- 3. Use Phillips screwdriver to secure Cam Locks.

# Assembly


## Model # AXCBSAVN04-WH

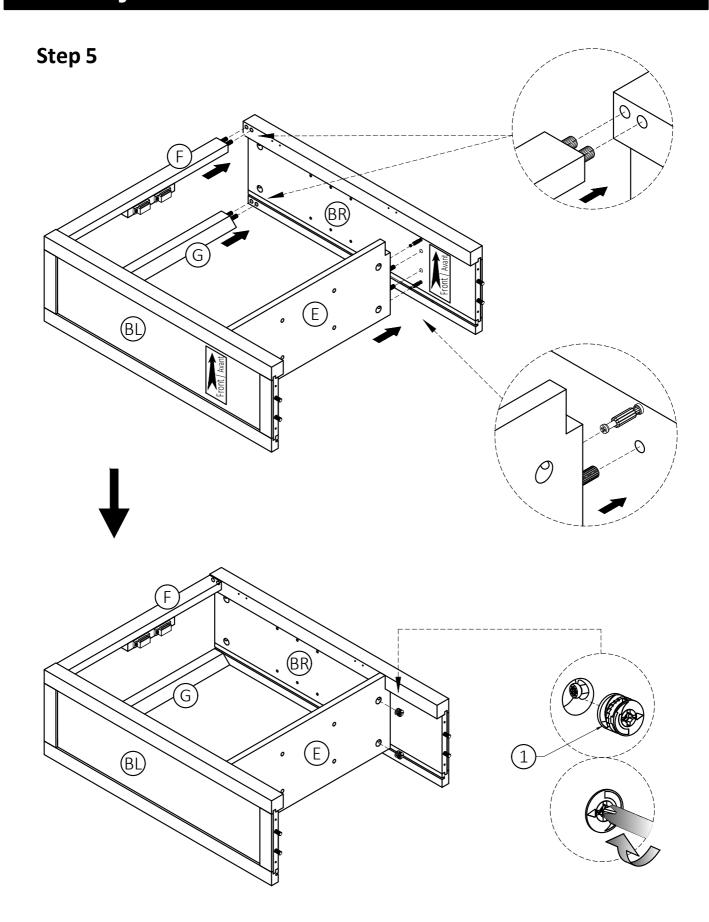


1. Repeat Step 4 for the Right Side (BR).

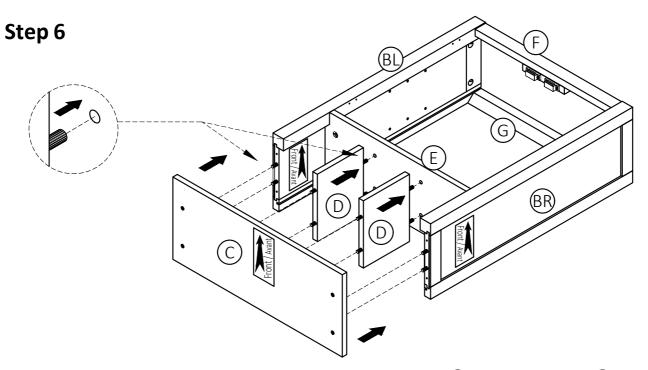


- 1. Align Wood Dowels with guide holes and attach Divders ① to Middle Shelf ②.
- 2. Align Wood Dowels with guide holes and attach Divders (D) and Sides (B), (BR) to Bottom Shelf (C).

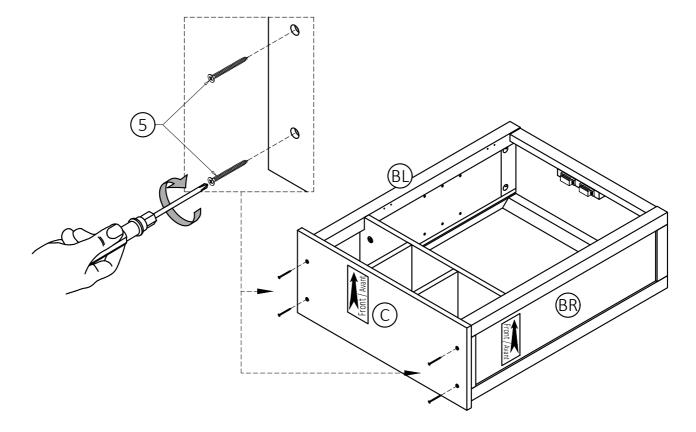


- 3. Use four Phillips Screws (5) to attach Bottom Shelf (C) through guide holes from Bottom Shelf (C) to pre-drilled holes of Sides (BL), (BR).
- 4. Use Phillips screwdriver to secure Screws. Do not over-tighten.

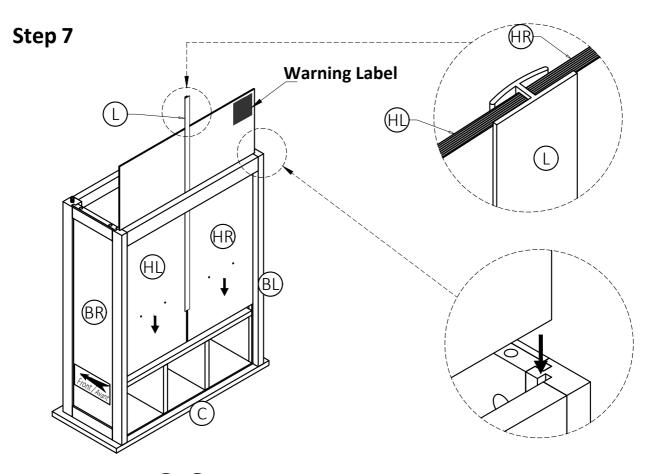


- 1. Insert Back Panels (HL), (HR) into the slot of Joining Strip (L).
- 2. Slide Back Panels (HL), (HR) firmly into slots on Sides (BL), (BR) and Bottom Shelf (C).

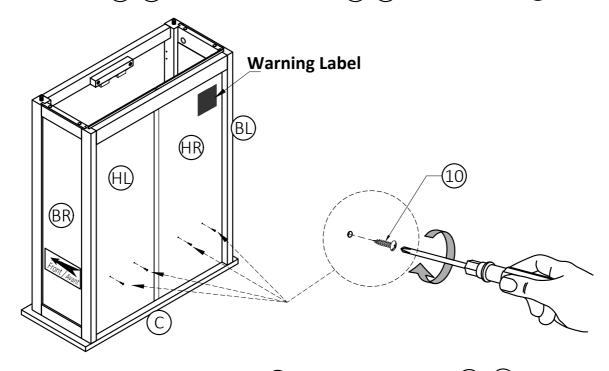


- 3. Use four Phillips Screws Round Head 10 to attach Back Panels (HL), (HR) through guide holes.
- 4. Use Phillips screwdriver to secure Screws. Do not over-tighten.

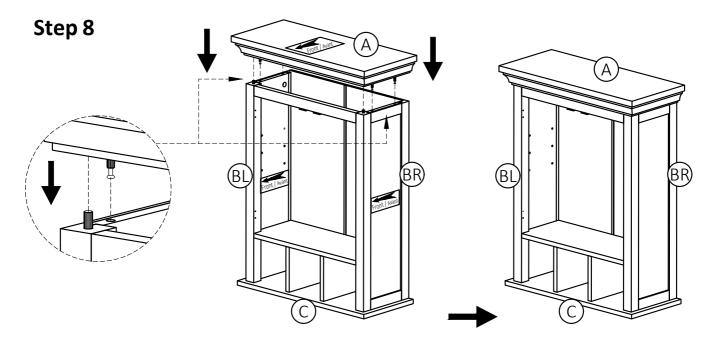


1. Align Cam Lock Pin and Wood Dowels with guide holes on Sides (BL), (BR) and Top (A) and attach Top (A) to Sides (BL), (BR).

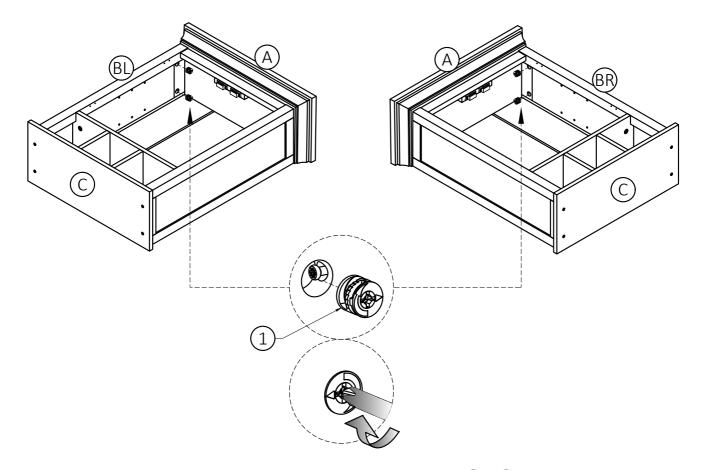


- 2. Insert two Cam Locks 1 into guide holes on each Side BL, BR.
- 3. Use Phillips screwdriver to secure Cam Locks.

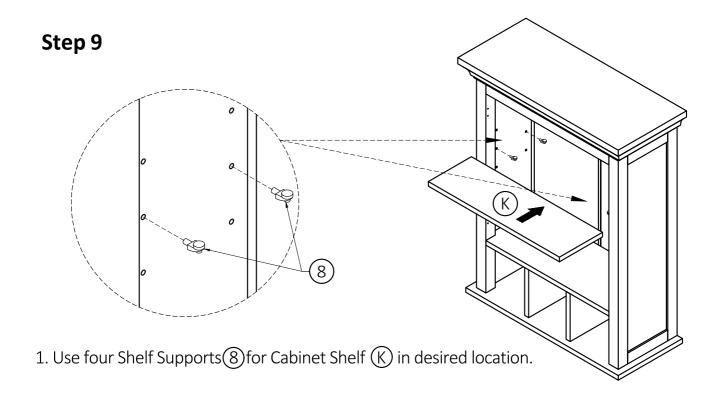

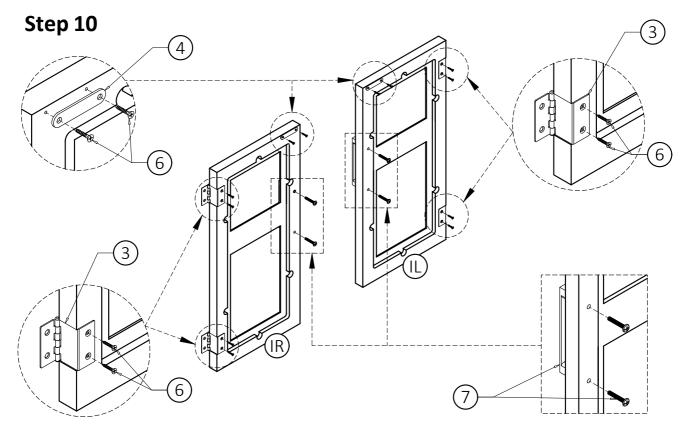


- 1. Attach Hinge (3) to Doors (IL), (IR) using Phillips Screws (6) into pre-drilled holes on Doors (IL), (IR).
- 2. Attach Magnet Plates 4 to top corner of Doors (L),(R) using Phillips Screws 6 into pre-drilled holes on Doors (L),(R).
- 3. Use Phillips screwdriver to attach Handles 7 to Doors (L), (R).

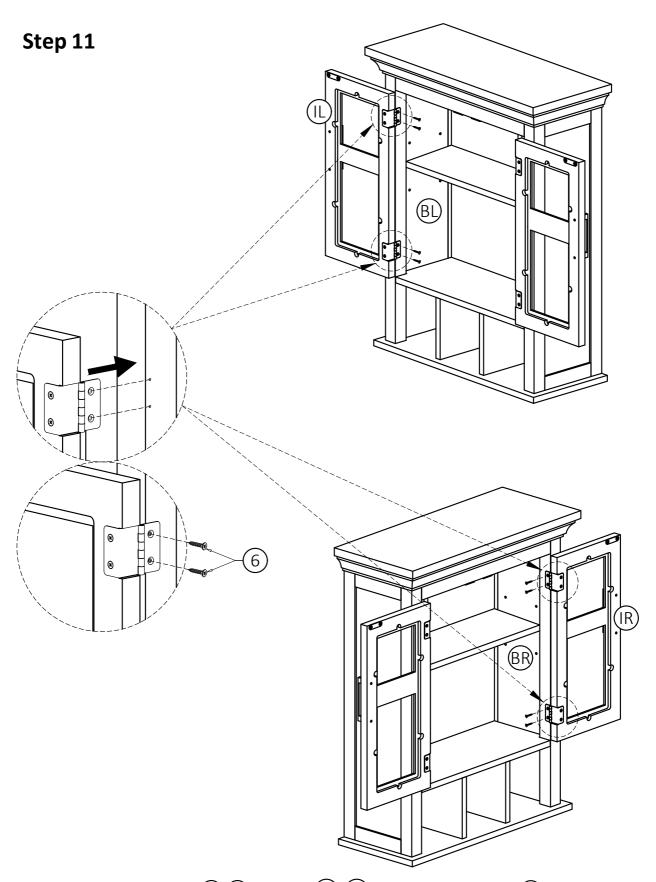



- 1. Attach Hinge on Doors (L), (R) to Sides (BL), (BR) using Phillips Screws (6) into pre-drilled holes on Sides BL, BR.

  2. Use Phillips screwdriver to secure screws. Do not over-tighten.

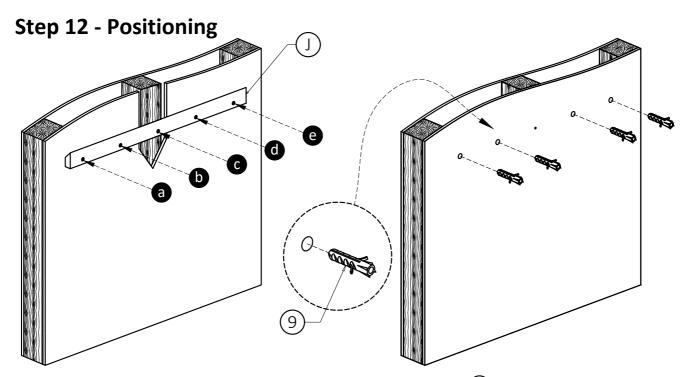

- 1. Determine the location for the unit on the wall. The Top (A) should be approximately 1 ¼" above the top of the Wall Mount Bar (J) when mounted.
- 2. Place the Wall Mount Bar ① at the predetermined height. Use a level to ensure that it is straight. The flat side of Wall Mount Bar ① should face outward away from the wall. Hole (c) should align with your studs. Carefully mark the position of each hole using the tip of the Phillips Screw ⑤.
- 3. Install four Wall Anchors (9) to positions (a),(b),(d),(e) using a Phillips screwdriver. Anchors are self-tapping and do not need pre-drilled holes.
- 4. Use your drill to create 1 hole 0.15" diameter x 2" deep at position (c).

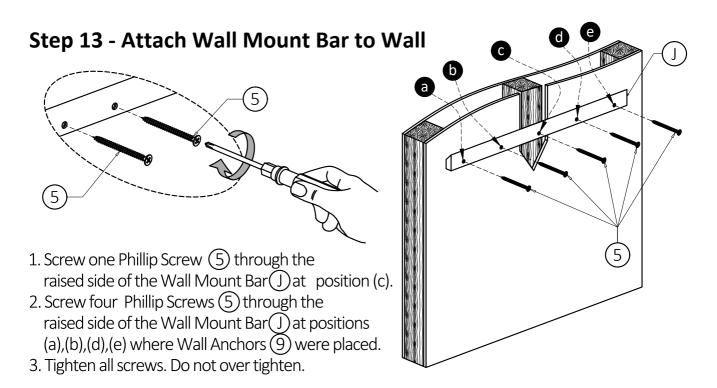

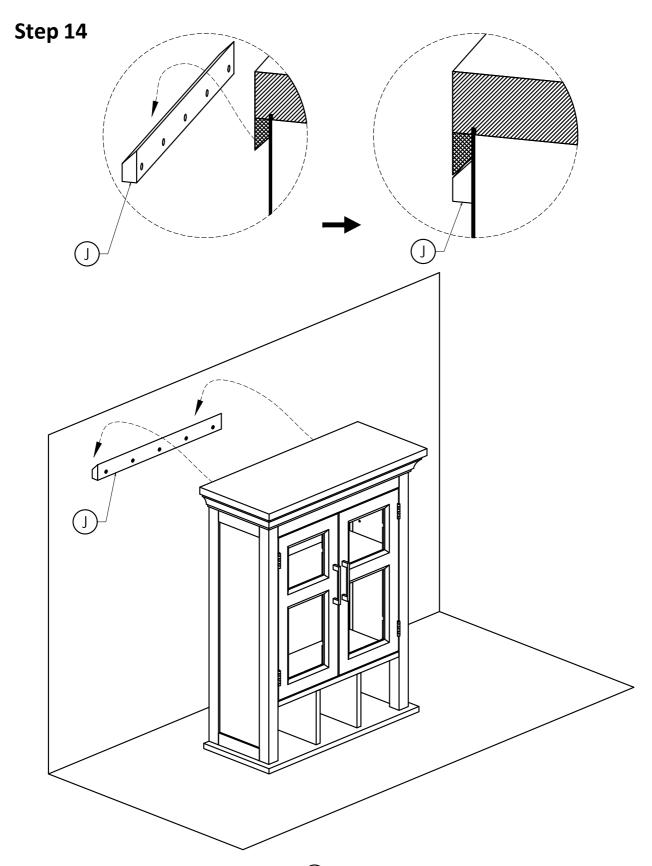

- 1. Align the top of the Wall Mount Bar (J) with the bottom of the angled bracket on the back of the Cabinet.
- 2. Gently slide the Cabinet down on to the Wall Mount Bar ①.