
a m e r i c a n d r e w
•inspired design•
Tel8:2 8 - 7 2 8 - 3 2 6 1
w w w . a m e r i c a n d r e w . c o m

ASSEMBLY INSTRUCTIONS

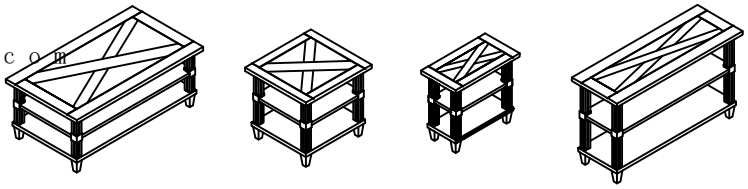

016-910 016-915 016-917 016-925

TOOLS REQUIRED:

Allen key (supplied, part # H)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Turn the table top upside down on to a clean soft surface.

2. Attach legs to the Table with Bolt (A), Lock washer (C) and Flat washer (D). Tighten all bolt with Allen key (H). (See Figure 1)

3. Attach legs to the Table apron with Hex nut (E), Lock washer (F) and Flat washer (G). Tighten all bolt with Spanner Wrench (I). (See Figure 1)

4. Install shelf into slot of legs, align pre-drilled holes in base with hole in bottom of Legs, using Flat Washer (D), Lock Washer (C), Bolt (B) and tighten all Allen key (H).
(See Figure 2)

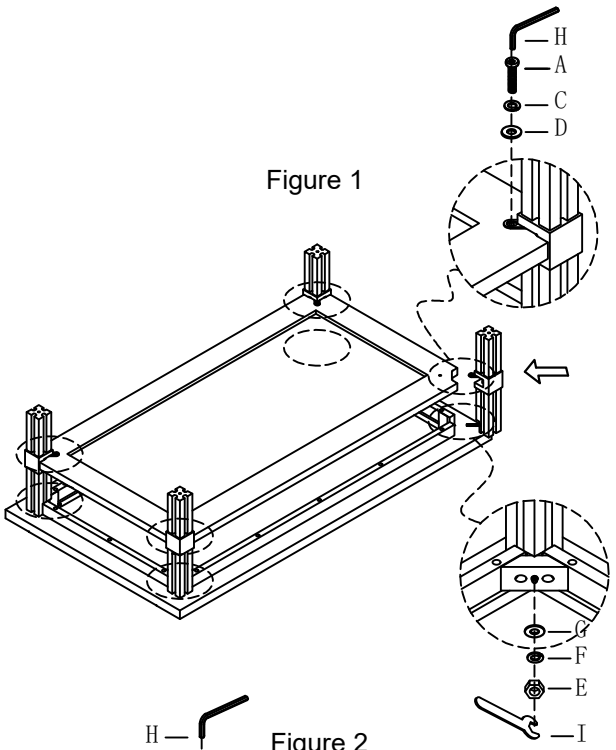


Figure 1

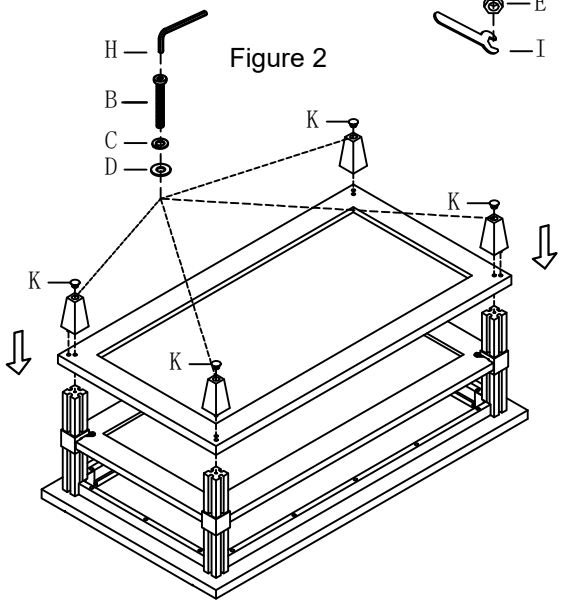


Figure 2

No.		Hardware List	Q'ty
A		Bolt (5/16″x3/4″)	4pcs
B		Bolt (5/16″x4″)	4pcs
C		Black Lock Washer (5/16″)	8pcs
D		Black Flat Washer (5/16″)	8pcs
E		Hex nut (5/16″x12mm)	4pcs
F		Yellow Lock Washer (5/16″)	4pcs
G		Yellow Flat Washer (5/16″)	4pcs
H		Allen Wrench (100*50*4mm)	1pc
I		Spanner Wrench (12mm)	1pc
K		Plastic Cap (Φ19*15+Φ30*4mm)	4pcs

Thank you for purchasing furniture from american drew!