


ASSEMBLY INSTRUCTIONS



Bath Shelf w/ 2 Towel Rods

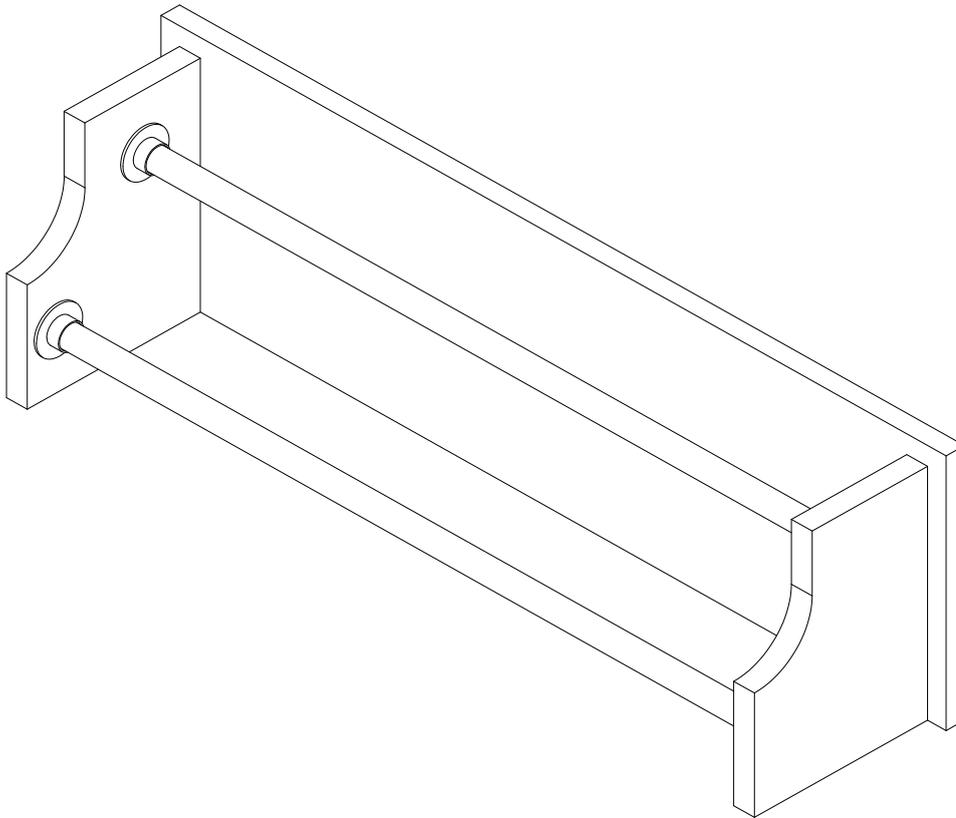

REPLACEMENT PARTS


Please do not contact the company purchased from as we can help you faster.

Order replacement parts and hardware at "boltonfurniture.com"

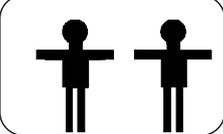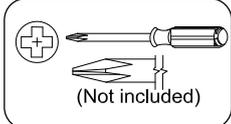 <p>. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!! . Please assemble on a clean soft surface to avoid damage.</p>	 <p>+</p>  <p>50 minutes</p>	<p><u>Tool Included</u></p>  <p>(Not included)</p>
--	---	--

www.boltonfurniture.com

Part List-Bath Shelf W/ 2 Towel Rods

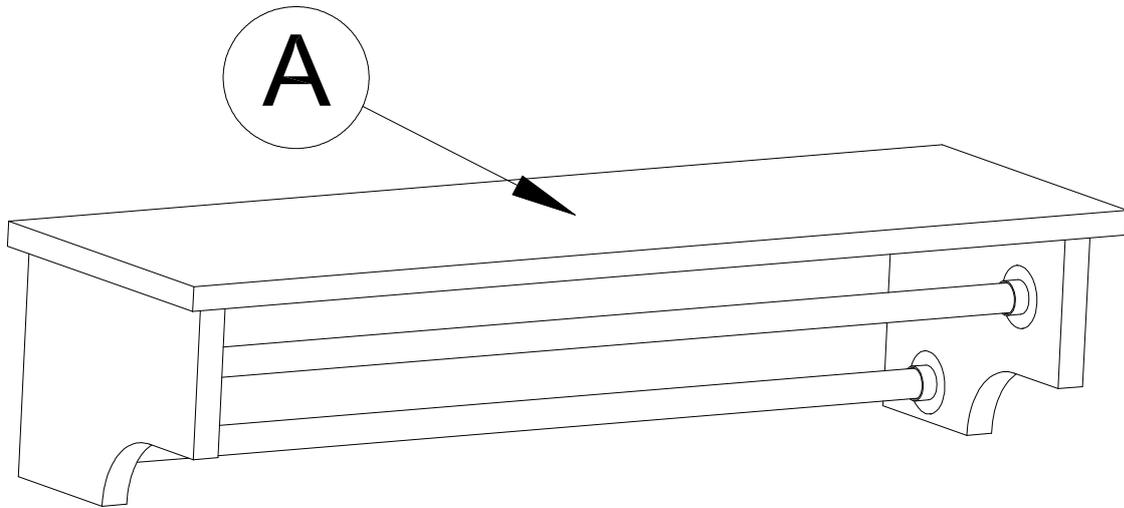

Identifying the hardware-Identify the hardware using the illustrations below.




www.boltonfurniture.com

Note: If possible, we recommend that when mounting the coat hook that at least one screw is secured in to a stud.

Step 1

Measure the distance between the two key holes on back of shelf. Mark the location on the wall where the shelf will be hung.

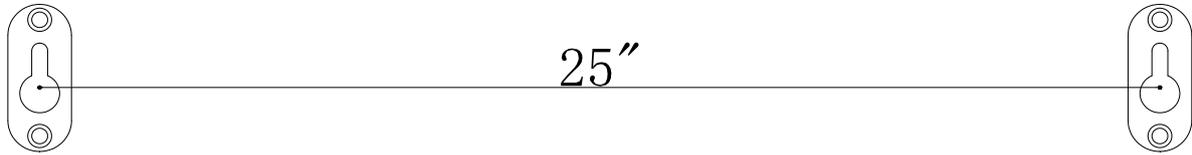


Step 2

Drill a 1/8" pilot hole 3/4" deep. This will mark the location for the screw that the coat hook will hang from.

Step 3



If hole location is aligned with a stud in wall, secure screw (B) directly in to the stud.

Note: Do not drive screw all the way in, keep head of screw out about 3/8".

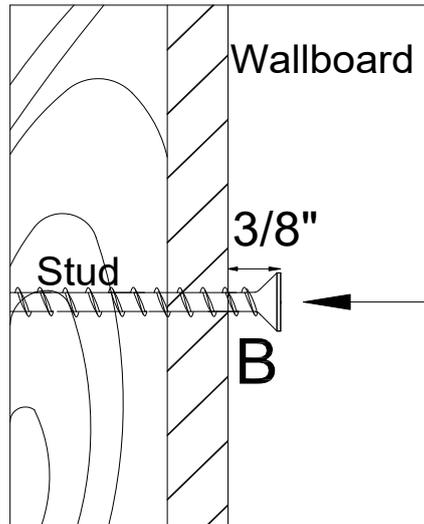

Step 4

If hole location does not align with the stud in wall, install the EZ Anchor(C) by tapping it in to the predrilled pilot hole in the drywall.

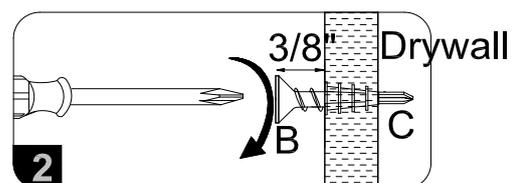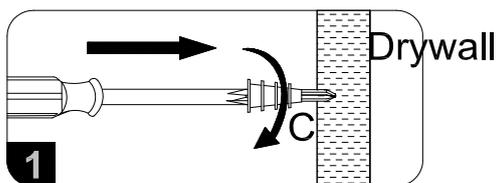

Step 5

Secure screws into EZ Anchor(C)

Step 6
Hang Coat Hook.

