


**IMPORTANT**

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.




Do not use power tools above 8 volts to assemble.

**Part List**

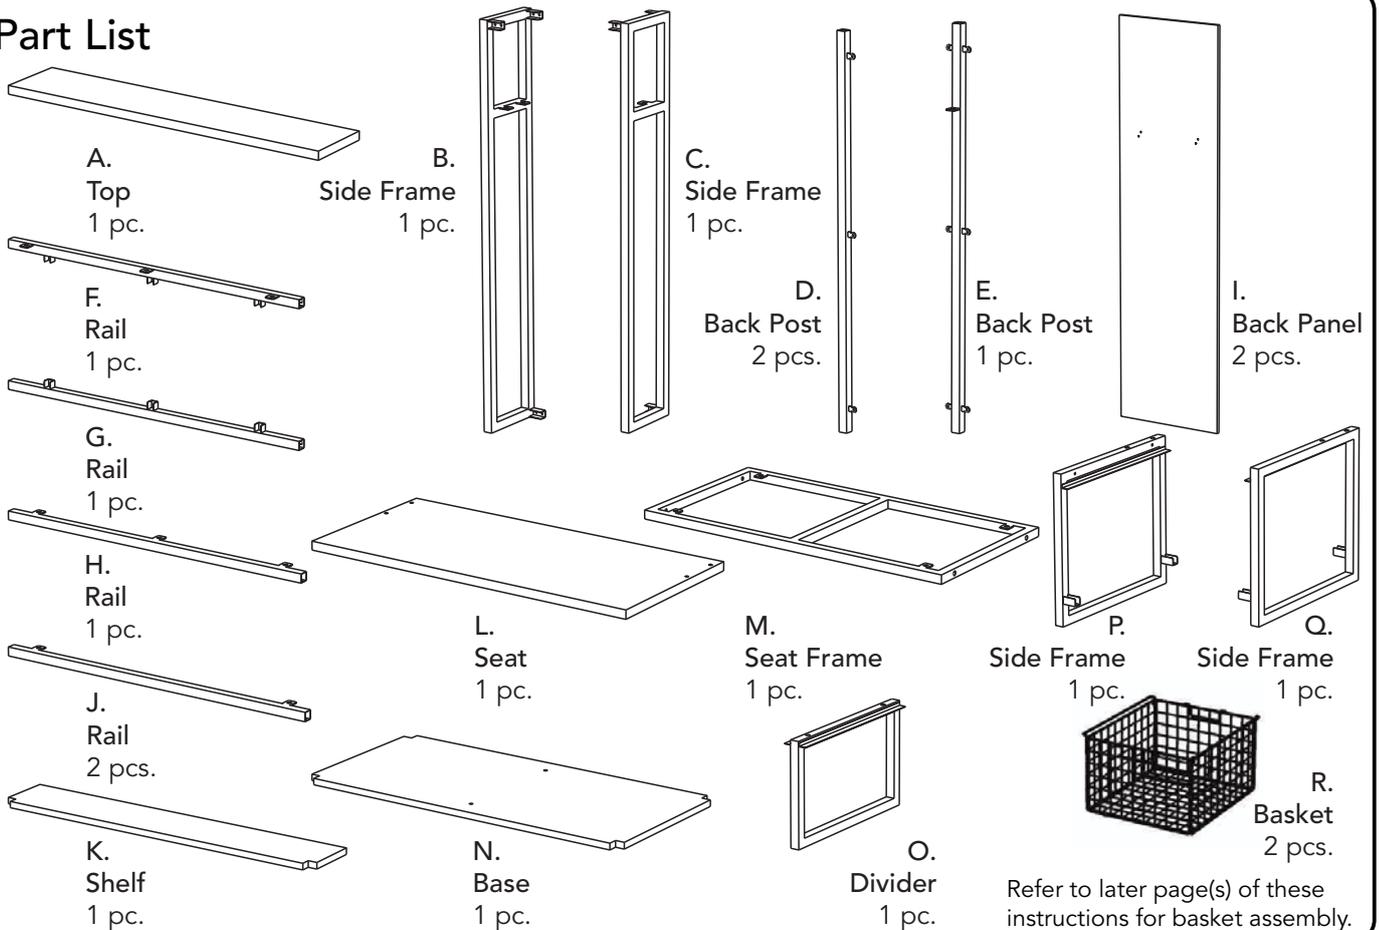

Refer to later page(s) of these instructions for basket assembly.

**Hardware List**

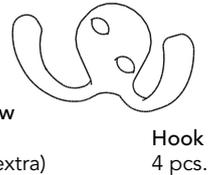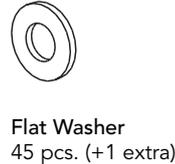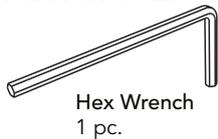

Tool(s) required for assembly: Phillips screwdriver, Level, Drill (8 volts or less), 3/8" Drill Bit

# Assembly Instructions 2/7

## IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

## STEP 1

Attach Rails (F) and (G) to Back Posts (D) and (E) with Flat Washers, Spring Washers and Head Cap Bolts, tightening bolts only halfway. (See Figure 1)



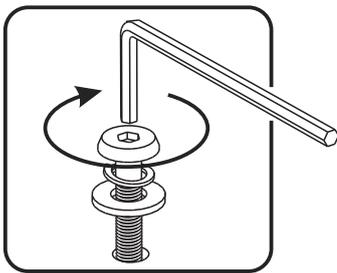


Figure 1

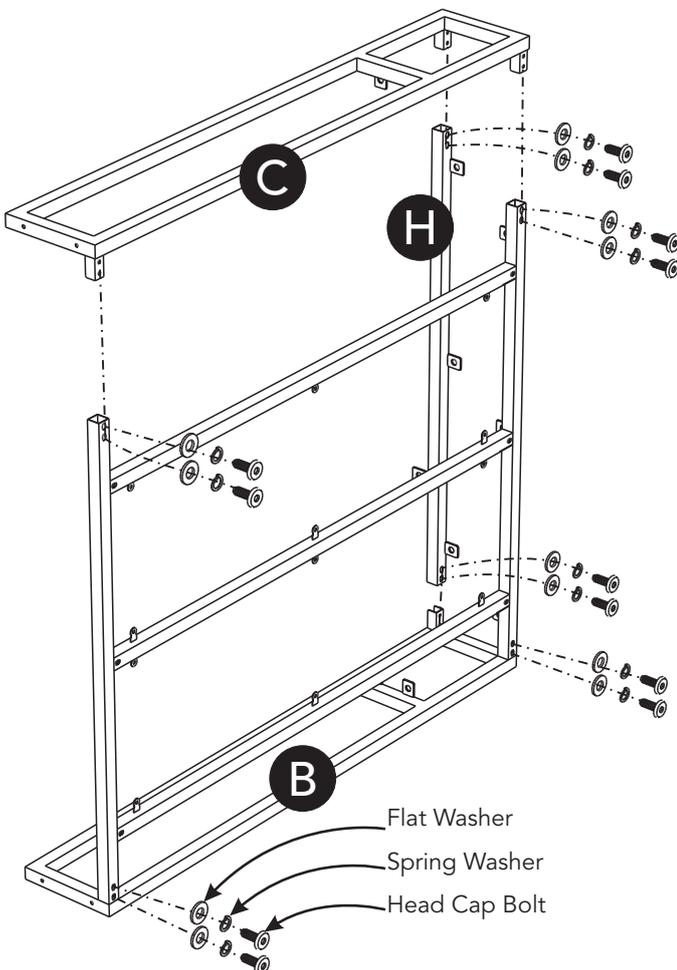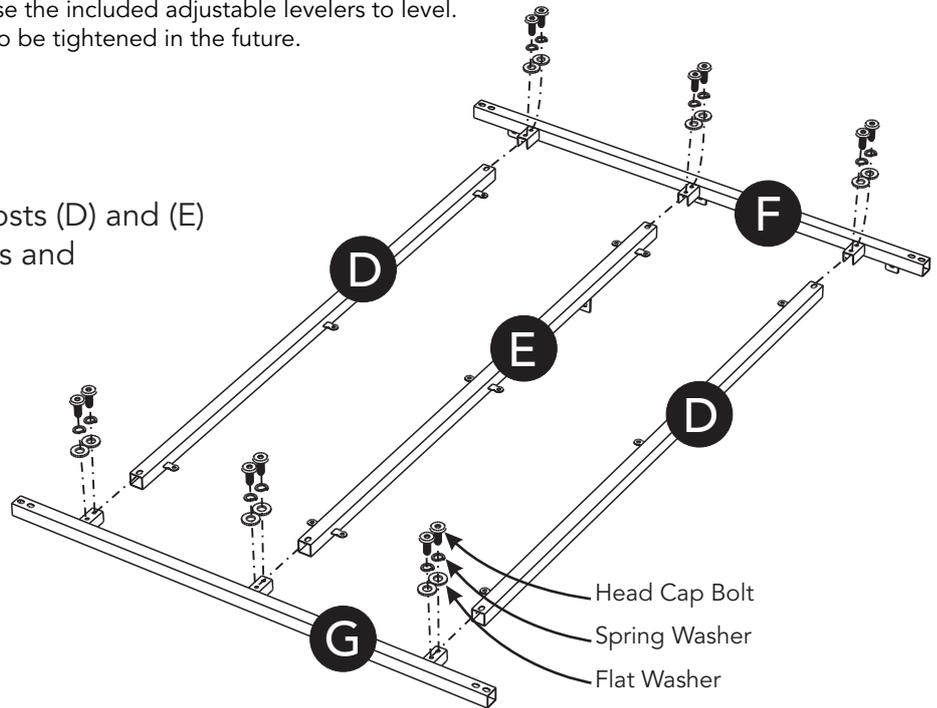

## STEP 2

Attach unit and Rail (H) to Side Frame (B) with Flat Washers, Spring Washers and Head Cap Bolts, tightening bolts only halfway. (See Figure 2)

Attach Side Frame (C) to unit with Flat Washers, Spring Washers and Head Cap Bolts, tightening bolts only halfway.

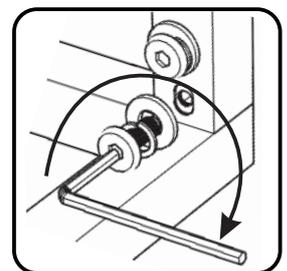


Figure 2

## Assembly Instructions 3/7

### STEP 3

Slide Back Panels (I) into position.

Attach Top (A) and Shelf (K) to unit with Flat Washers, Spring Washers and Head Cap Bolts, tightening bolts only halfway.

Tighten all bolts used in Steps 1, 2 and 3.

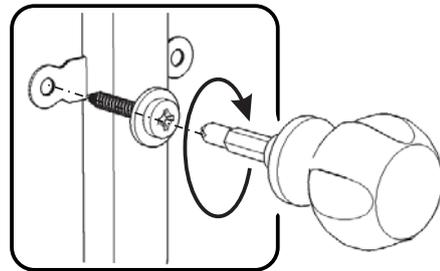
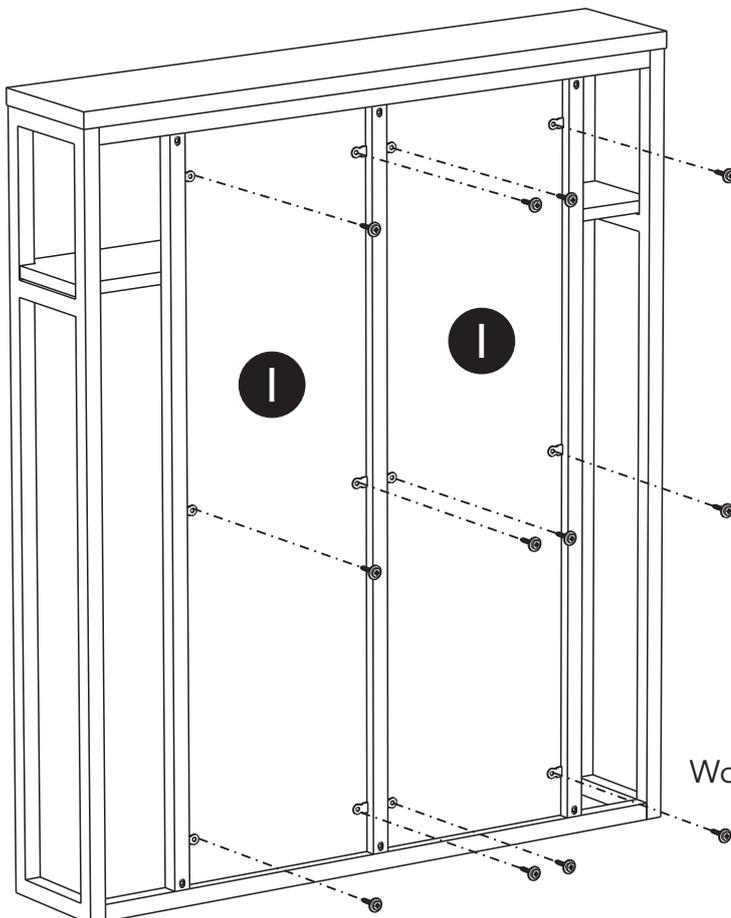
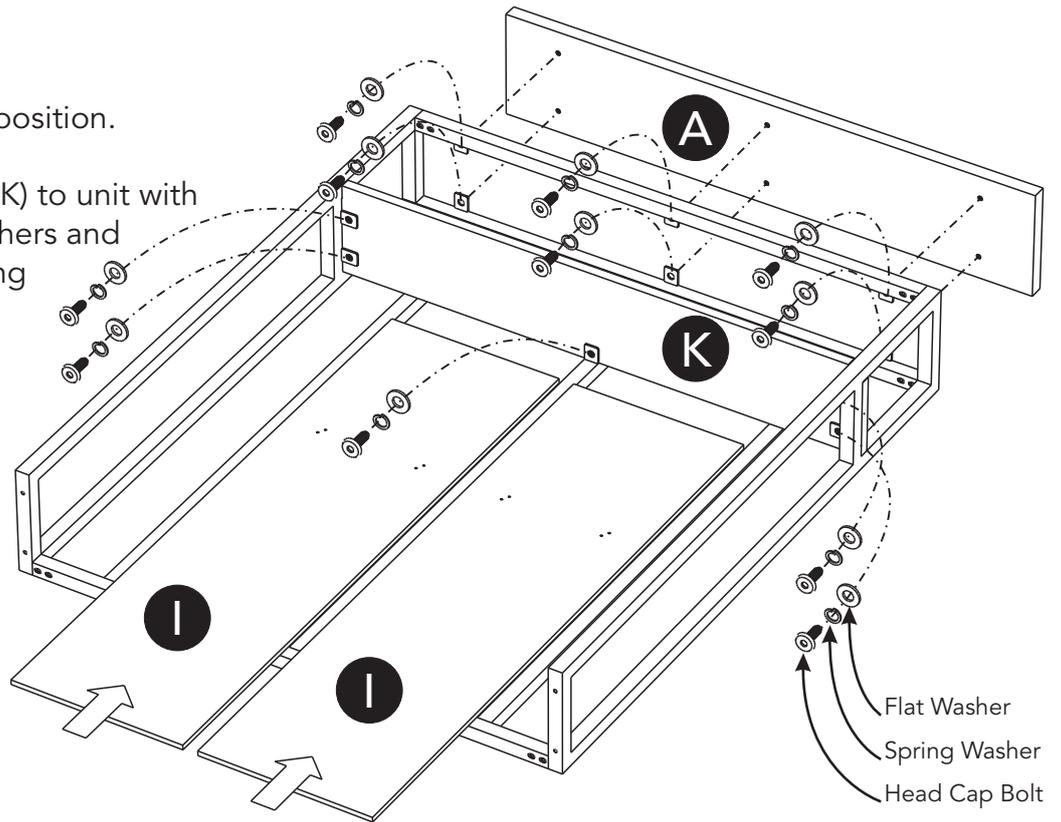


Figure 3

Wood Screw for Back Panel

### STEP 4

Turn unit to its upright position.

Attach Back Panels (I) to unit by inserting Wood Screws for Back Panel into pre-drilled holes, then tighten. (See Figure 3)

## Assembly Instructions 4/7

### STEP 5

Attach Rails (J) and Seat Frame (M) to Side Frame (Q) with Flat Washers, Spring Washers, Head Cap Bolts and Tapered Bolts (medium), tightening bolts only halfway. (See Figure 4)

Attach Side Frame (P) to unit with Flat Washers, Spring Washers, Head Cap Bolts and Tapered Bolts (medium), tightening bolts only halfway.

Tighten all bolts used in this step.


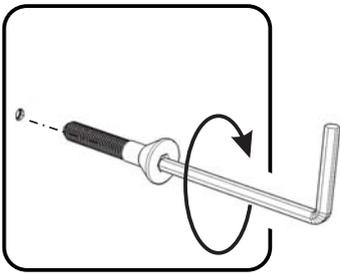


Figure 4

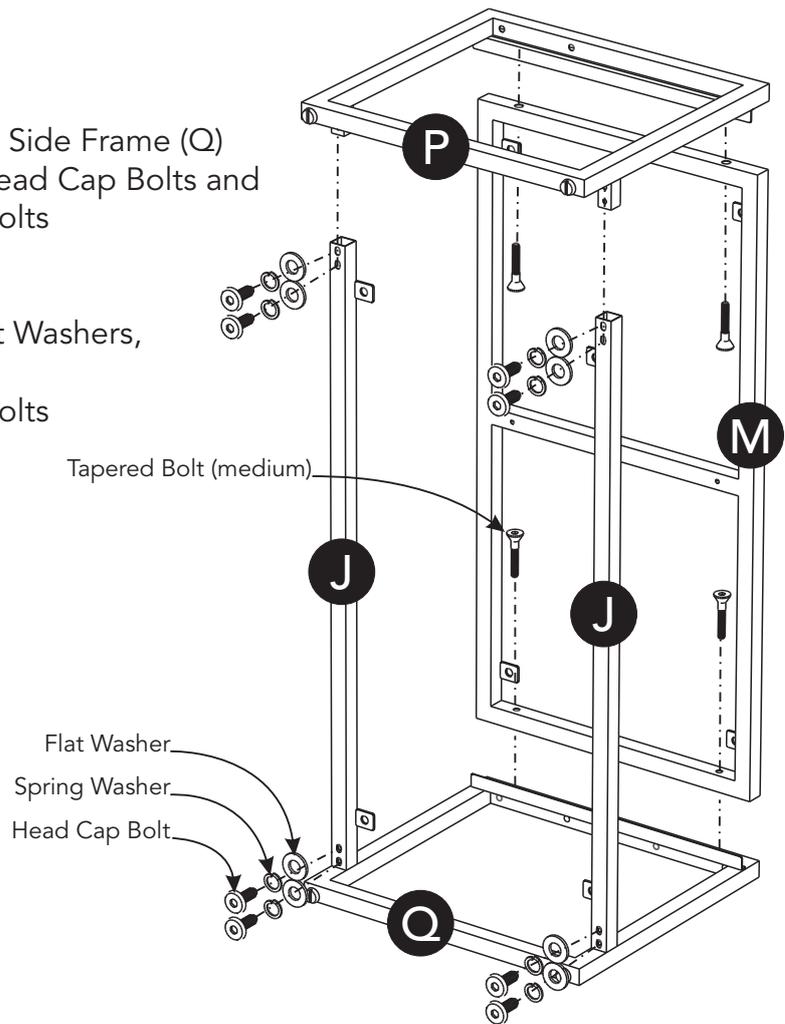


### STEP 6

Attach Base (N) to unit with Flat Washers, Spring Washers and Head Cap Bolts, tightening bolts only halfway.

Attach Divider (O) to unit with Tapered Bolts (medium), tightening bolts only halfway.

Attach Seat (L) to unit with Flat Washers, Spring Washers and Head Cap Bolts, tightening bolts only halfway.

Tighten all bolts used in this step.

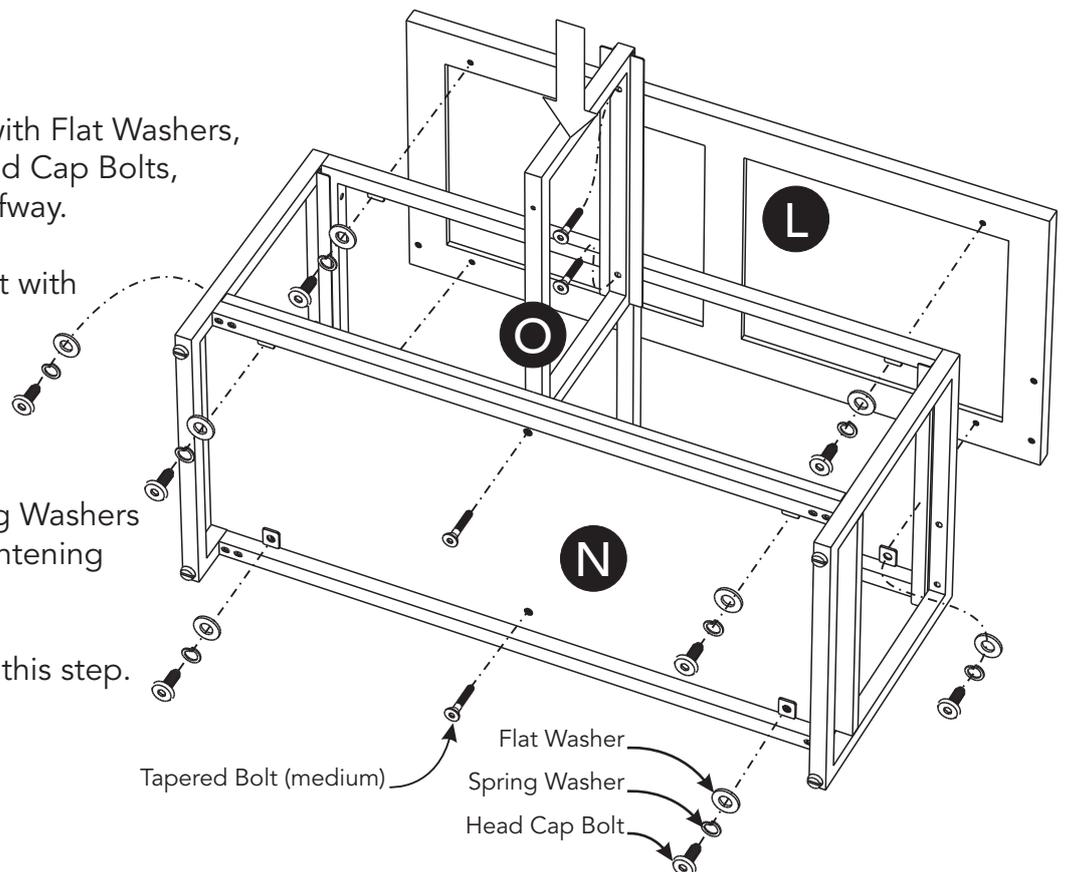

# Assembly Instructions 5/7

Basket (R)

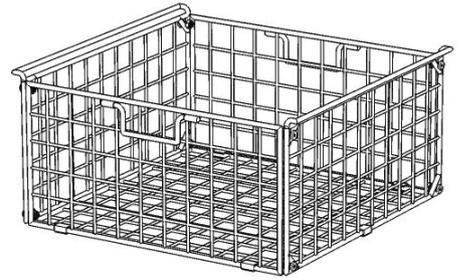
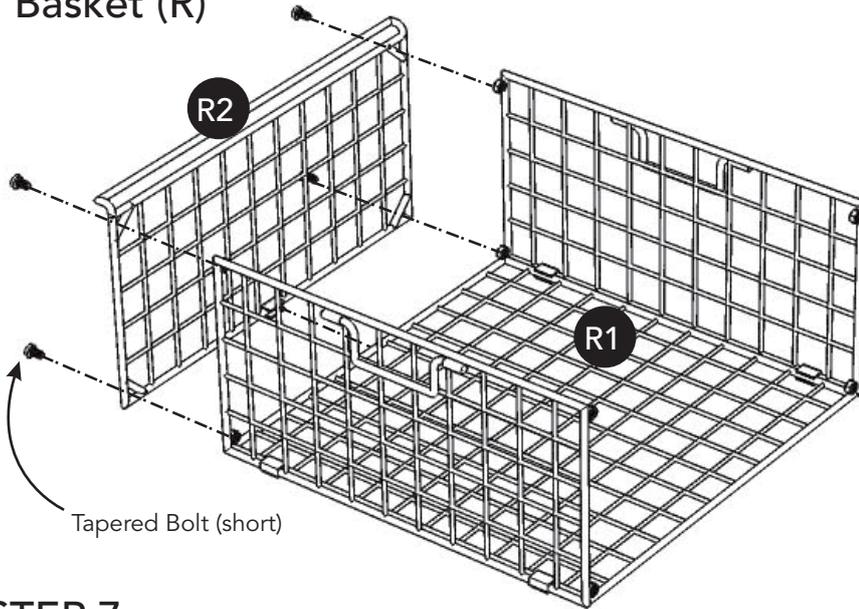


Figure 5

## STEP 7

Attach Basket Side (R2) to Basket Unit (R1) with clips and Tapered Bolts (short). (See Figures 5 and 6)


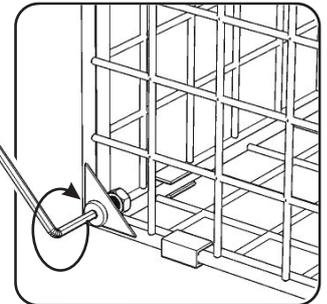



Figure 6

## STEP 8


Attach Basket Side (R2) to unit with clips and Tapered Bolts (short).

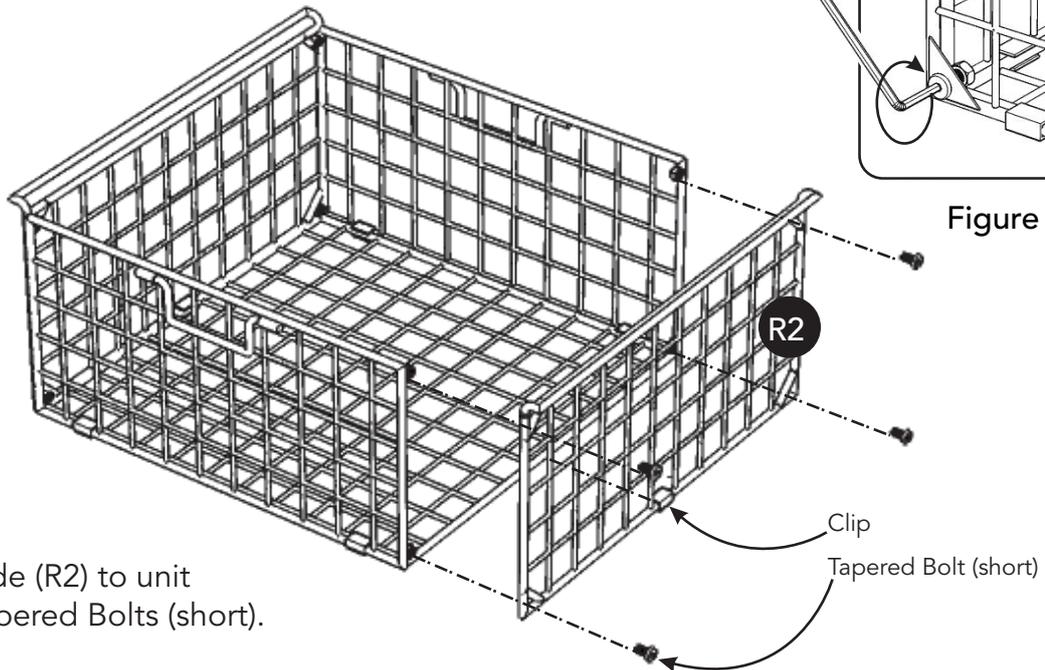

## Part List

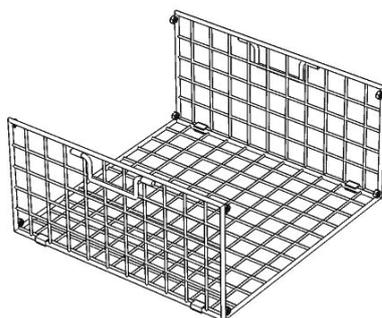

R1.  
Basket Unit  
2 pcs.

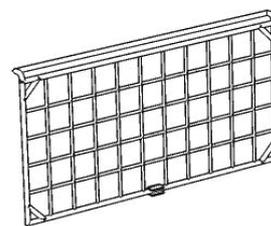

R2.  
Basket Side  
4 pcs.

## Assembly Instructions 6/7

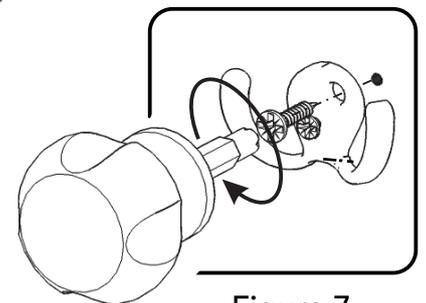
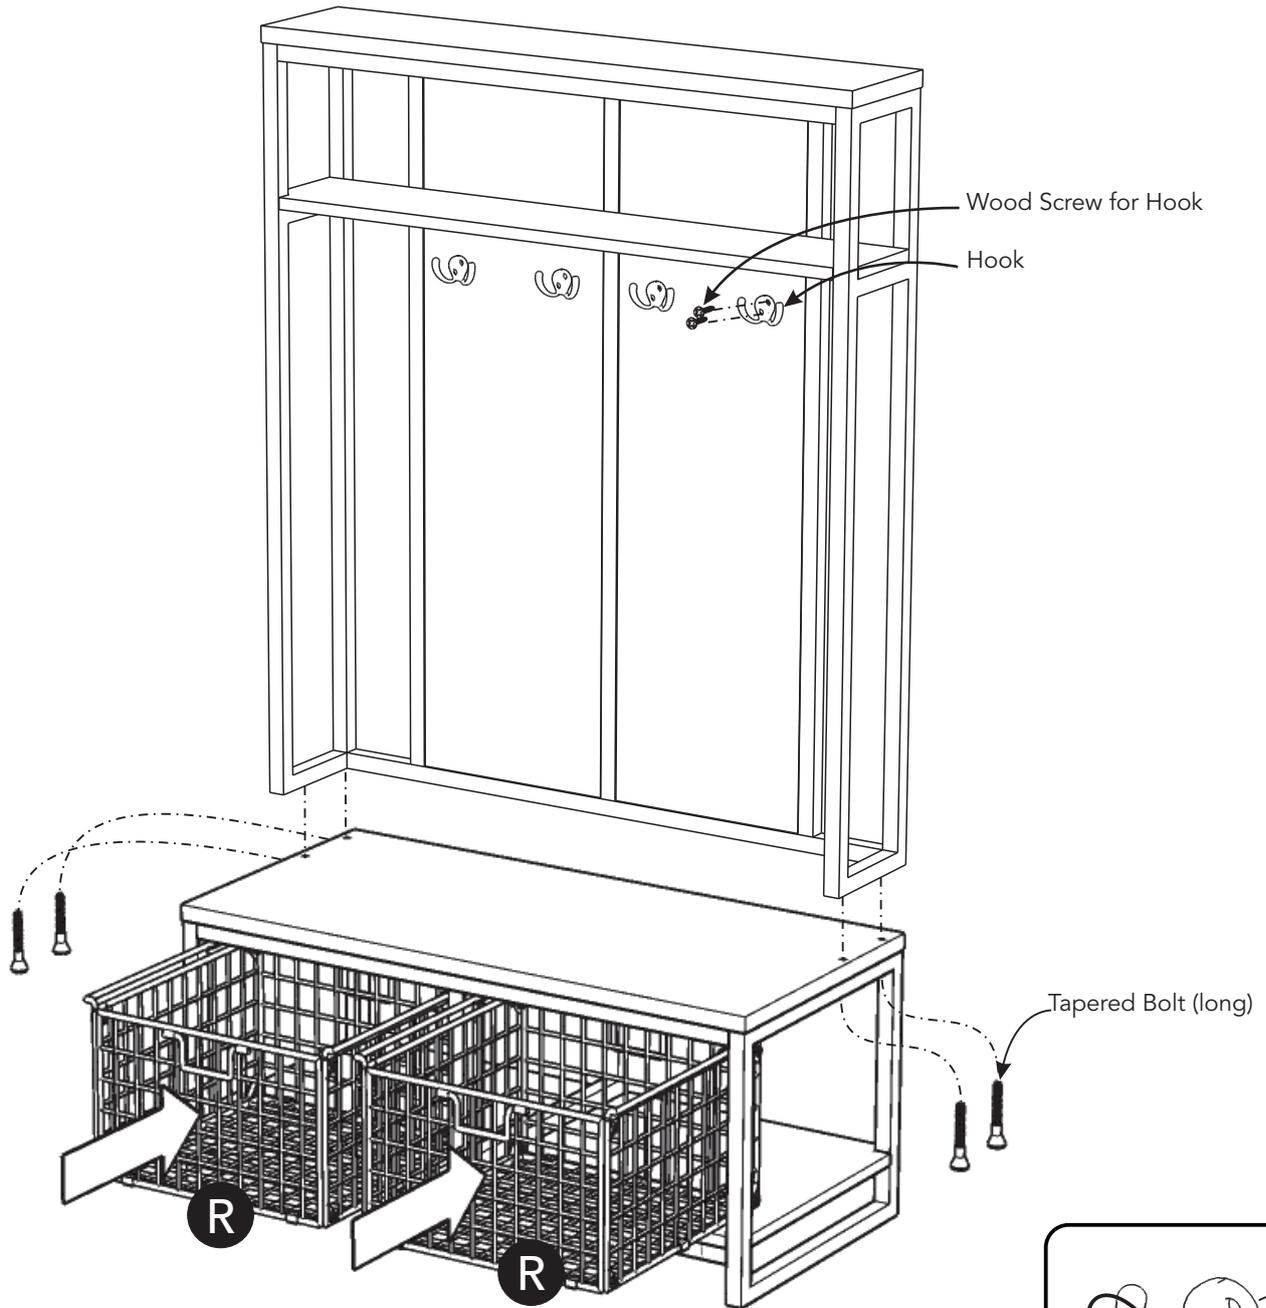


Figure 7

### STEP 9

Attach unit from Step 4 to unit from Step 6 with Tapered Bolts (long).

Attach Hooks to unit by inserting Wood Screws for Hook into pre-drilled holes in unit, then tighten. (See Figure 7)

Slide Baskets (R) into position.

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 8)

Note: Unit must be level to work properly.

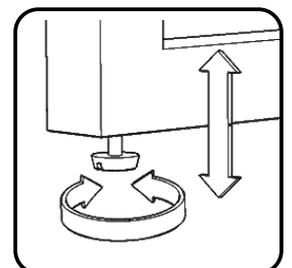


Figure 8

# Assembly Instructions 7/7

## IMPORTANT

- To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

## STEP 10

Place unit at desired location.

Drill a 3/8" hole in wall in-line with the pre-drilled hole at top of unit.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.

Attach Bracket at pre-drilled hole at top of unit with Machine Screw.

Move unit back into place.

Slide Tipover Restraint through Bracket on wall and Bracket on unit.  
(See Figure 9)

Put tie end of Tipover Restraint into lock end of Tipover Restraint and pull until tight.



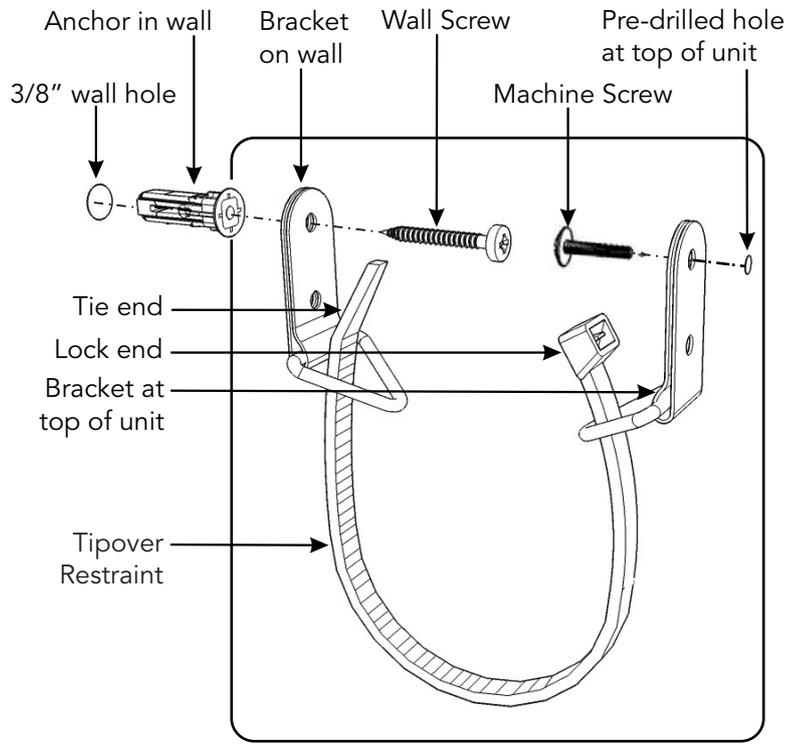



Figure 9

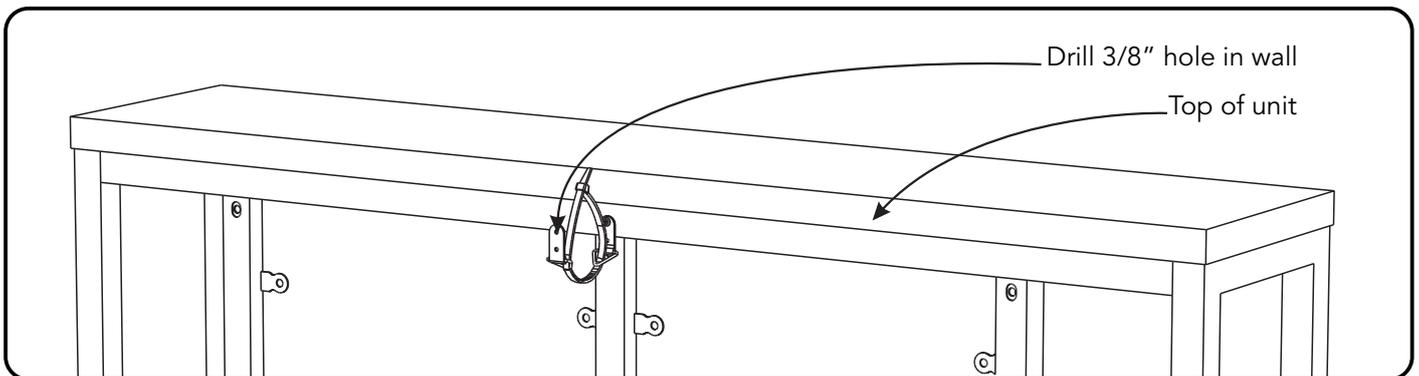


## Hardware List

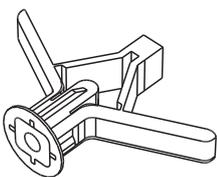

Anchor  
1 pc. (+1 extra)

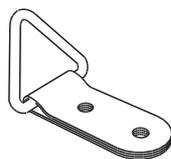


Bracket  
2 pcs. (+1 extra)

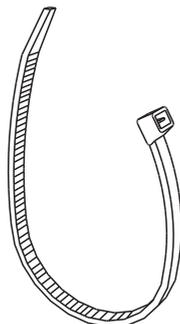

Tipover Restraint  
1 pc. (+1 extra)



M3.5x40  
Wall Screw  
1 pc. (+1 extra)

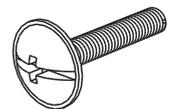

M4x10  
Machine Screw  
1 pc. (+1 extra)

# CARE INSTRUCTIONS

## NEVER

allow liquids to remain on furniture.  
Absorption causes parts to warp  
and split and finishes to delaminate.


## NEVER

use glass cleaners on  
finished furniture. Ammonia  
chemically attacks the finish.



Do not use power tools  
above 8 volts to assemble.

**PREVENT  
CRACKING**

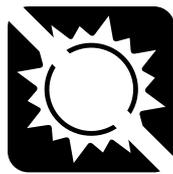

Do not place  
in direct sunlight.

**PREVENT  
FADING**




Do not write  
directly on surface.

**PREVENT  
MARKING**



Do not place hot  
objects on surface.

**PREVENT  
FINISH DAMAGE**

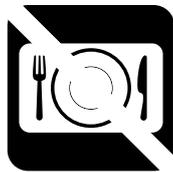

Do not use rubber  
based placemats.

**PREVENT  
DISCOLORING**



Do not use commercial  
waxes and polishes.

**PREVENT  
YELLOWING**

## CLEAN

with a soft cloth moistened  
in lukewarm soap and water.  
Buff with a dry clean cloth.



**homestyles** will provide replacements free of charge for missing or damaged parts within 1 year of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **homestyles** is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.

**homestyles** Customer Service: [www.homestylesfurniture.com](http://www.homestylesfurniture.com),  
[servicedesk@homestylesfurniture.com](mailto:servicedesk@homestylesfurniture.com), 888-680-7460