

Barnes Linear Chandelier

SCHOOLHOUSE


NOTES:

- 2-person installation

REQUIRED TOOLS:



- Electric Drill
- 1/2" Drill Bit for non-joist locations
- 1/8" Drill Bit for joist locations
- Flat Head Screwdriver
- Phillips Head Screwdriver
- Tape Measure
- Safety Glasses

INCLUDED HARDWARE + TOOLS:

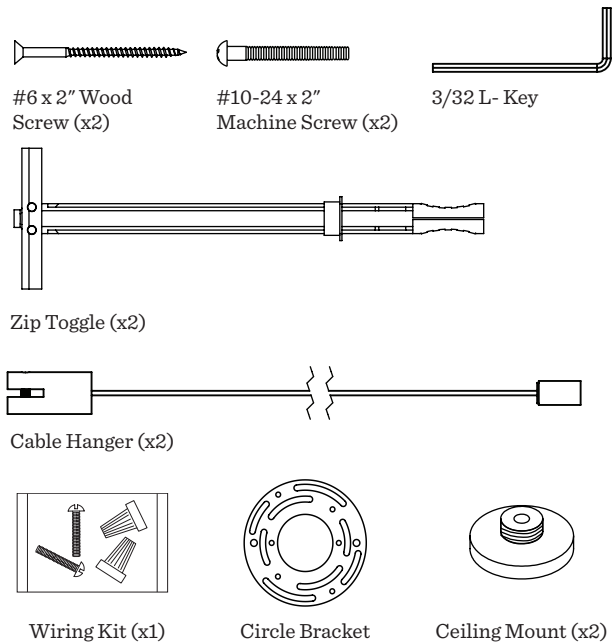


ASSEMBLY INSTRUCTIONS

1. Locate and mark ceiling mount locations 53 5/8" apart. For each mounting location determine ceiling substrate. If a ceiling joist is present, skip to Step 6. For non-joist locations, proceed to Step 2.
2. For non-joist locations, drill holes through drywall with 1/2" Drill Bit. Safety Glasses are recommended for this step. Clean up edge of hole so there is a flat surface for Zip Toggle to sit flush against.
3. Push Metal Wing end of Zip Toggle through pre-drilled hole(s) while holding Zipper end of Zip Toggle.

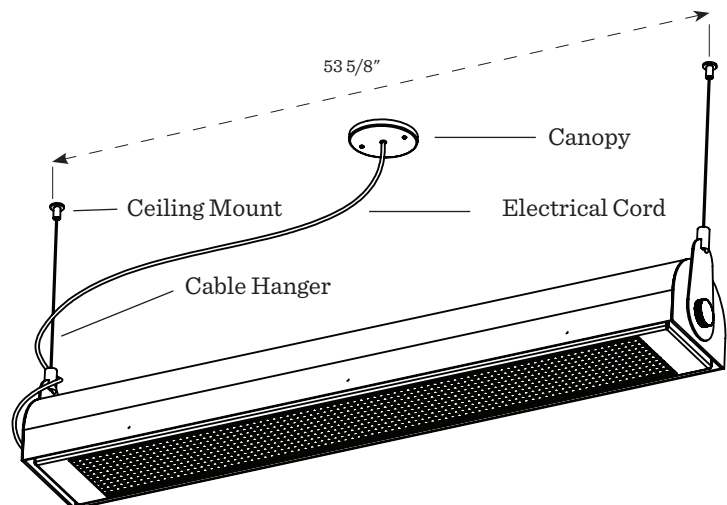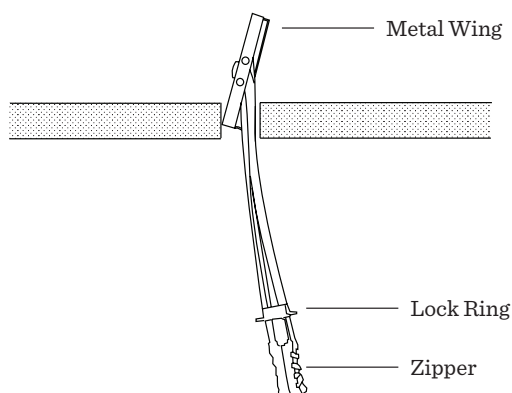


ASSEMBLY INSTRUCTIONS


- When Metal Wing flips back into the open position, push Lock Ring up tight against ceiling and separate Zipper halves. Zipper will break off against Lock Ring.

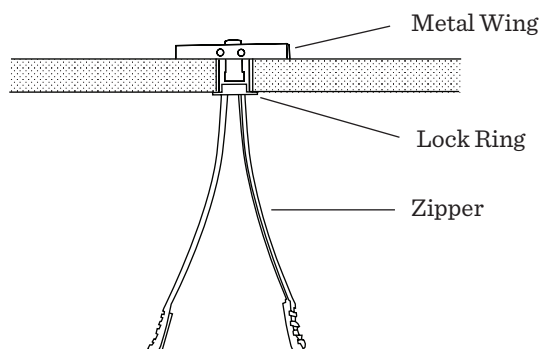


- Thread Machine Screws(s) through Ceiling Mount(s) and into installed Zip Toggle(s) with Phillips Head Screwdriver Skip to Step 8.

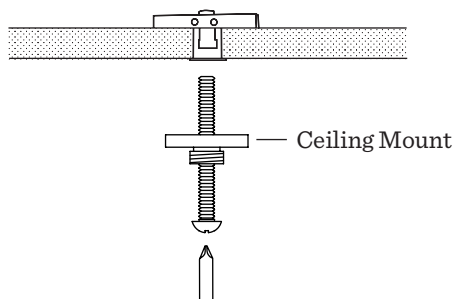


- For Ceiling joist locations, drill through drywall and joist using 1/8" Drill Bit. Safety Glasses are recommended for this step.
- Insert Wood Screw(s) into Ceiling Mount(s) and screw into pre-drilled hole(s). Tighten using Phillips Head Screwdriver.

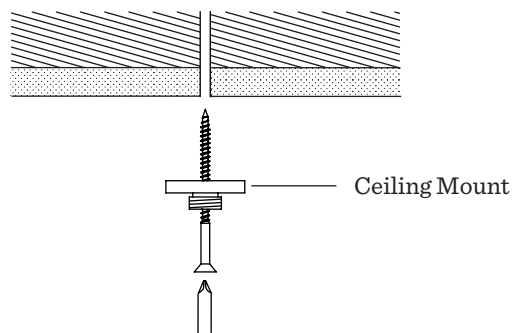


- Thread Cable Hanger(s) onto Ceiling Mount(s) and tighten by hand.

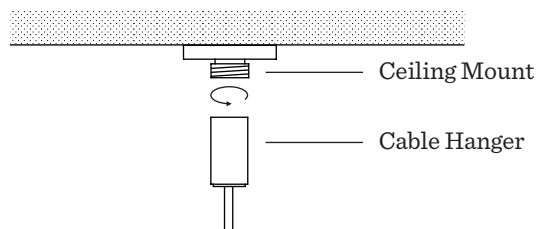

- Remove Set Screw(s) from side of Cable Hanger(s) using provided L- Key and set aside. While another person holds the chandelier in place, insert End Cap into groove in Cable Hanger(s). Then, holding the End Cap centered in the groove, thread Set Screw into Cable Hanger using L- Key until Set Screw can go no further. Set screw should be fully inserted in Cable Hanger when properly installed. If any of the Set Screw is present outside of the Cable Hanger, loosen set screw, reposition End Cap and reinstall Set Screw.

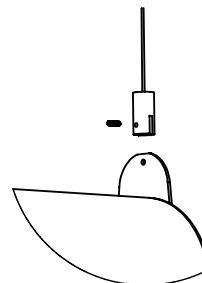

- Wrap electrical cord and canopy once around Cable Hanger as shown. Install canopy on electrical box using enclosed Wiring Kit. Consult an electrician if necessary.

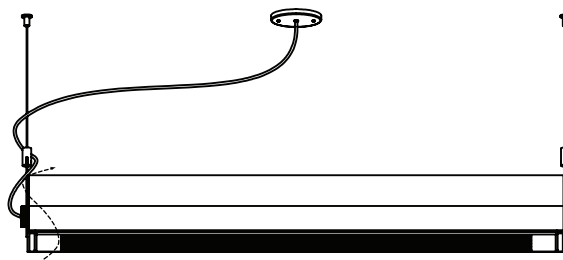


NOTES:


- Chandelier ships from the factory pre-leveled, but minor adjustments may be required after mounting.

ADJUSTMENT INSTRUCTIONS


- While another person supports the chandelier, unscrew the Set Screw and remove the End Cap on the low side of the chandelier.

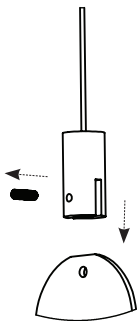

- Insert a Flat Head Screwdriver into Cable Hanger as shown.

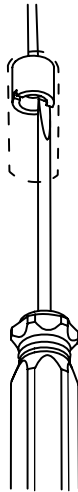

- Holding Cable Hanger in place, turn screwdriver to adjust height. To raise, turn clockwise. To lower, turn counter-clockwise.

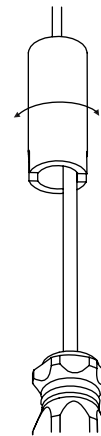

DIFFUSER & BULB INSTRUCTIONS

- Slide both ends of the bulb into aligned socket pairs. Then rotate bulbs 90° so diffuser face of bulb is facing down.
- Slide the Diffuser Assembly into the Shade, aligning slots on the Diffuser Assembly with pins inside the Shade.
- Slide Diffuser Assembly horizontally to center within Shade, this will engage the pins into each slot. Confirm the Diffuser Assembly is fully supported before letting go.
- For future removal and bulb replacement, reverse process above.

