# ASSEMBLY INSTRUCTION


KINCAID
SOLID WOOD SINCE 1946


www.kincaidfurniture.com
Phone :828-728-3261.


863-304 KLINE QUEEN PANEL BED HDBD 5/0
863-306 KLINE KING PANEL BED HDBD 6/6


I M P O R T A N T  N O T E S  :

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched .
- Check to be sure that you have all parts and hardware .
- Remove all wrapping materials, including staples and packing straps before you start to assemble .
- Do not tighten all screws and bolts until completely assembled .
- Keep all hardware out of the reach of children .

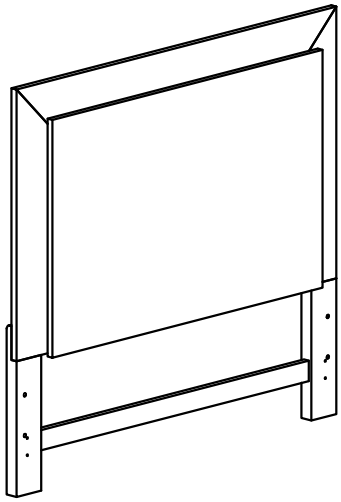

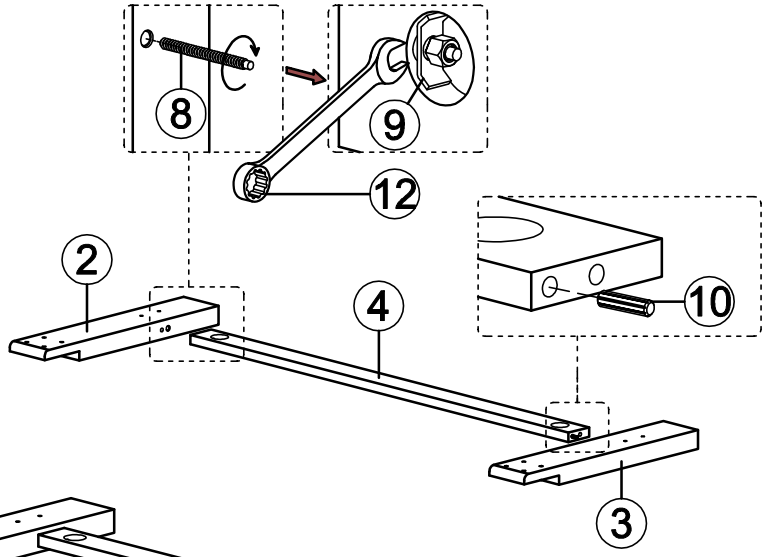

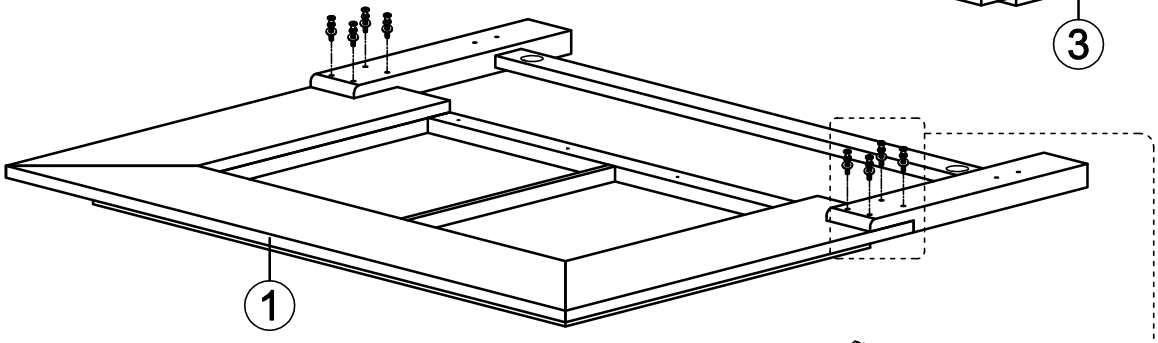
| Item # | Description | Quantity |
|---|---|---|
| 1. | Headboard | 1 |
| 2. | Left leg | 1 |
| 3. | Right leg | 1 |
| 4. | Stretcher | 1 |
| 5. | Bolts 5/16" x 45 mm | 8 |
| 6. | Lock Washers | 8 |
| 7. | Washers | 8 |
| 8. | Thread Rod 5/16" x 88 mm | 2 |
| 9. | Curved slotted washer 5/16" | 2 |
| 10. | Wooden Dowel | 2 |
| 11. | Allen Key | 1 |
| 12. | Wrench | 1 |

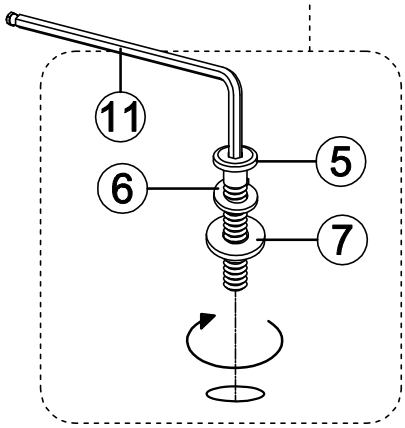MADE IN VIETNAM