



Portable Window Air Conditioner Replacement Window Exhaust Kit 2PORTV513

INSTALLATION INSTRUCTIONS

Your window slider kit has been designed to fit most standard vertical and horizontal window applications. However, it may be necessary for you to modify some aspects of the installation procedures for certain types of windows. The window slider kit can be fastened with screws.

NOTE:

- The window slider kit does not include the unit collar. The specific unit collar needed for your portable AC installation is already included in the box with the unit itself, as provided by the factory. Be sure to use the collar that came with your portable AC for proper setup.
- If the window opening is less than the minimum length of the window slider kit, cut the end without the hole in it short enough to fit the window opening. Never cut the window kit attachment piece with the vent hose in it.

REPLACEMENT KIT INCLUDES



1 - Exhaust Hose



1 - Security Bracket and 2 - Screws



1 - Window Slider Adapter



1 - Bolt



2 - Foam Seal A (Adhesive)



2 - Foam Seal B (Adhesive)





1 - Foam Seal C (Non-Adhesive)



1 - Window Slider A



1 - Window Slider B

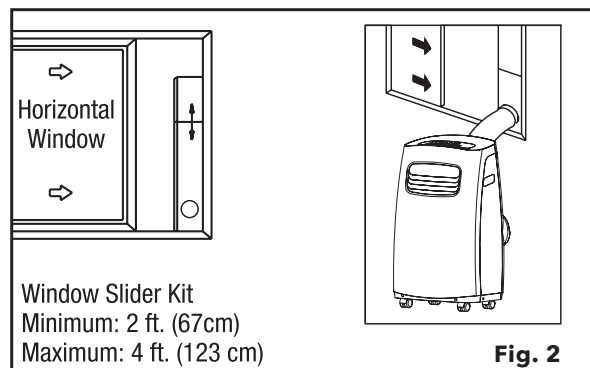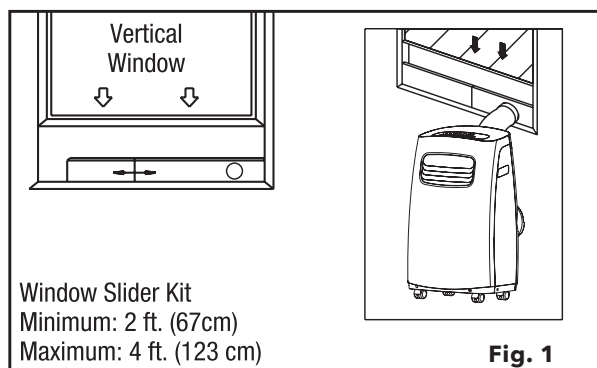


EXHAUST HOSE ASSEMBLY

STEP 1 Fig 1

Attach the threaded end of the exhaust hose to the hose inlet on the unit by securely screwing it in place. The hose may twist clockwise or counterclockwise depending on the end you are using. If needed, remove the collared ring from one side of the hose to access the correct threaded end for your unit (refer to Fig. 1).

If you need to move the collar, reattach the collared ring to the other side of the exhaust hose after adjusting.


Fig. 1

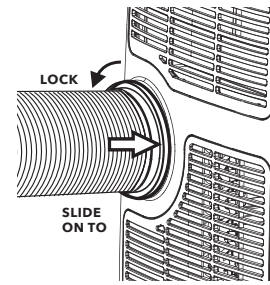

STEP 2 Fig 2

Extend the opposite end of the hose and securely attach the window slider adapter by clipping it into place.

Fig. 2

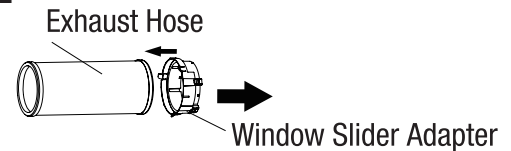


STEP 3 Fig 3

PREPARING THE ADJUSTABLE WINDOW SLIDER

- Depending on the size of your window, choose the correct sliders and adjust accordingly. Sometimes cutting the slider may be necessary to properly install. Please take extra care when cutting, and cut only when absolutely necessary. Do not cut the hole in the window slider kit.
- If the length of the window requires two window sliders, use the bolt (included) to fasten the window sliders once they are adjusted to the proper length.

Fig. 3

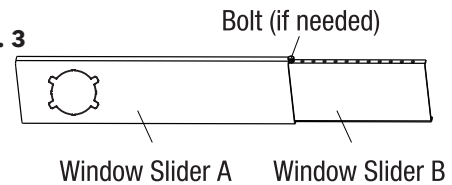


WINDOW INSTALLATION

NOTE: The illustration shows a vertical double-hung window. This kit can also be used in horizontal sliding windows.


STEP 1 Fig 4

Cut the adhesive foam seal A and B strips to the proper lengths, and attach them to the window sash and frame as shown.

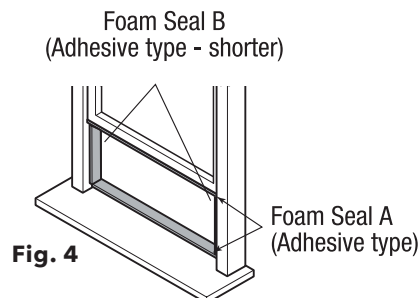


STEP 2 Fig 5

Insert the window slider assembly into the window opening.

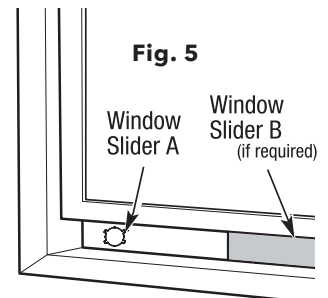


STEP 3 Fig 6

Cut the non-adhesive foam seal C strip to match the width of the window. Insert the seal between the glass and the window frame to prevent air and insects from getting into the room.

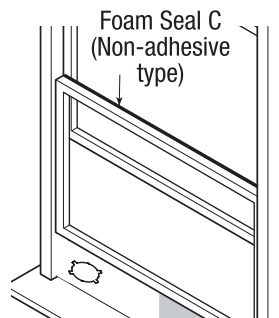

STEP 4 Fig 7

If desired, install the security bracket with 2 screws as shown.

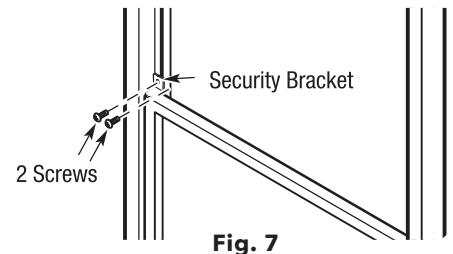

STEP 5 Fig 8

Insert the window slider adapter into the hole of the window slider.

NOTE: All the illustrations in this manual are for explanation purposes only. Your unit may be slightly different.

