
INSTRUCTION MANUAL

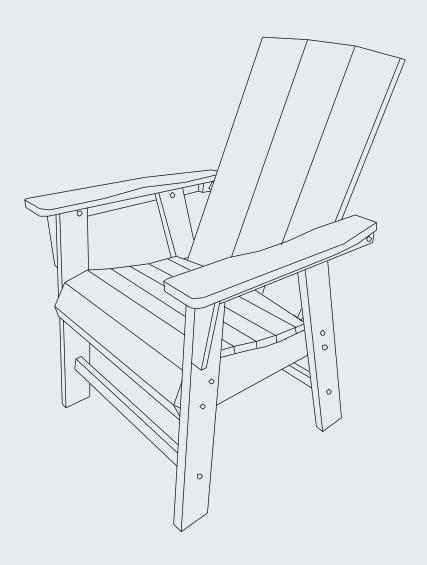


Modern Curveback Adirondack Dining Chair


! NOTICE

Do not overtighten screws. (Insert all screws before tightening screws.)


- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- When using an electric drill, please adjust its speed slowly to avoid screw slippage.

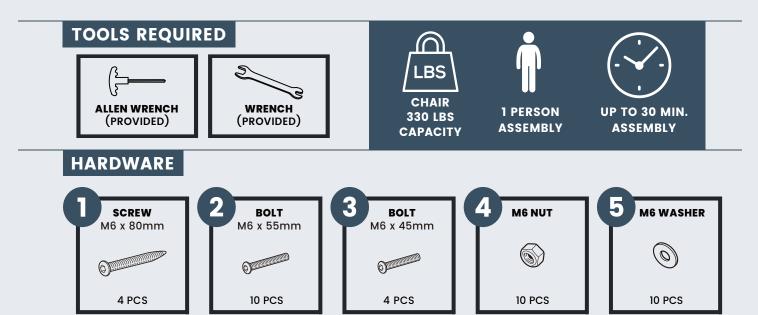

PARTS

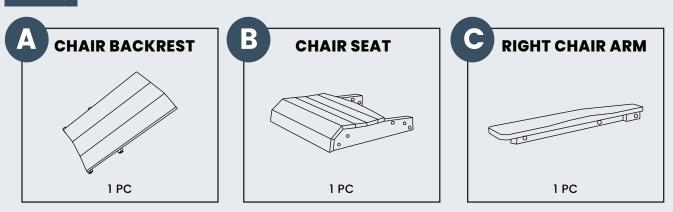

PARTS

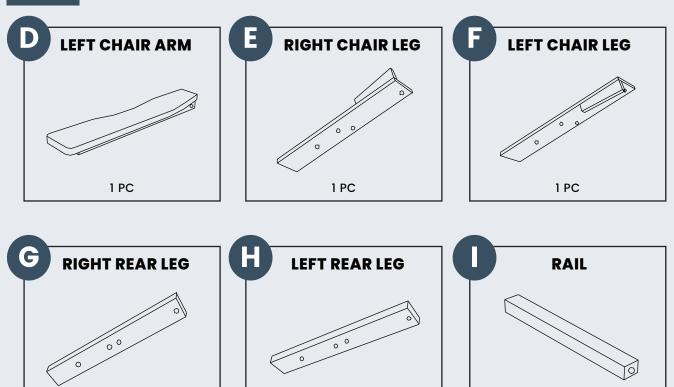


PRODUCT ASSEMBLY - OVERALL VIEW

1 PC

Look at the overall view of this chair and learn the exact position of each part to be assembled.

1 PC

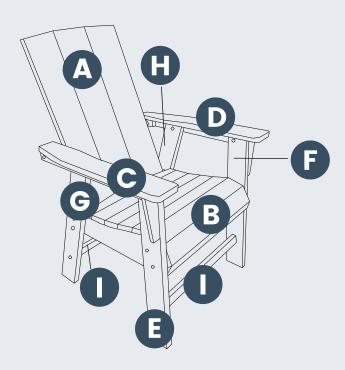


2 PCS

PRODUCT ASSEMBLY



Place Part A Chair Backrest and Part B Chair Seat as below. Attach Part H Left Rear Leg to Part B Chair Seat and Part A Chair Backrest with 1 pc of Hardware #1 Screw.


Do not tighten screws too much at this stage.

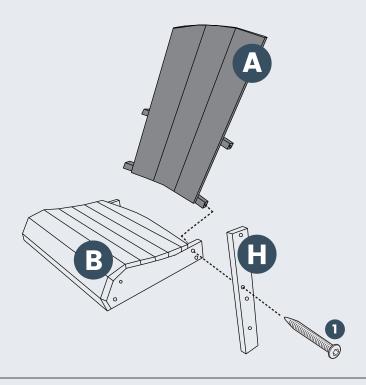

2

Attach Part H Left Rear Leg to Part B Chair Seat with 1 set of Hardware #2 Bolt, Hardware #5 Washer and Hardware #4 Nut.

Attach Part I Back Rail to Part H Left Rear Leg with 1 pc of Hardware #3 Bolt.

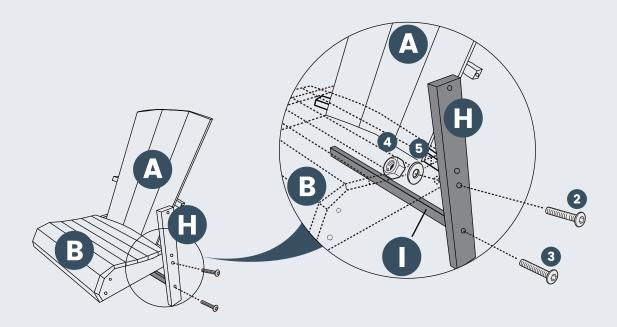


PRODUCT ASSEMBLY

3

Attach Part F Left Chair Leg to Part B Chair Seat with 2 sets of Hardware #2 Bolt, Hardware #5 Washer and Hardware #4 Nut.


Attach Part I Front Rail to Part F Left Chair Leg with 1 pc of Hardware #3 Bolt.

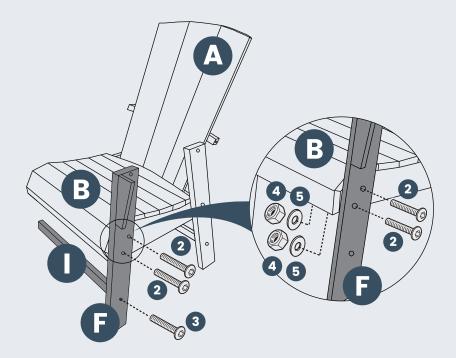

4

Do the same to attach Part E Right Chair Leg and Part G Right Rear Leg to Part A Chair Backrest and Part B Chair Seat with 3 sets of Hardware #2 Bolt, Hardware #5 Washer and Hardware #4 Nut as well as 1 pc of Hardware #1 Screw.

Attach Part E Right Chair Leg and Part G Right Rear Leg to Part I Rails with 2 pcs of Hardware #3 Bolt.

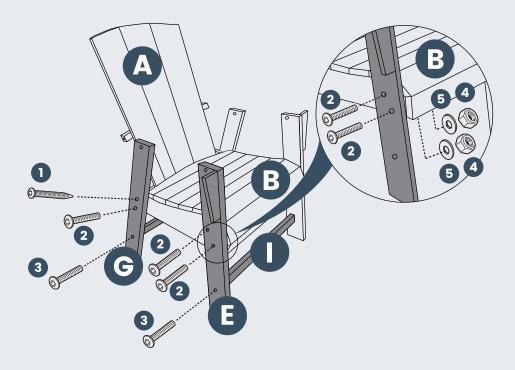


PRODUCT ASSEMBLY



Attach Part D Left Chair Arm to Part A Chair Backrest with 1 pc of Hardware #1 Screw.


Attach Part D Left Chair Arm to Part F Left Chair Leg and Part H Left Rear Leg with 2 sets of Hardware #2 Bolt, Hardware #5 Washer and Hardware #4 Nut.

Do the same to attach Part C Right Chair Arm to the chair to finish the assembly.

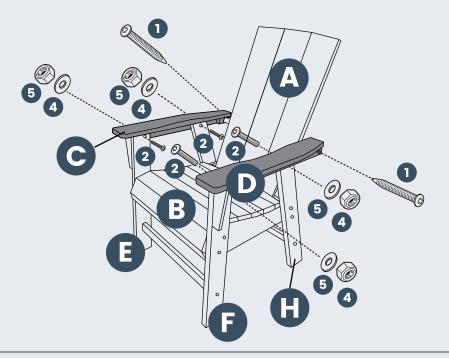

6

Tighten all the bolts and screws again to ensure this chair is steady enough to use.

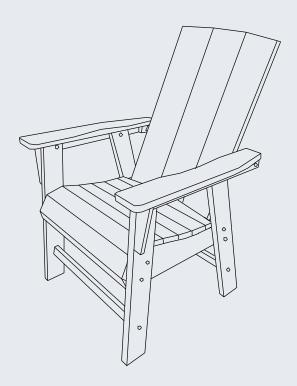

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the furniture with a damp cloth.

Regular cleaning not only preserves the aesthetic appeal of your furniture, but also helps extend its lifespan.