

# KINGSTON


KITCHEN & BATH

## INSTALLATION INSTRUCTIONS

### 1-1/2" Tailpiece

### Instructions:

1. Measure distance X from the bottom of the strainer to the bottom of the wide area in the P-trap.
2. If needed, cut tailpiece to length, using a hacksaw or a tubing cutter.
3. Slide nut (A) onto the tailpiece.
4. Place rubber washer on top of the lip of the extension.
5. Thread nut onto the strainer.
6. Once all the P-trap connections have been made, let water run into the drain, check for leaks.

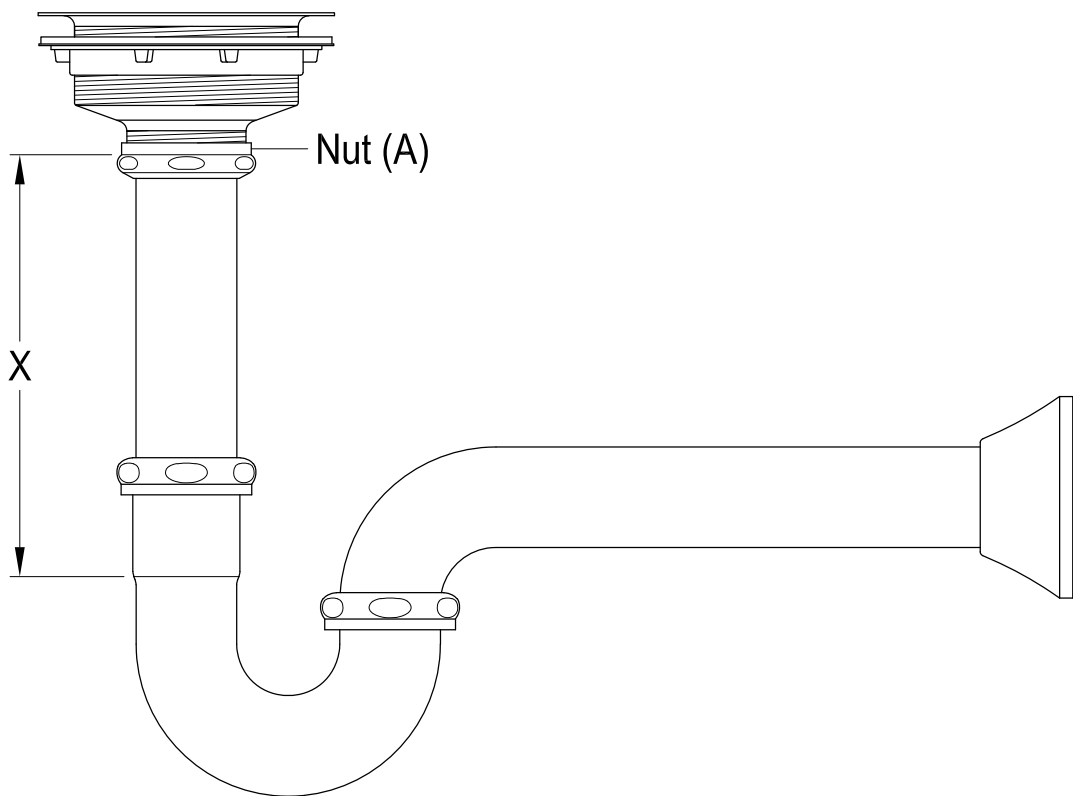

## NOTICE

Failure to follow all directions may cause leaks  
which may result in water damage

[www.kingstonbrass.com](http://www.kingstonbrass.com)  
TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS  
TECHNICAL SUPPORT E-mail: [service@kingstonbrass.com](mailto:service@kingstonbrass.com)  
12775 Reservoir Street, Chino, CA 91710