KINCAID


SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTION

706 -314 /316- EASTBURN SLEIGH BED QUEEN KING

706-5/0-6/6 Bed Rails

www.kincaidfurniture.com
Phone : 828-728-3261.

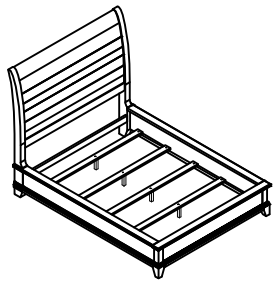

IMPORTANT NOTES :


. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.

. Check to be sure that you have all parts and hardware.

. Remove all wrapping materials,including staples and packing straps before you start to assemble.

. Do not tighten all screws and bolts until completely assembled.

. Keep all hardware out of the reach of children.

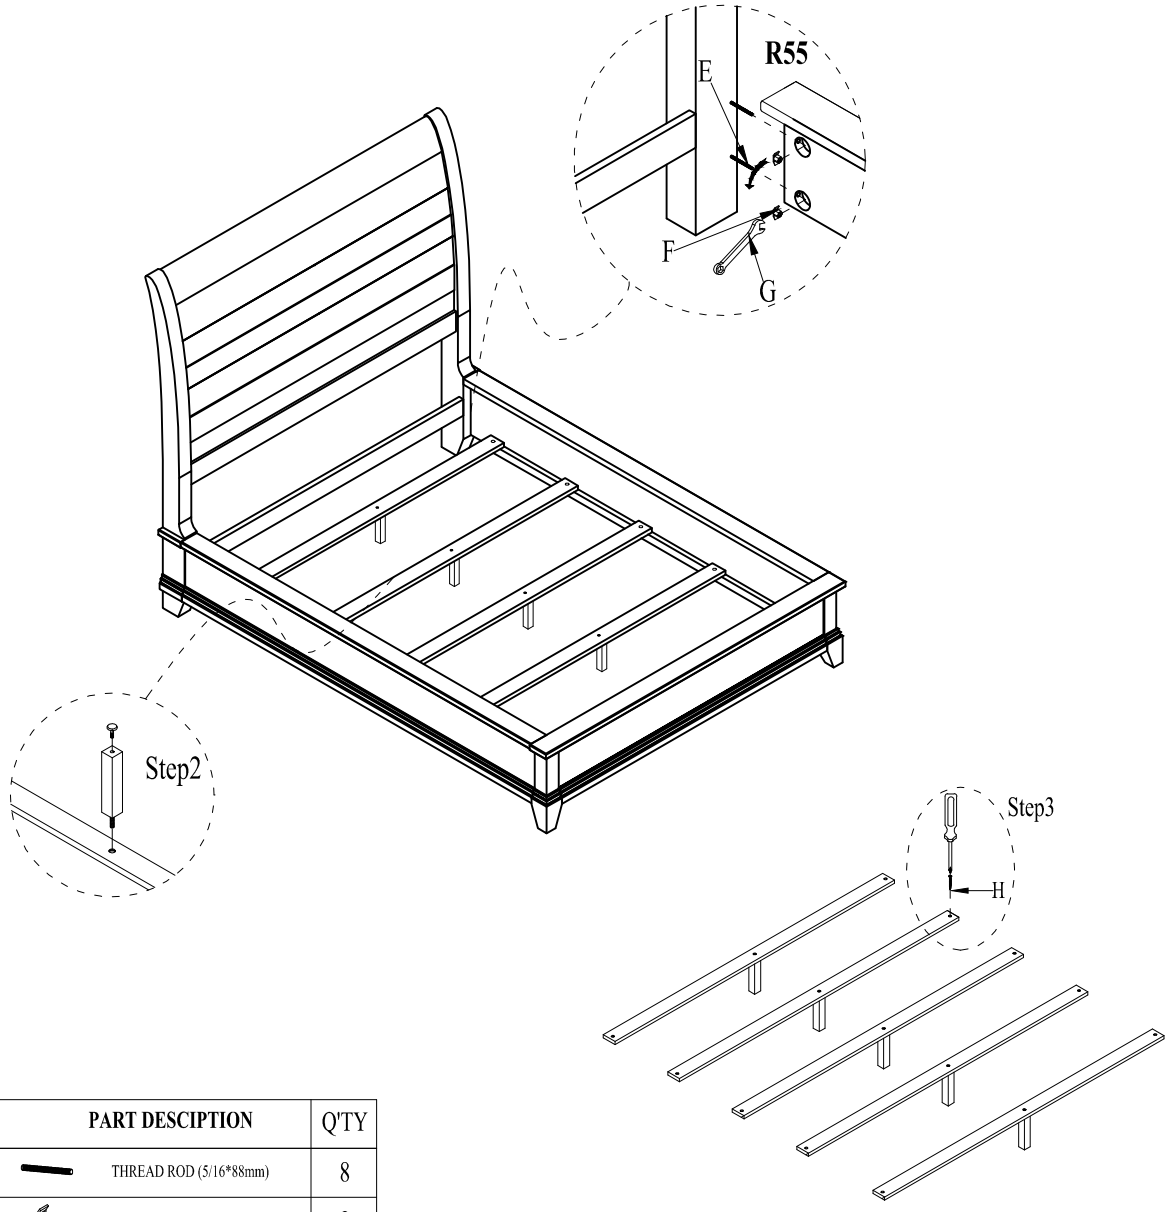

NO.	PART DESCIPTION	Q'TY
E	THREAD ROD (5/16*88mm)	8
F	CURVED SLOTTED WASHER (5/16")	8
G	WRENCH (12mm)	1
H	SCREW (8*25mm)	10