

# BRIGHTON SLEIGH PANEL


## TWIN SIZE ASSEMBLY INSTRUCTIONS



### PARTS AND FITTING PACKAGING DETAIL


#### BOX #1

A. HEADBOARD 1 PC

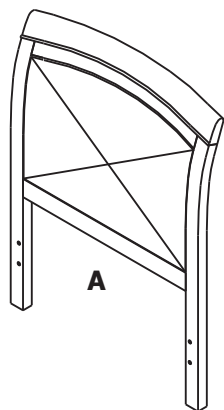


#### BOX #2

B. FOOTBOARD 1 PC

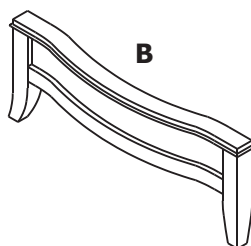


#### BOX #3

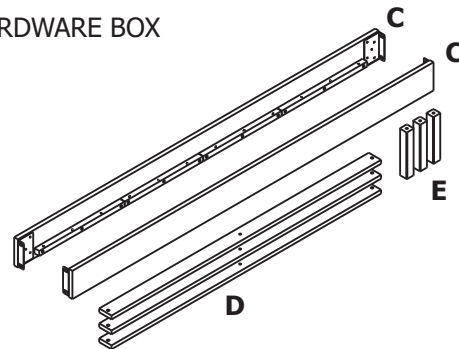




C. SIDERAILS 2 PCS  
D. SLATS 3 PCS  
E. LEG SUPPORT 3 PCS  
HARDWARE BOX

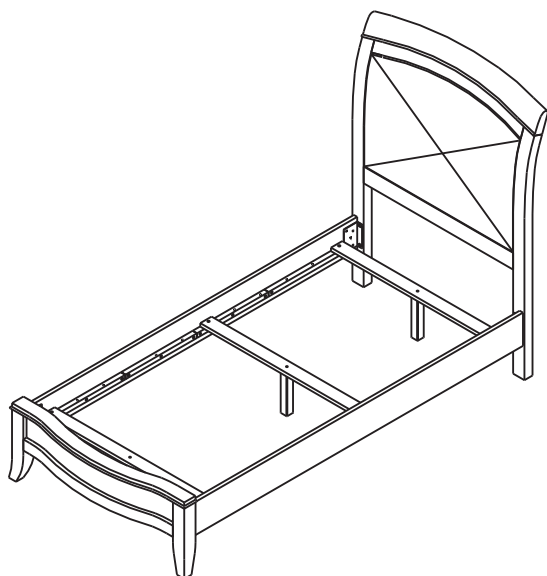

### BRIGHTON SLEIGH PANEL ASSEMBLED




### HARDWARE PACKED IN BOX #3

1	PHILLIPS HEAD BOLT 20MM	8 PCS	2	WOOD SCREW Ø8X30MM	6 PCS			
								
3	ALLEN KEY	1 PC	4	ALLEN BOLT 40MM	3 PCS	5	WASHERS 8MM	8 PCS
								

### TOOL REQUIRED :


PHILLIPS HEAD SCREW DRIVER (NOT PROVIDED)

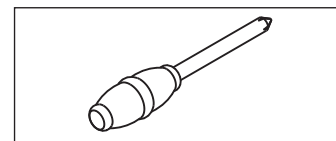

### STEP 1 :


FIX ONE OF THE SIDERAILS (C) TO THE HEADBOARD (A) USING PHILLIPS HEAD BOLTS (1) AND WASHERS (5).

DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ASSEMBLY IS COMPLETED

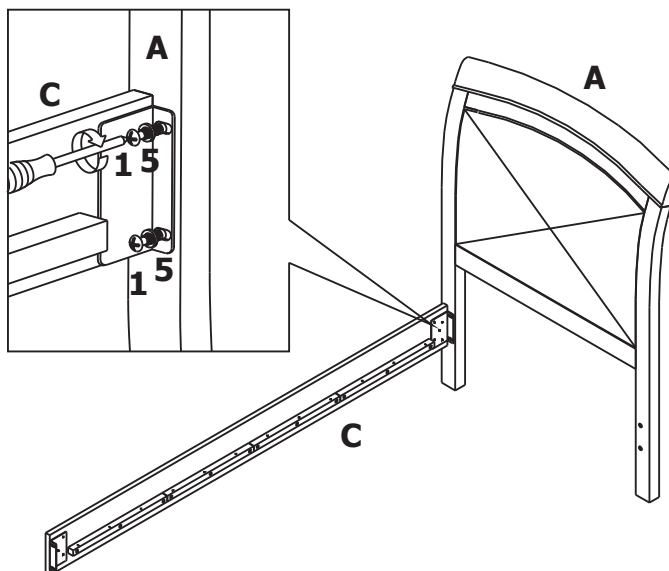


**STEP 2 :**


FIX THE OTHER END OF THE SIDERAIL (C) TO THE FOOTBOARD (B).

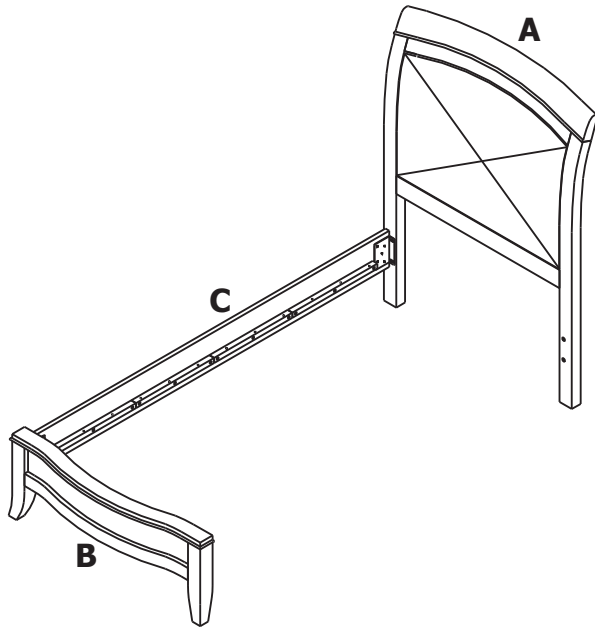**STEP 3 :**


FIX THE OTHER SIDERAIL (C) TO THE HEADBOARD (A) AND FOOTBOARD (B).

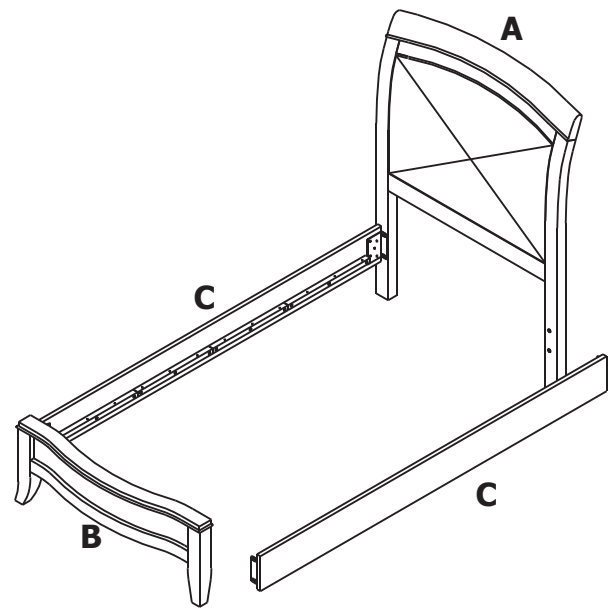**STEP 4 :**

FOLLOW THE ILLUSTRATION TO PLACE THREE BED SLATS (D) ON THE BED FRAME AND SECURE THE BED SLATS (D) USING WOOD SCREWS (2). USE THE PILOT HOLES ON THE SIDERAILS (C) AS YOUR REFERENCE FOR EASY ASSEMBLY.

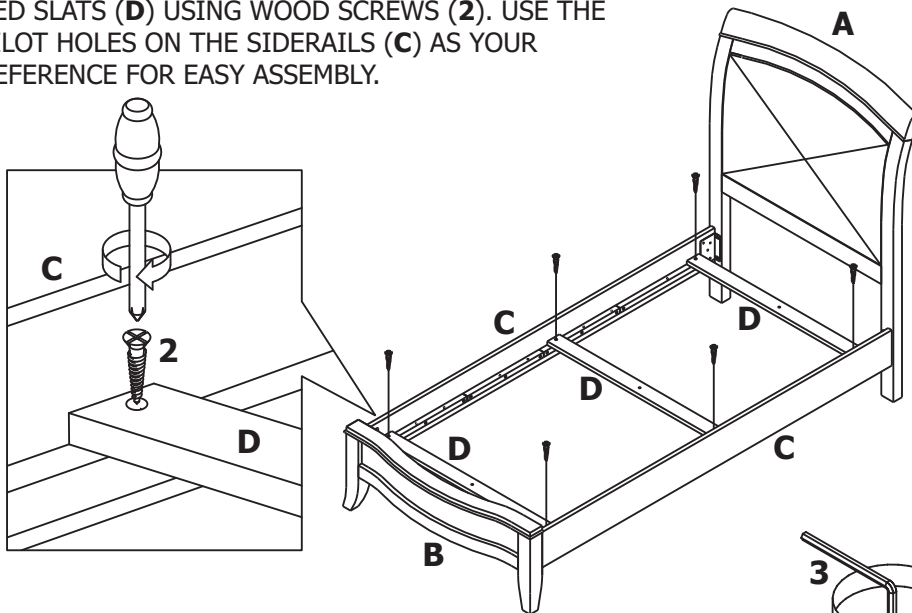**STEP 5 :**

FOLLOW THE ILLUSTRATION TO FIX THE LEG SUPPORT (E) TO BED SLATS (D) USING ALLEN BOLTS (4). USE ALLEN KEY (3) TO TIGHTEN THE BOLTS. MAKE SURE ALL BOLTS AND SCREWS ARE TIGHTENED BEFORE USING.

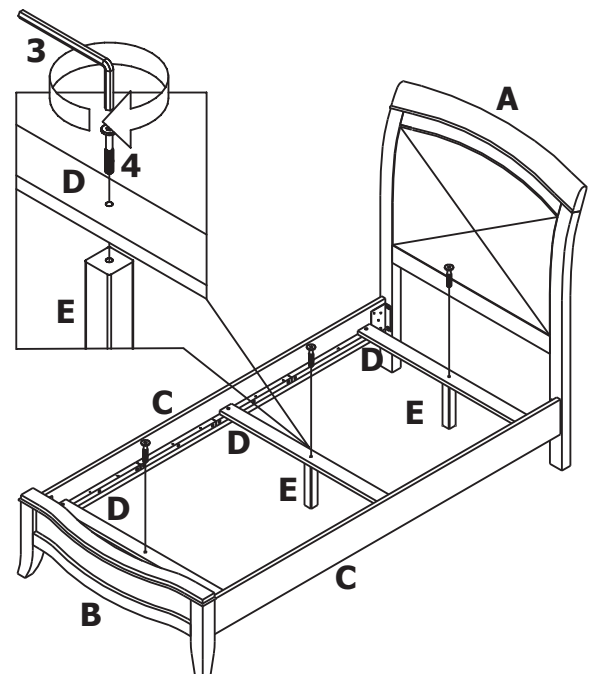


# BRIGHTON PANEL SLEIGH FULL/QUEEN BED

## ASSEMBLY INSTRUCTIONS

**MODUS**  
FURNITURE


### BOX #1

A. HEADBOARD 1 PC

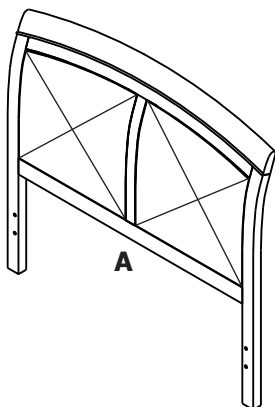

### BOX #2

B. FOOTBOARD 1 PC

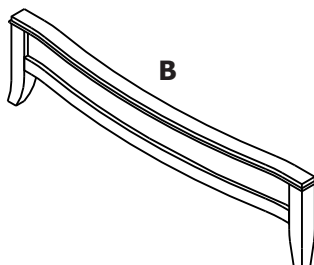


### BOX #3

C. SIDE RAIL 2 PCS


D. SLAT 3 PCS

E. LEG SUPPORT 3 PCS







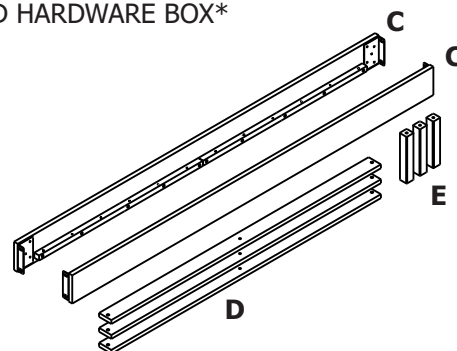BED HARDWARE BOX\*

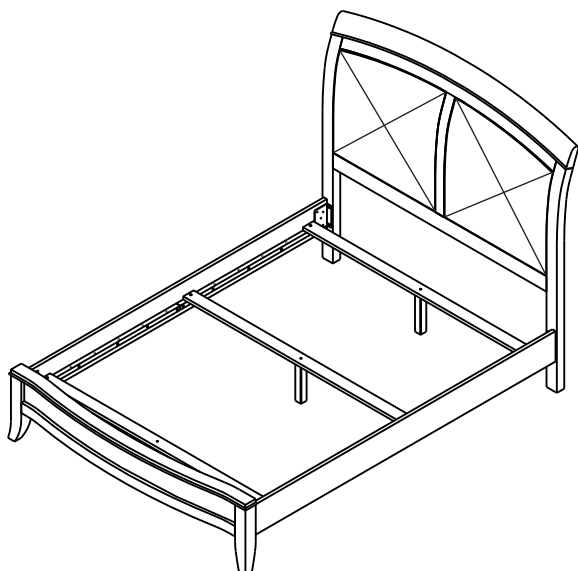

### BRIGHTON PANEL SLEIGH ASSEMBLED




### BED HARDWARE PACKED IN BOX #3


<b>1</b>	PHILLIPS HEAD BOLT (8x20mm)	8 PCS	<b>2</b>	WOOD SCREW (8x30mm)	7 PCS	<b>3</b>	ALLEN KEY	1 PC
								
<b>4</b>	ALLEN BOLT (6x40mm)	4 PCS	<b>5</b>	SPRING WASHER (M8)	8 PCS	<b>6</b>	FLAT WASHER (M8)	8 PCS
								



TOOL REQUIRED : PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED)

**YOUR BOX  
MAY CONTAIN  
EXTRA HARDWARE**


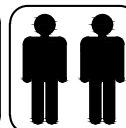


### STEP 1 :

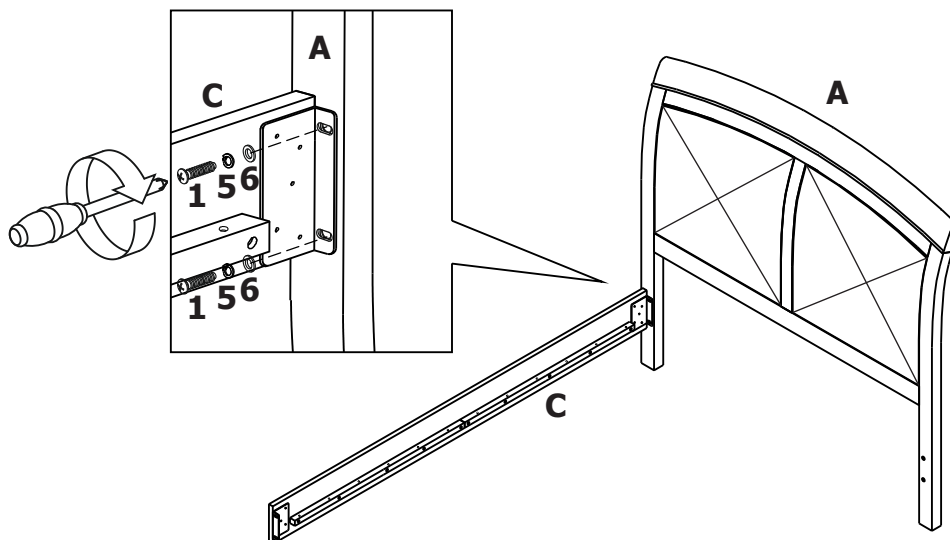

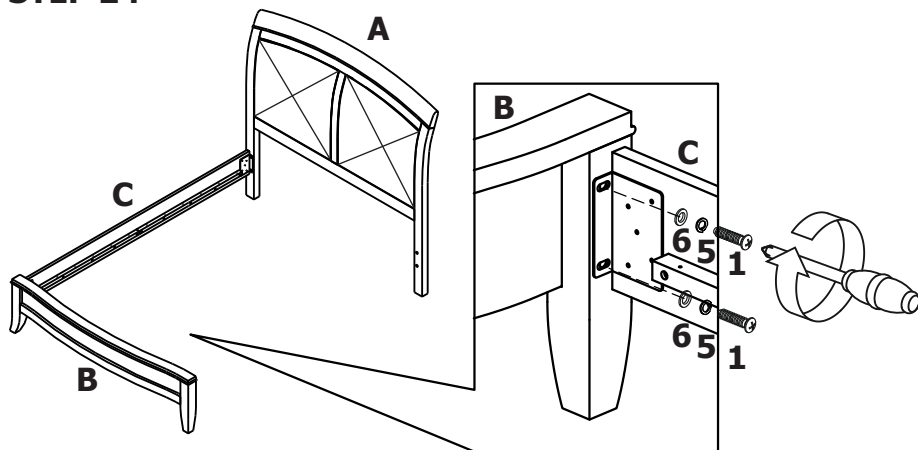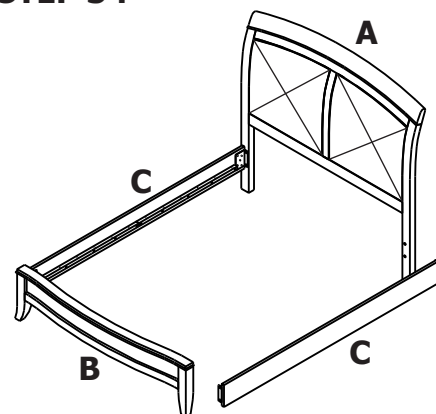**STEP 2 :****STEP 3 :****STOP**


- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 4.

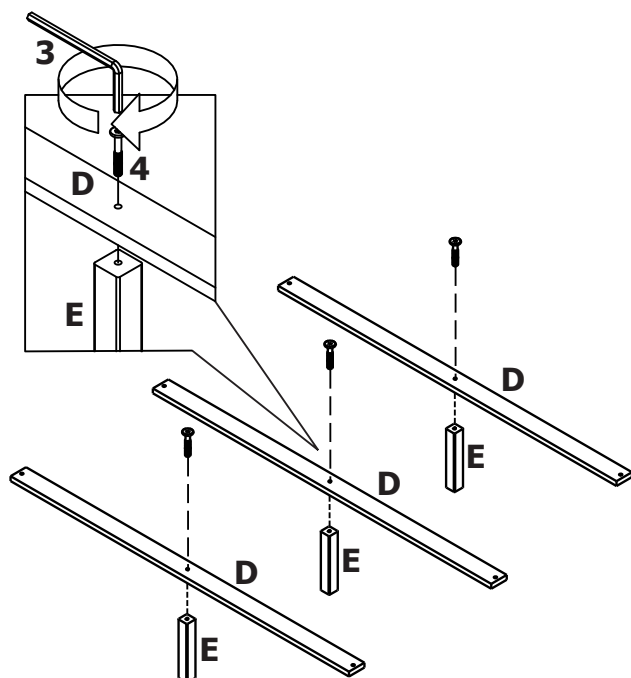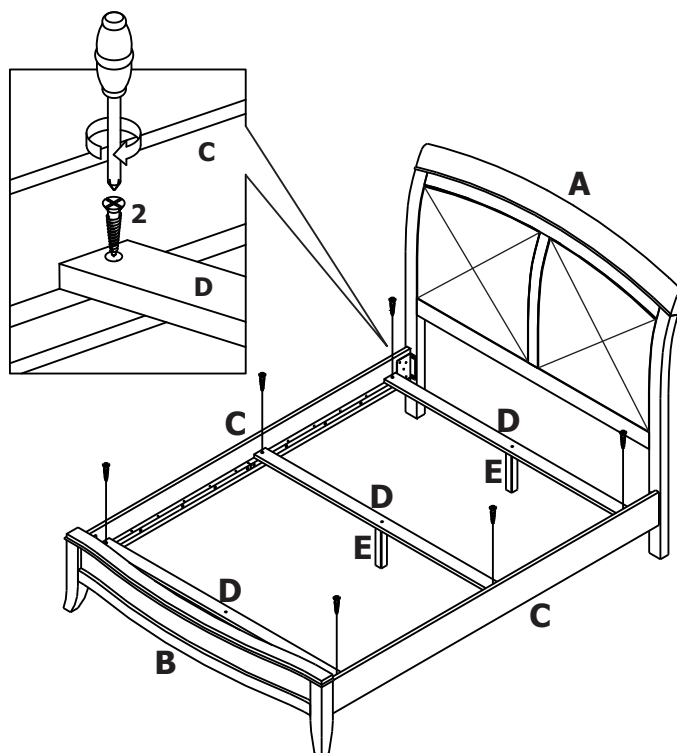**STEP 4 :****STEP 5 :****INSTRUCTIONS FOR ADJUSTING LEVELERS :**

POSITION THE BED IN YOUR ROOM.  
LOCATE LEVELERS UNDER EACH  
LEG SUPPORT (E).

TURN COUNTER-CLOCKWISE TO  
EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH  
SUPPORT IS APPLYING EQUAL UPWARD  
PRESSURE ON THE BED SLAT.

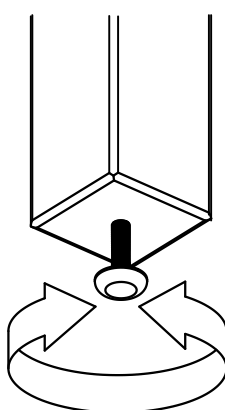**MAINTENANCE INSTRUCTIONS :**

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE LEG SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.

# BRIGHTON PANEL SLEIGH FULL/QUEEN BED

## APPENDIX A:ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.


### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. SLAT 3 PCS  
E. LEG SUPPORT 3 PCS

2. WOOD SCREW (8x30mm) 7 PCS  
4. ALLEN BOLT (6x40mm) 4 PCS

### STEP 1 :

USE ALLEN KEY (3) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

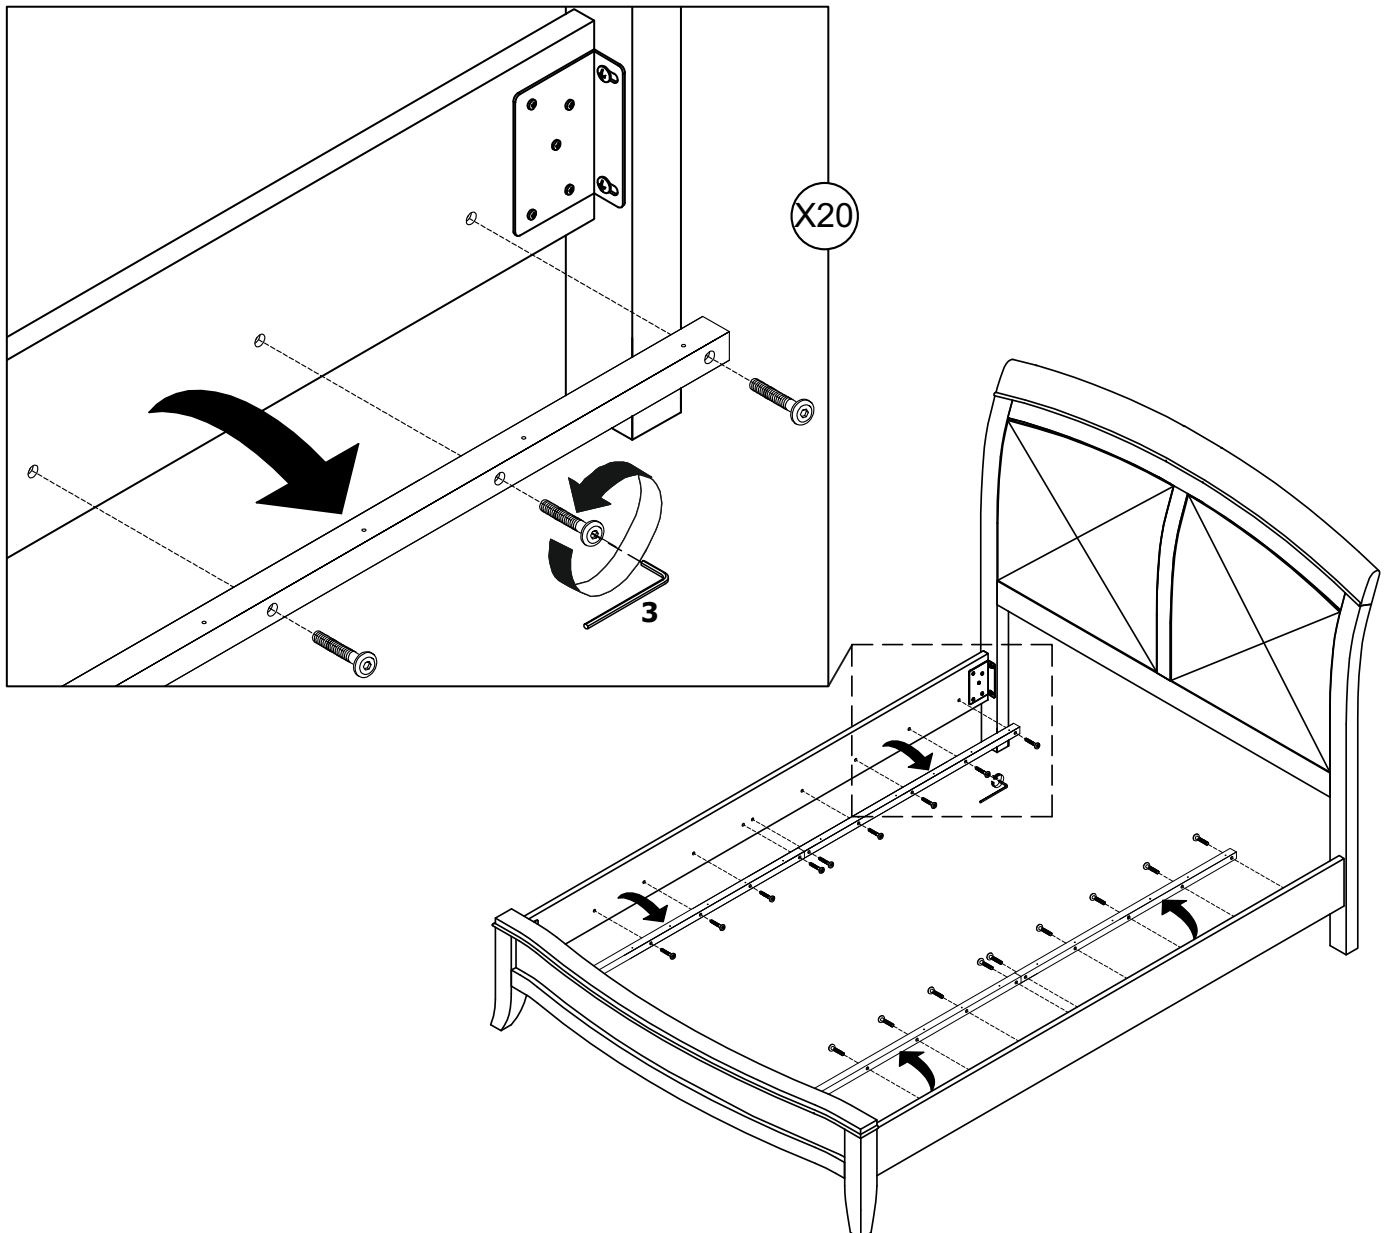

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.


# BRIGHTON PANEL SLEIGH C.KING/E.KING BED

## ASSEMBLY INSTRUCTIONS

**MODUS**  
FURNITURE


### BOX #1

A. HEADBOARD 1 PC

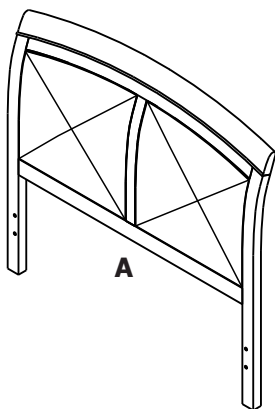

### BOX #2

B. FOOTBOARD 1 PC

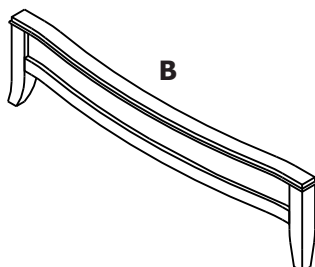


### BOX #3

C. SIDE RAIL 2 PCS


D. SLAT 3 PCS

E. LEG SUPPORT 6 PCS







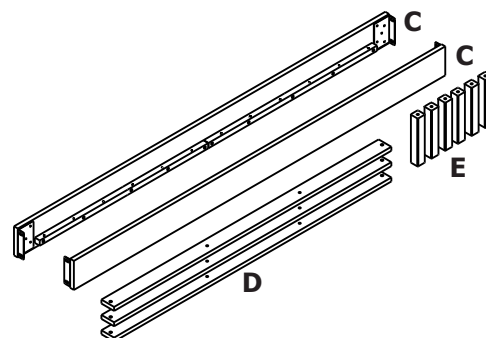BED HARDWARE BOX\*

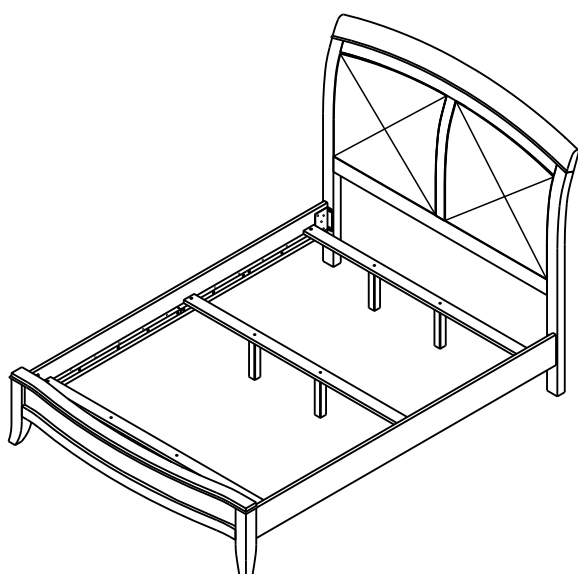

BRIGHTON PANEL SLEIGH ASSEMBLED





### BED HARDWARE PACKED IN BOX #3


1	PHILLIPS HEAD BOLT (8x20mm)	8 PCS	2	WOOD SCREW (8x30mm)	7 PCS	3	ALLEN KEY	1 PC
								
4	ALLEN BOLT (6x40mm)	7 PCS	5	SPRING WASHER (M8)	8 PCS	6	FLAT WASHER (M8)	8 PCS
								



TOOL REQUIRED : PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED)

YOUR BOX  
MAY CONTAIN  
EXTRA HARDWARE

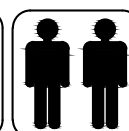
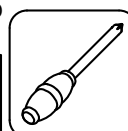


### STEP 1 :

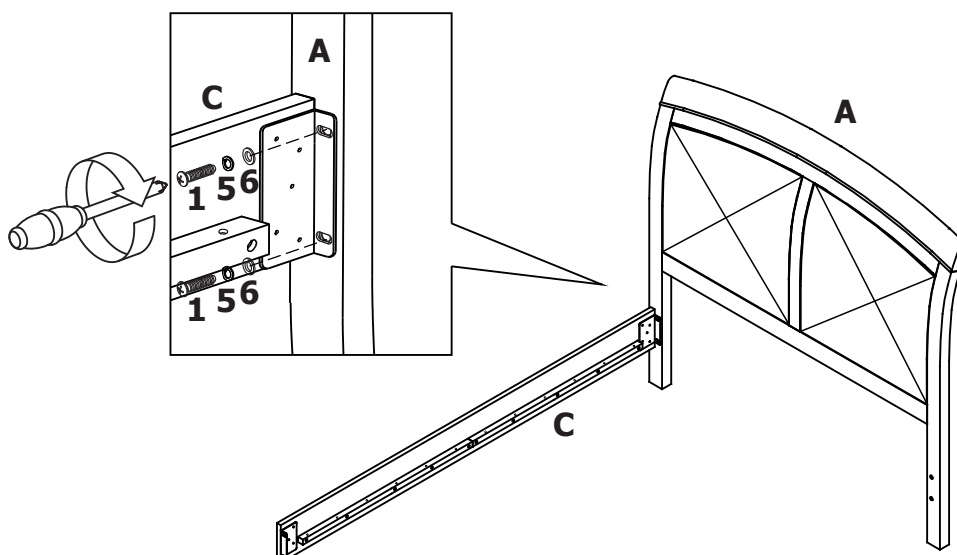

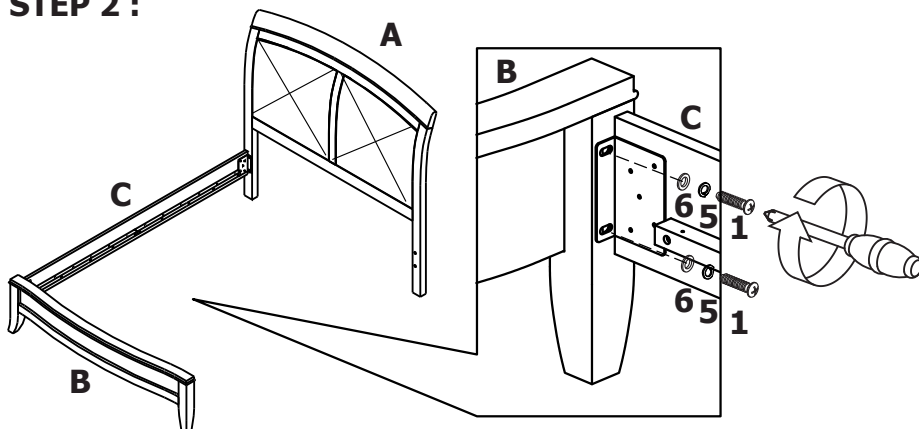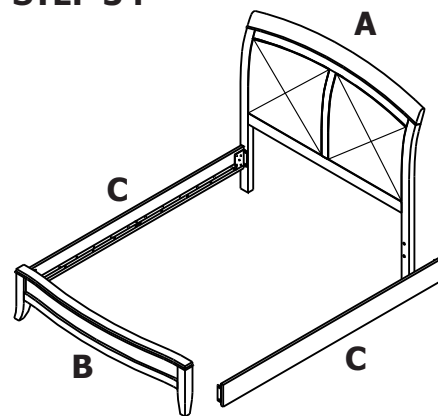**STEP 2 :****STEP 3 :****STOP**


- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 4.

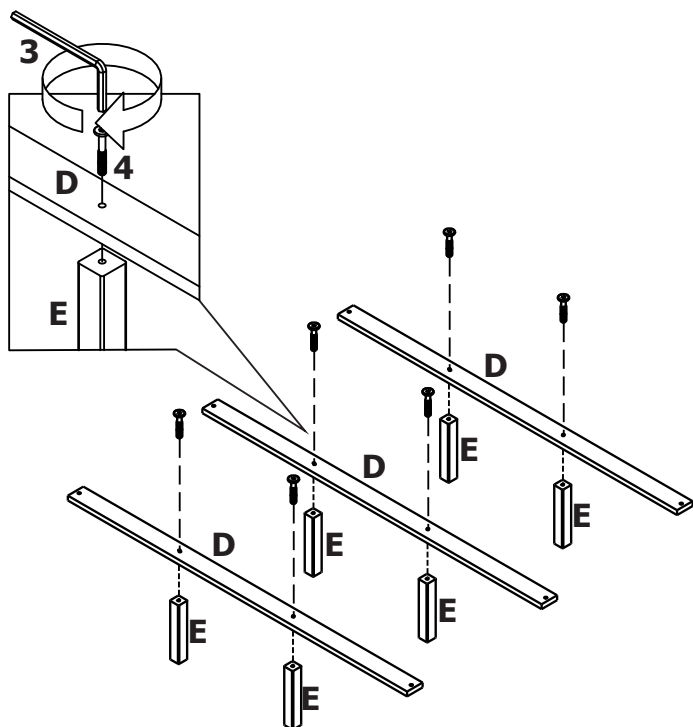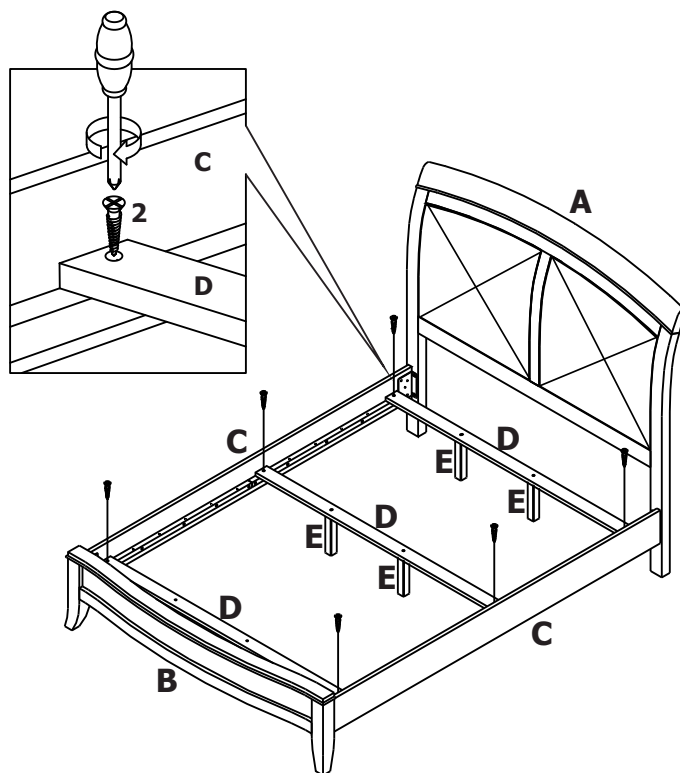**STEP 4 :****STEP 5 :****INSTRUCTIONS FOR ADJUSTING LEVELERS :**

POSITION THE BED IN YOUR ROOM. LOCATE LEVELERS UNDER EACH LEG SUPPORT (E).

TURN COUNTER-CLOCKWISE TO EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH LEG SUPPORT IS APPLYING EQUAL UPWARD PRESSURE ON THE BED SLAT.

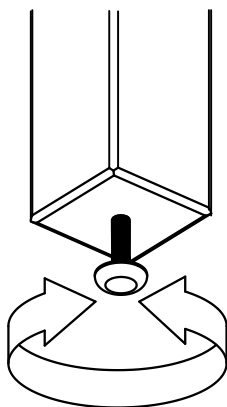**MAINTENANCE INSTRUCTIONS :**

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE LEG SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.



# BRIGHTON PANEL SLEIGH C.KING/E.KING BED

## APPENDIX A:ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. SLAT	3 PCS	2. WOOD SCREW (8x30mm)	7 PCS
E. LEG SUPPORT	6 PCS	4. ALLEN BOLT (6x40mm)	7 PCS

### STEP 1 :

USE ALLEN KEY (3) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

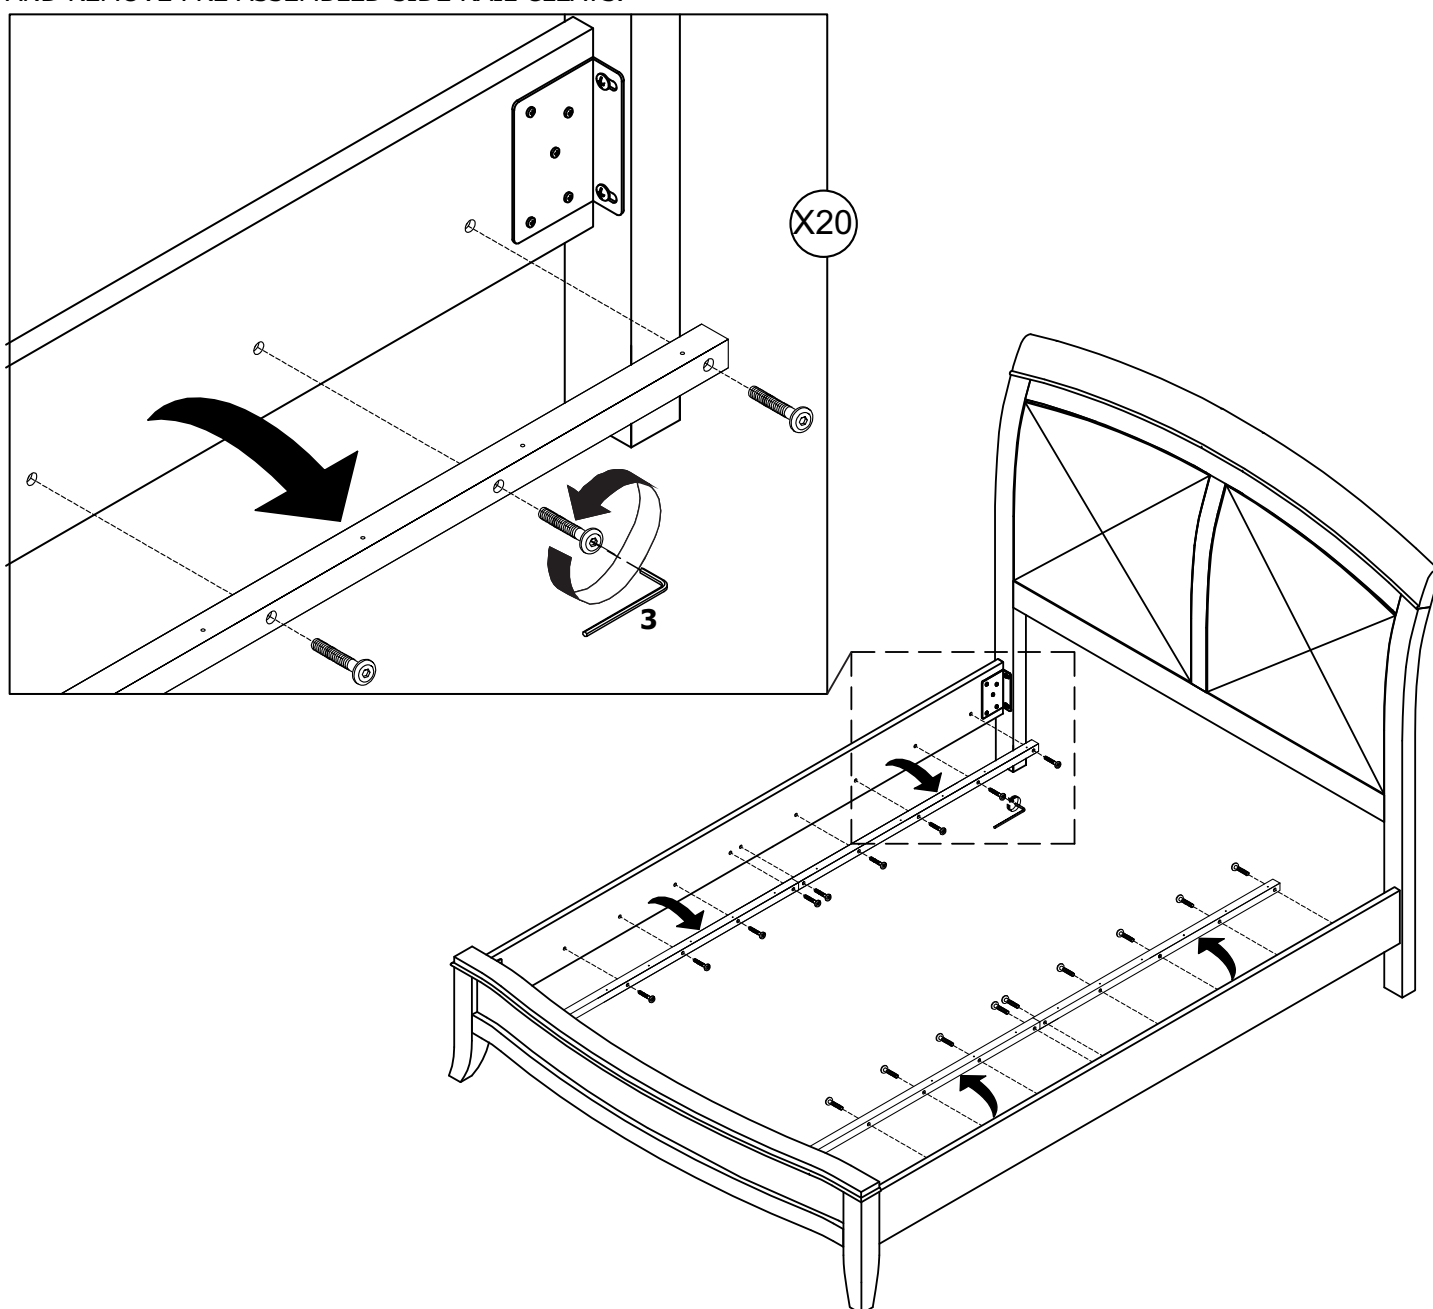

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.