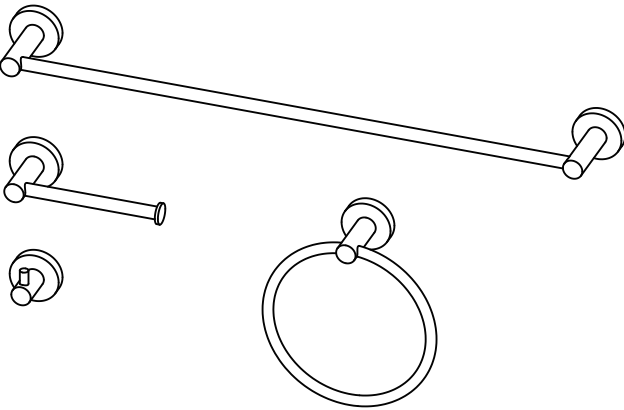
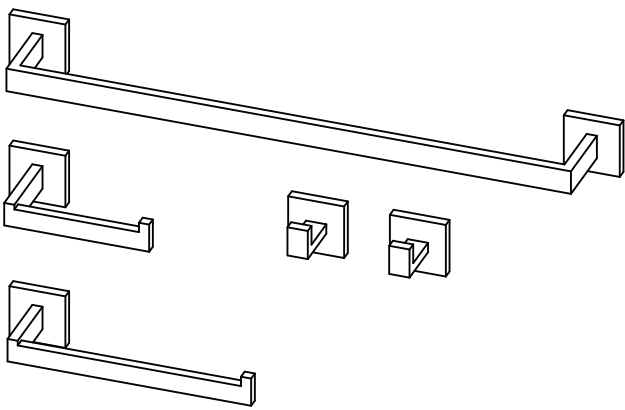


ITEM: AC-AZSET1-**
AC-AZSET2-**
ANZZI BATHROOM ACCESSORY SET
INSTALLATION & OPERATION MANUAL
V1.0
09/25/2024



AC-AZSET1-**



AC-AZSET2-**

DON'T WAIT! REGISTER NOW!

Register your product within 90 days to ensure your product is recognized as an official purchase and is eligible for warranty coverage.

Register online at <https://anzzi.com/pages/register> or scan the QR code at PG. 2.



PRODUCT REGISTRATION*

IMPORTANT: Warranty will not be recognized unless product is registered.

Register online at <https://anzzi.com/pages/register> or Scan the QR code below.
Registering online is fast, secure, and ensures we receive your information.

1

USE YOUR PHONE CAMERA
TO SCAN THE QR CODE

2

FILL IN A QUICK
REGISTRATION FORM

Thank you for your purchase!

Registering your products ensures you maximize your warranty benefits and receive prompt service and support.

Name*

Email*

City*

Order #*

Installer Name

Model Purchased*

Installer Phone Number

Customer Age Range

3

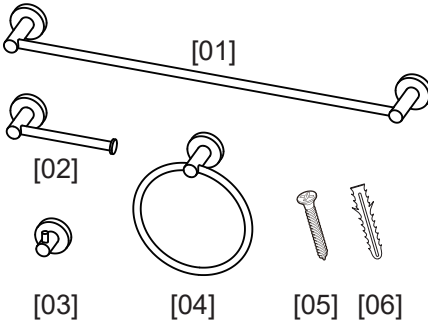
CLICK SUBMIT AND
ENJOY PEACE OF MIND

BEFORE YOU BEGIN

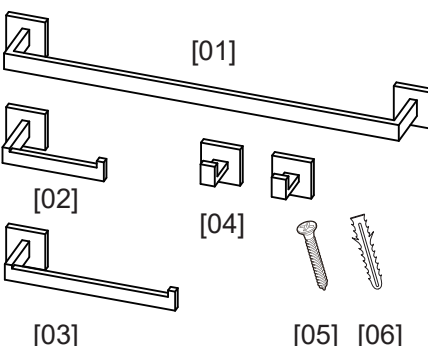
- Please check the product for damage and missing parts immediately upon delivery. Damage reported later will not be covered by our warranty. Please handle the product with care. Avoid any impact to the surface.
- This item is not designed for use as a grab bar. Do not mount in locations where product is likely to be used as a grab bar.
- Use caution when drilling into walls to avoid drilling into electrical and plumbing lines hidden within wall.
- **Additional wall support:**
Installation of the accessories may need additional wood framing in a place of installation. You may need to remove a portion of the sheetrock with tiles to install the wooden block. If you have an access from the back it will be easier to cut a piece of sheetrock to install this additional wood framing.

COMPONENTS

AC-AZSET1-**

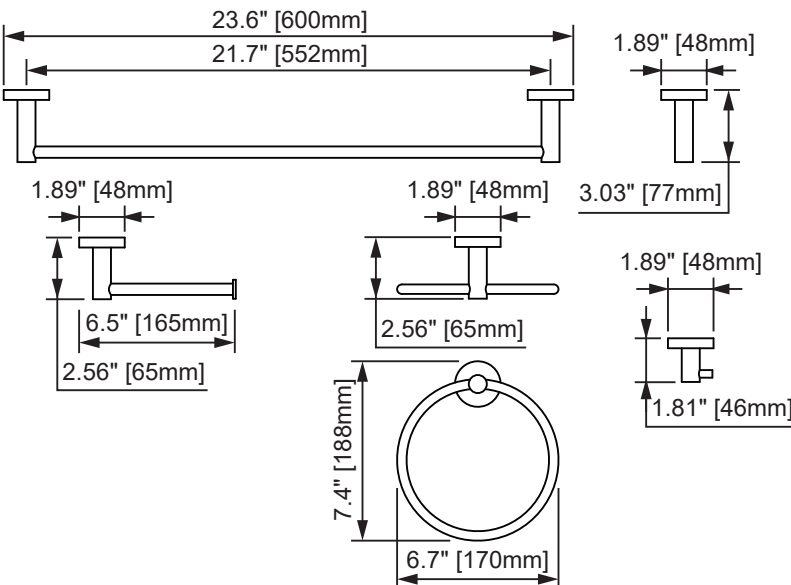
			Part	Description	Qty.
[01]			[01]	Towel Bar	1
[02]			[02]	Toilet Paper Bar	1
[03]			[03]	Robe Hook	1
[04]			[04]	Towel Ring	1
[05]			[05]	Screws (#8 x 1.77")	10
[06]			[06]	Anchors	10

AC-AZSET2-**

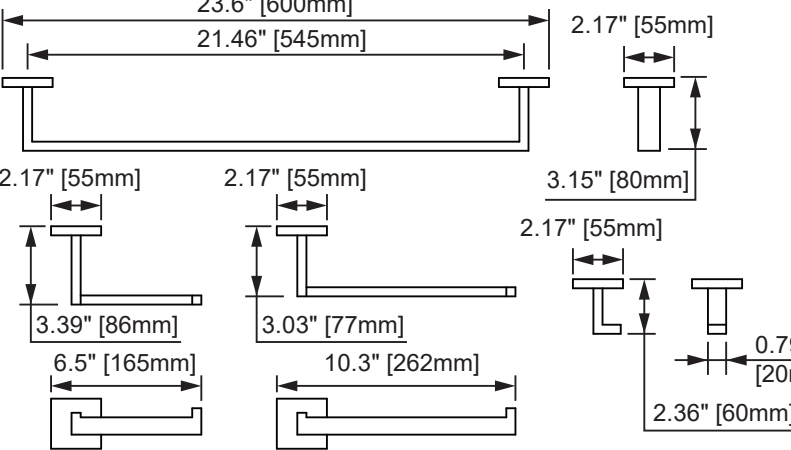
			Part	Description	Qty.
[01]			[01]	Towel Bar	1
[02]			[02]	Toilet Paper Bar	1
[03]			[03]	Towel Arm	1
[04]			[04]	Robe Hooks	2
[05]			[05]	Screws (#8 x 1.77")	12
[06]			[06]	Anchors	12

PRODUCT SIZE CHART

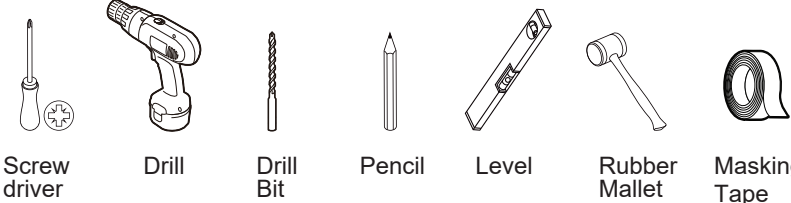
AC-AZSET1-**



AC-AZSET2-**



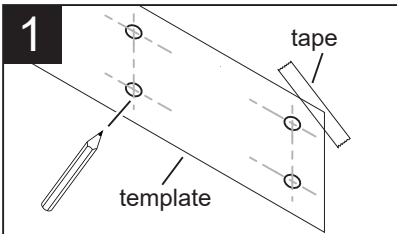
TOOLS AND MATERIAL



INSTALLATION

WARNING For ease of installation, READ through ALL instructions before you begin.

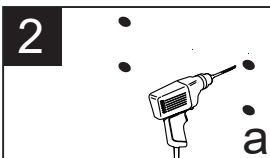
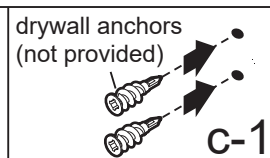
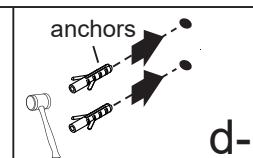
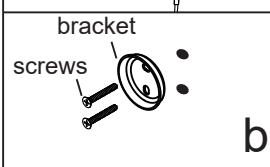
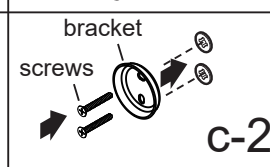
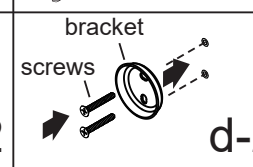
1



a. Identify the two or four hole locations on template for your accessories and ensure it is completely level.

b. Place tape on all four corners of the template.

c. Mark hole locations and check to make sure marks are on the wall. Remove the template from the wall.

<p>2</p> 	<p>drywall anchors (not provided)</p> 	<p>anchors</p> 
<p>bracket</p> <p>screws</p> 	<p>bracket</p> <p>screws</p> 	<p>bracket</p> <p>screws</p> 

Install the bracket in wood stud:

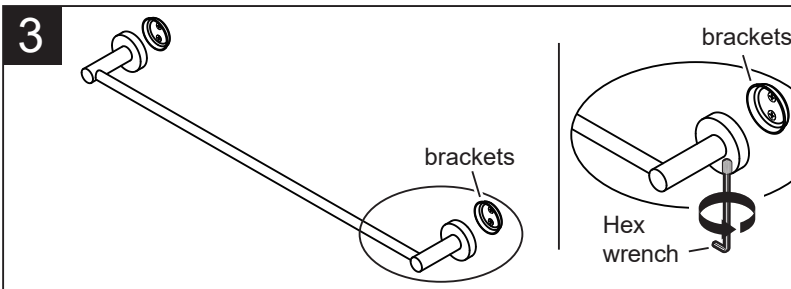
a. Drill 7/64" pilot holes through tile in each mounting location if drilling into wooden stud. Then drill 11/64" holes through the tile only at the same locations to allow the wood screws to pass through.

b. Remove the brackets from the accessories. Align them with pilot holes and secure with screws.

NOTICE: The pilot hole size is for soften wood. Try to drill bigger holes for hard wood.

<p>Install the bracket in a dry wall:</p> <p>a. Drill 1/8" pilot holes through the wall.</p> <p>c-1. Drive the drywall anchors (not provided) into the wall using a Phillips screwdriver until flush with the wall.</p> <p>c-2. Remove the brackets from the accessories. Align the brackets with the drywall anchors and secure with screws.</p>	<p>Install the bracket on a solid wall:</p> <p>a. Drill 1/4" pilot holes into the wall.</p> <p>d-1. Tap the anchors into the wall using a hammer until flush with the wall.</p> <p>d-2. Remove the brackets from the accessories. Align the brackets with the anchors and secure with</p>
--	--

3



Attach the towel bar to the brackets. Tighten the set screws with the Hex wrench to secure it.

CARE AND MAINTENANCE

Care should be given to the cleaning of this product. Although its finish is extremely durable, it can be damaged by harsh abrasives or polish. To clean, simply wipe gently with a damp cloth and blot dry with a soft towel.

