# Assembly Guide





If you're having any difficulty during assembly of this product, don't hesitate to call us at 1-800-950-4782.

Our customer service experts are trained to provide step-by-step instruction and can easily replace any missing or damaged parts.

Representatives are available Monday-Friday from 8:30 a.m. to 7:30 p.m. (ET)



Lot Code #

### For best results, keep these tips in mind:

- We know you want to finish this assembly as quickly as possible, but trust us: you'll have a better experience if you take it one step at a time.
- Q Give yourself some room to work near where you want the fully assembled product.
- If your floor isn't carpeted, assemble this product on the empty carton to avoid scratching.
- Do you have a friend who owes you a favor? Some steps may go a little easier with a second set of hands.

#### DOs

- Use a #2 Phillips head screwdriver (or other handheld tools as indicated)
- Wear safety glasses at all times during assembly
- Carefully follow the instructions in this guide and complete all steps in order
- Give us a call if you're having trouble with a particularly tricky step

### DON'Ts

- We know power tools are quick and easy, but you shouldn't use them when assembling this product (unless otherwise specified)
- Never move your furniture with items inside or resting on the surface
- Do not attempt to use this product before all steps have been completed



### Watch assembly videos right on your phone or computer!



Some steps include QR codes that link to helpful videos. Watch out for the icon on the left! Simply open up your smartphone camera to scan the code.

(Users of older smartphones may need to install a QR Reader.)

#### SCAN HERE



**FOR VIDEOS** 

Or visit https://www.bushfurniture.com/ CustomerService/HowtoAssemble.aspx

### **IMPORTANT SAFETY INFORMATION**



## PLEASE READ WARNINGS


Improper use can cause safety hazards, or damage to your furniture and household items.

Warning	Do	Don't	Why it's important
Serious injury may occur.	Assemble following all instructions using all indicated parts and hardware provided.	<ul> <li>Do not move unit when loaded.</li> <li>Do not load with a television or other heavy equipment.</li> <li>Do not exceed the maximum load limits stated in the instructions.</li> </ul>	Improper assembly, use or loading can lead to product instability, tipover, or collapse.

Advertencia	Hacer	No	Por qué es importante
Pueden producirse lesiones graves.	Realice el montaje siguiendo todas las instrucciones y utilizando todas las piezas indicadas y los herrajes suministrados.	<ul> <li>No mueva la unidad cuando esté cargada.</li> <li>No cargue el mueble con un televisor u otro equipo pesado.</li> <li>No supere los límites máximos de carga indicados en las instrucciones.</li> </ul>	El montaje, uso o carga inadecuados pueden provocar inestabilidad, vuelco o colapso del producto.


Avertissement	À faire	À ne pas faire	Pourquoi c'est important
Peut entraîner des blessures graves.	Assembler en suivant toutes les instructions et en utilisant toutes les pièces et la quincaillerie incluses.	<ul> <li>Ne pas déplacer le meuble lorsqu'il est chargé.</li> <li>Ne pas charger le meuble avec un téléviseur ou tout autre équipement lourd.</li> <li>Ne pas dépasser les limites de poids maximales indiquées dans les instructions.</li> </ul>	Un assemblage, une utilisation ou un chargement incorrects peuvent entraîner l'instabilité, le basculement ou l'effondrement du produit.



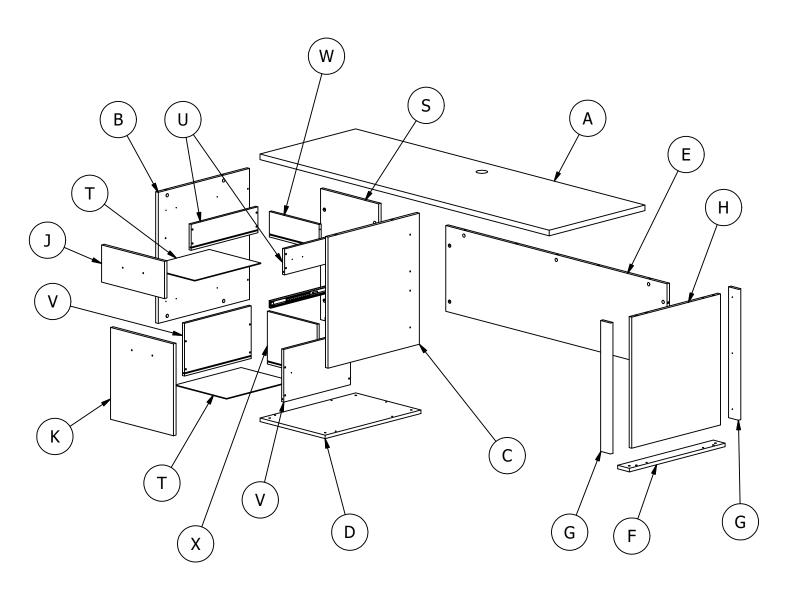


Fasteners are shown actual size.


Hardware not to scale.

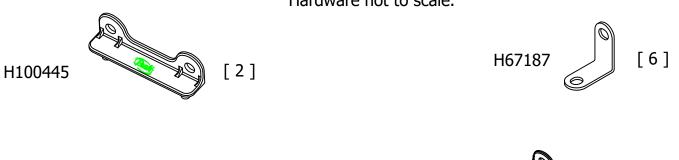




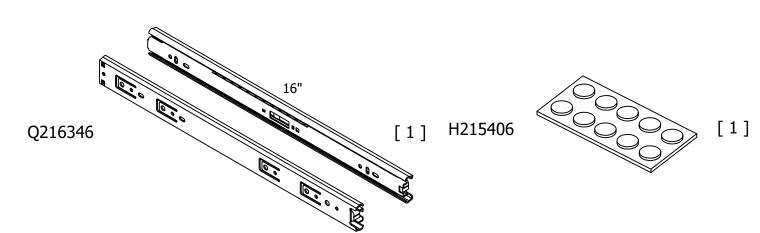








Hardware not to scale.

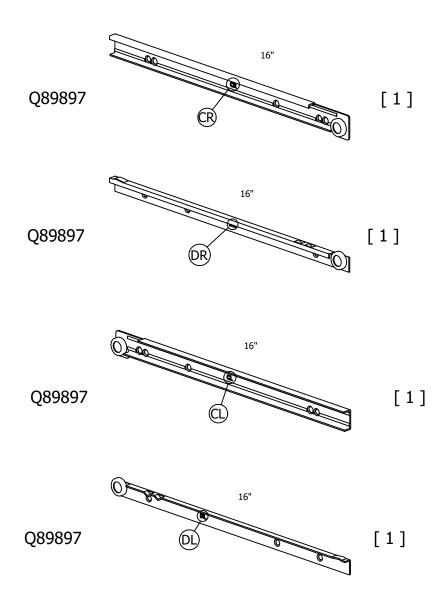


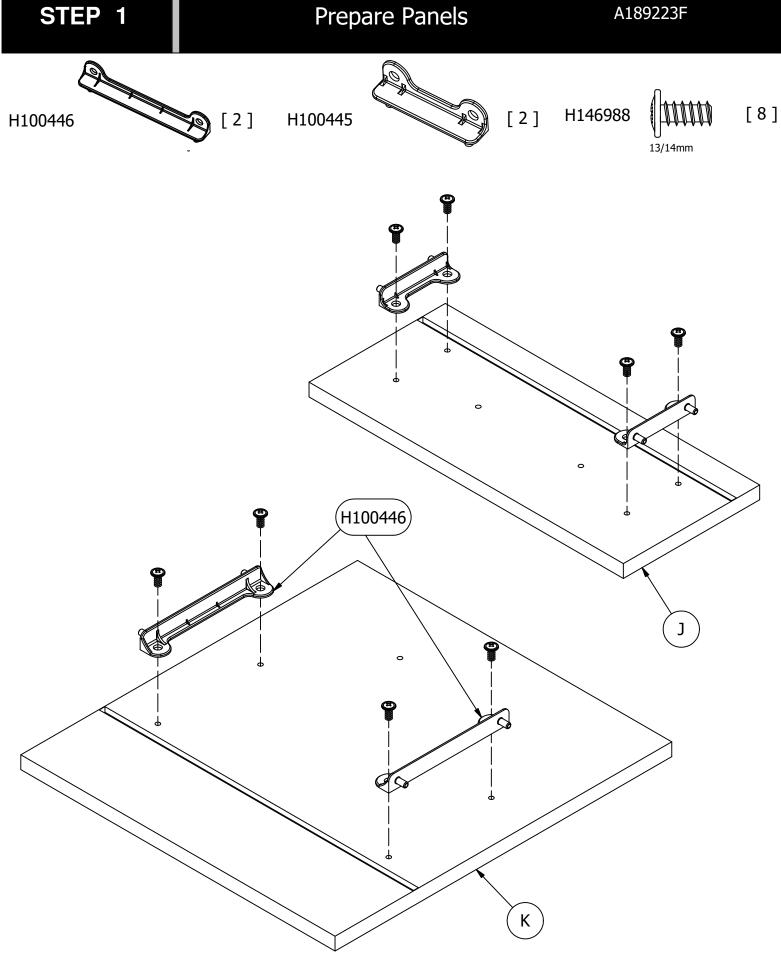



Have an assembly question or need a replacement part? Just call **1-800-950-4782**, we are here to help.




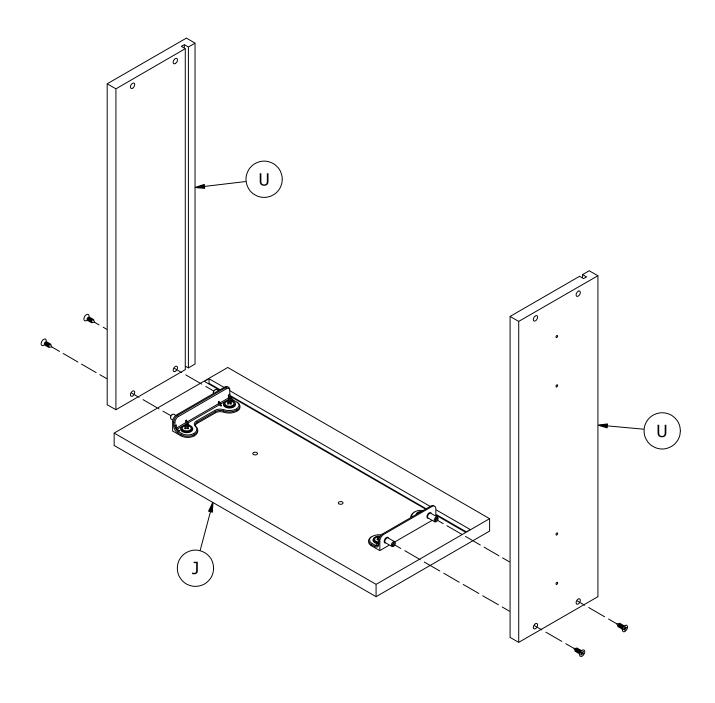





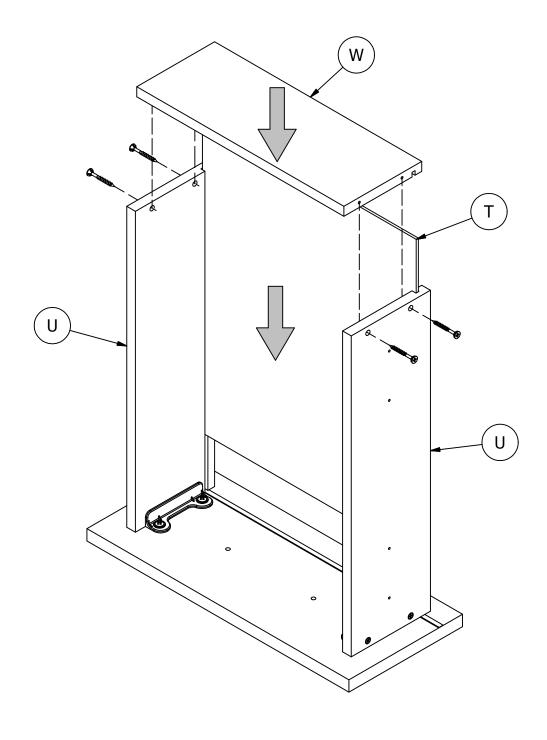


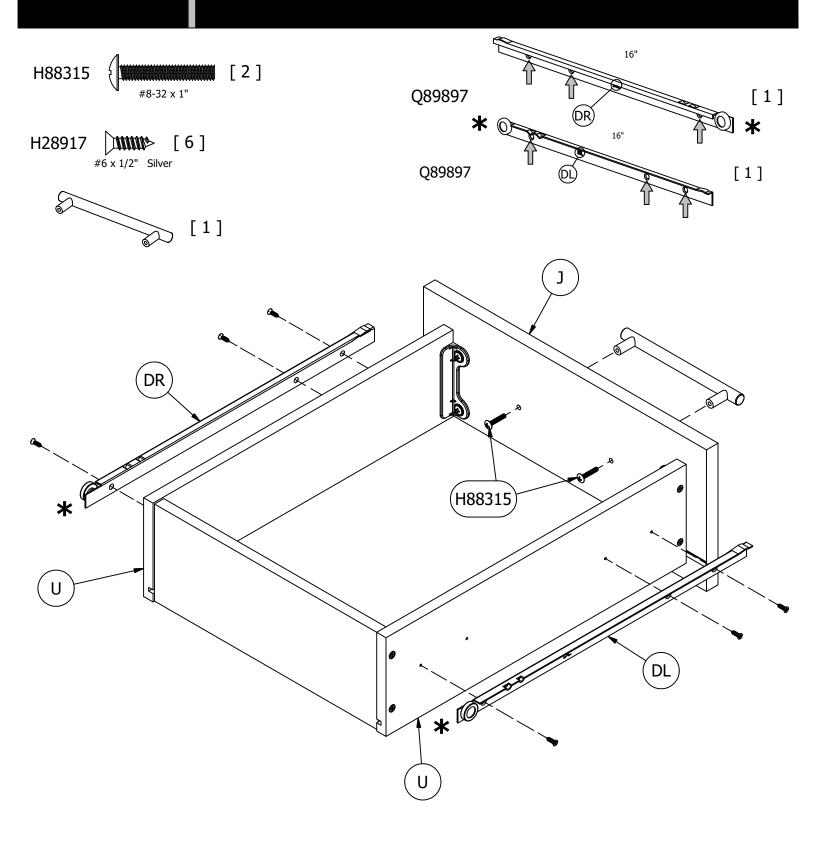



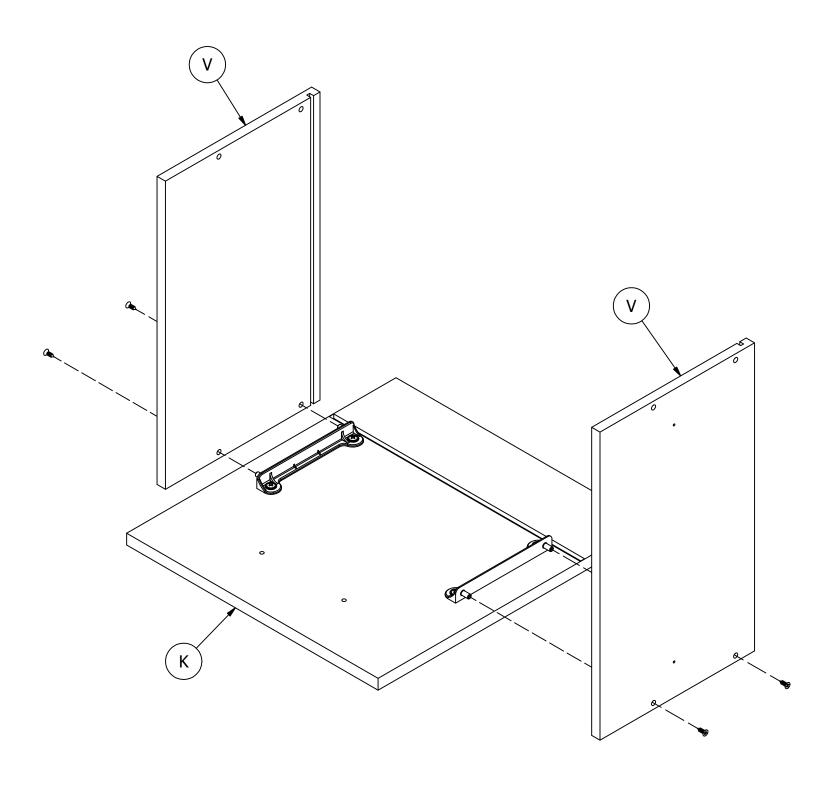



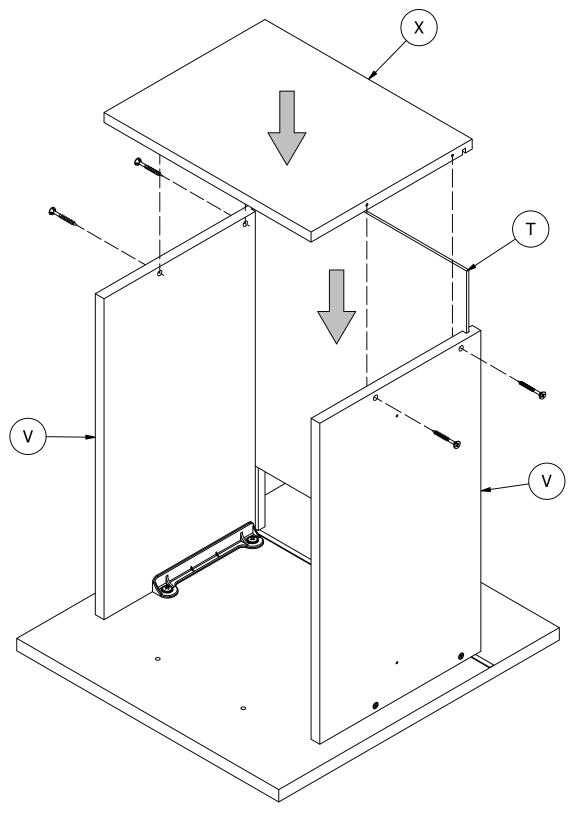


Have an assembly question or need a replacement part? Just call **1-800-950-4782**, we are here to help.


#### Slides Must Be Separated Before Assembly. After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje. Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage. Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

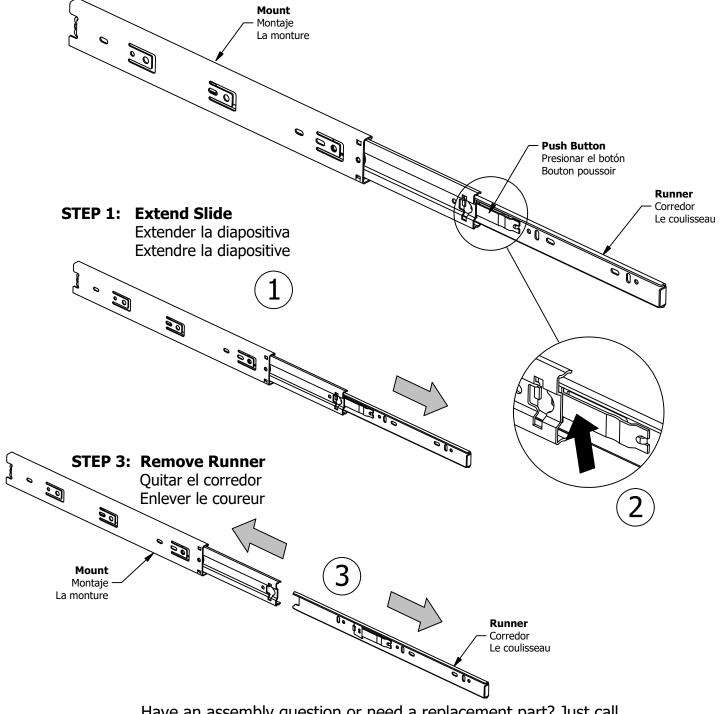

Have an assembly question or need a replacement part? Just call **1-800-950-4782**, we are here to help.





[2]


H215406




[4]

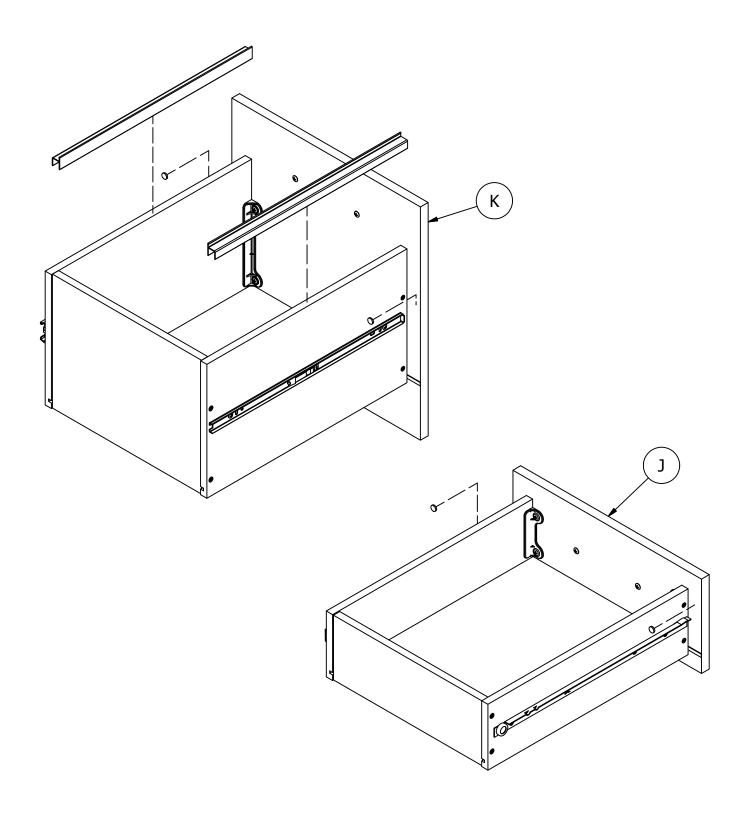




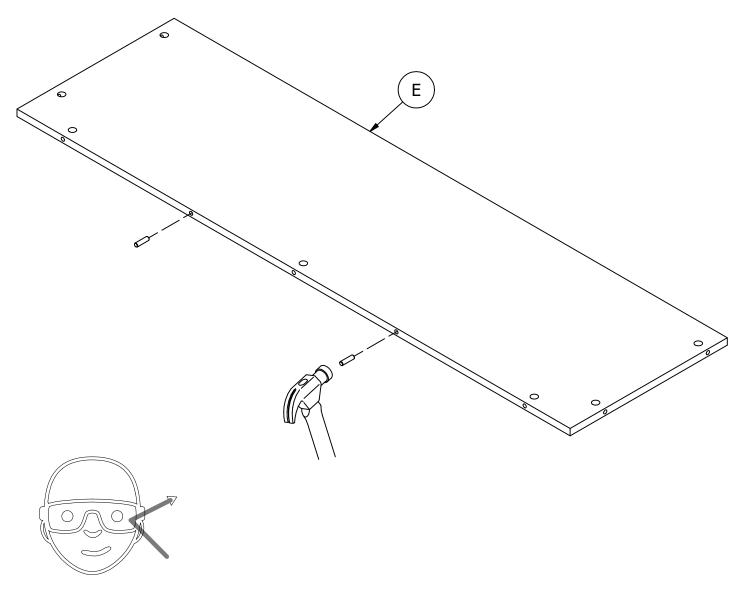


Safety glasses Gafas de seguridad Lunettes de protection

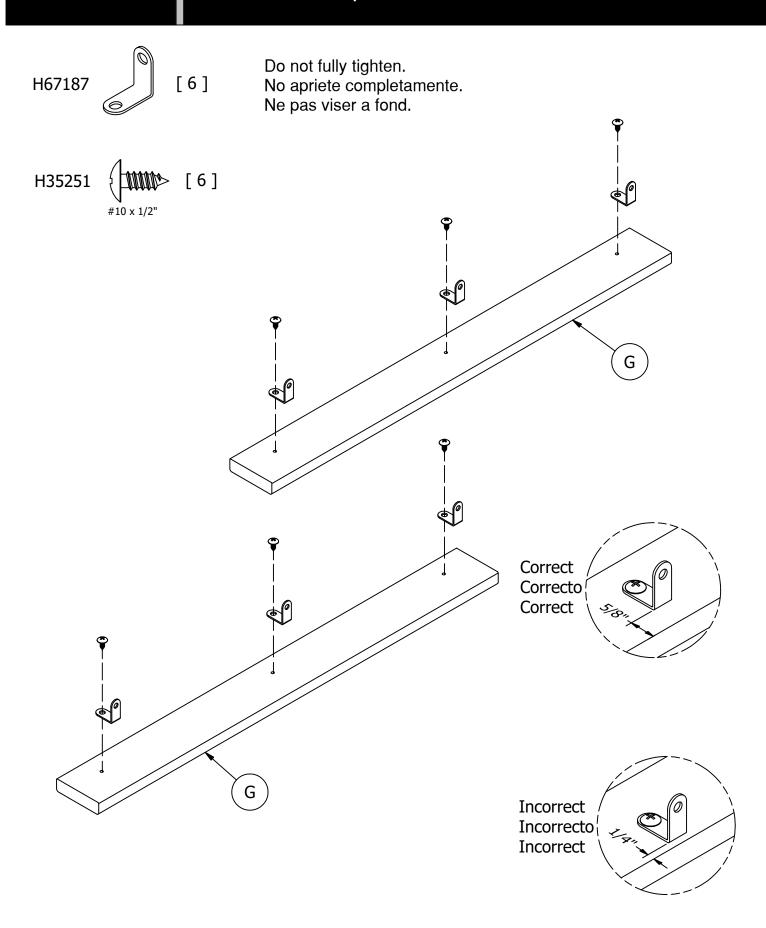


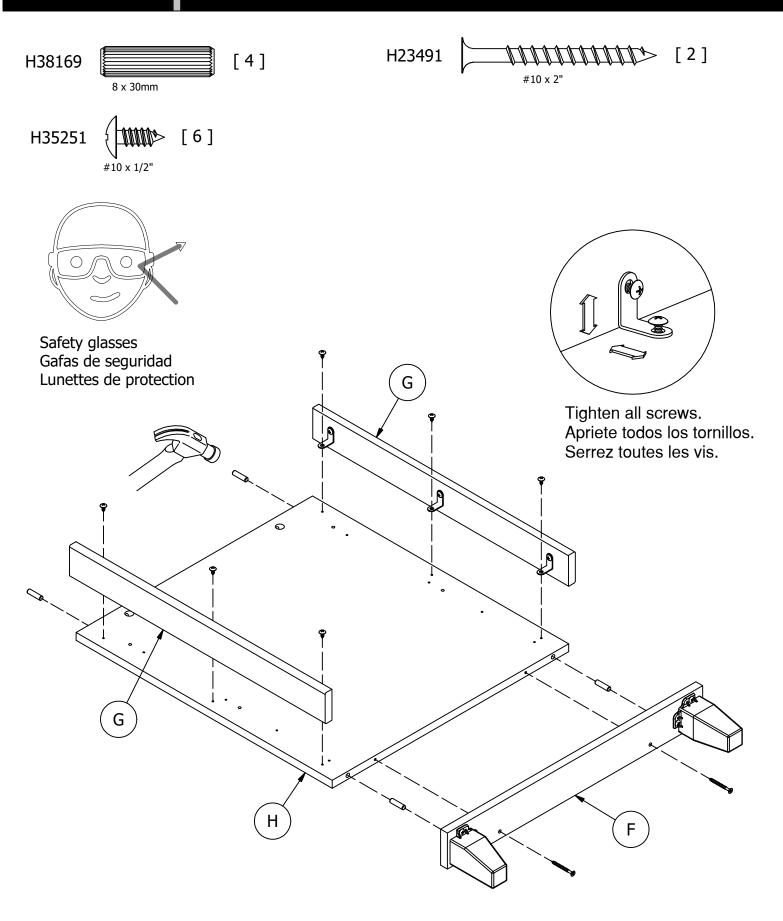


Go to Step 16. Proceda al paso 16. Allez à l'étape 16.

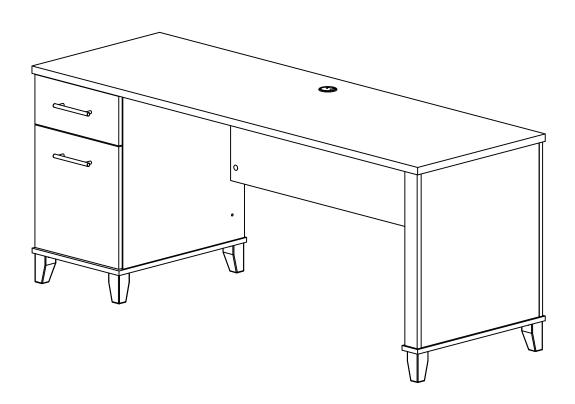



Go to Step 26. Proceda al paso 26. Allez à l'étape 26.

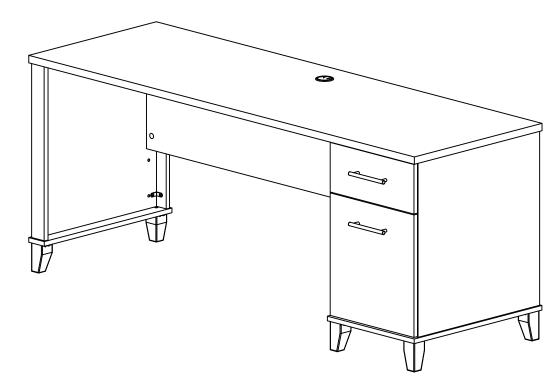


Have an assembly question or need a replacement part? Just call **1-800-950-4782**, we are here to help.

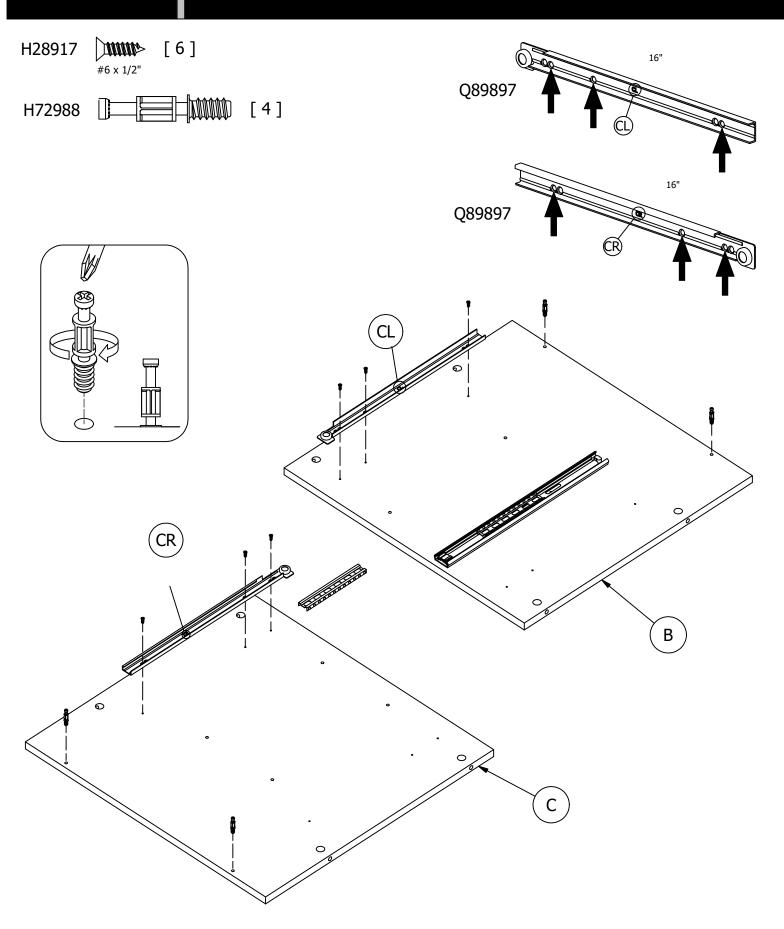


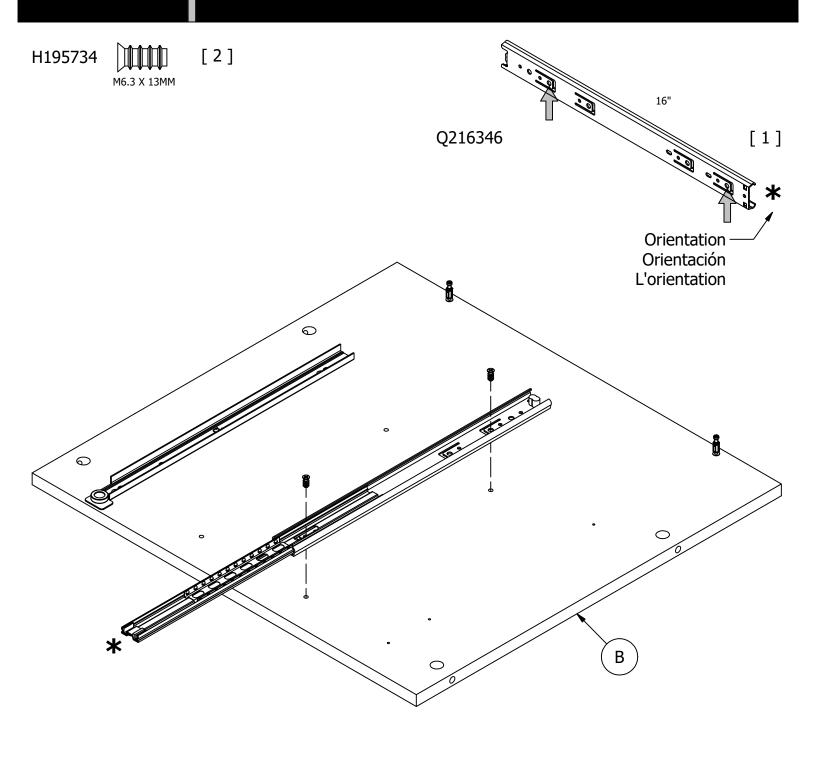

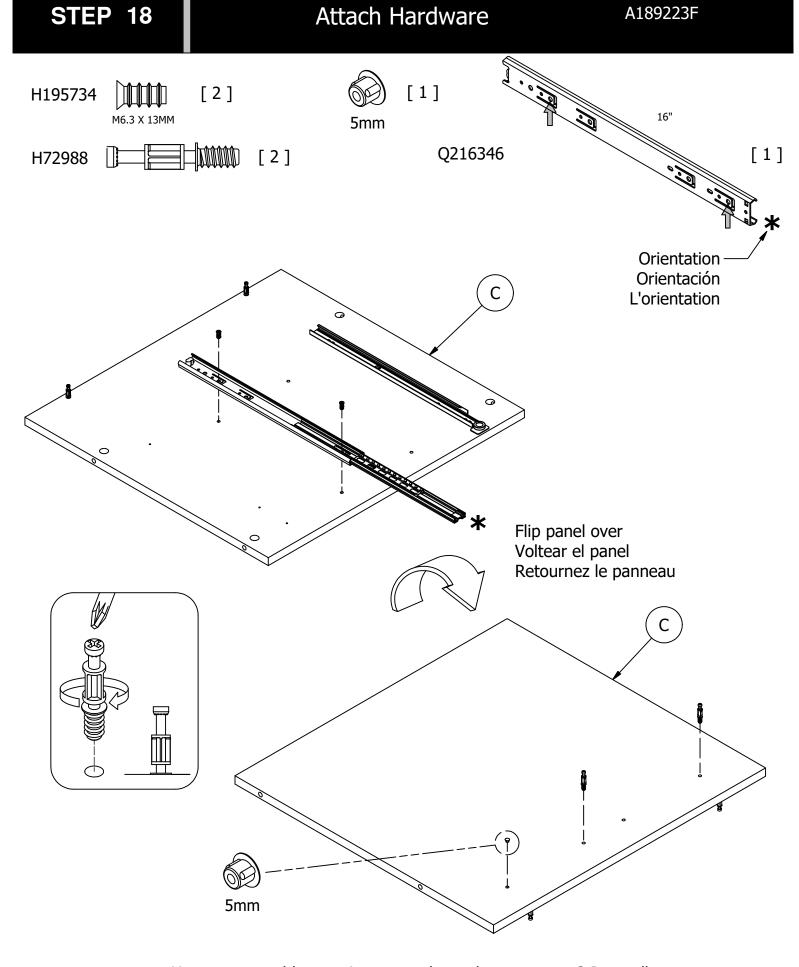

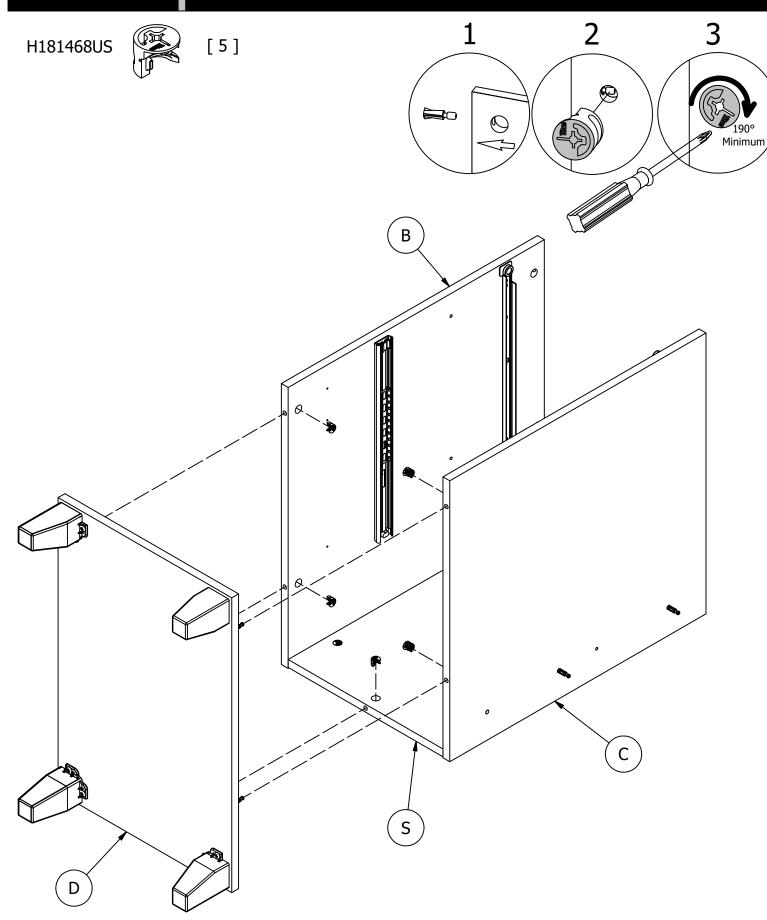


Have an assembly question or need a replacement part? Just call **1-800-950-4782**, we are here to help.

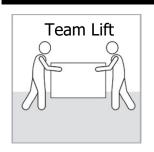


H181468US












[2]

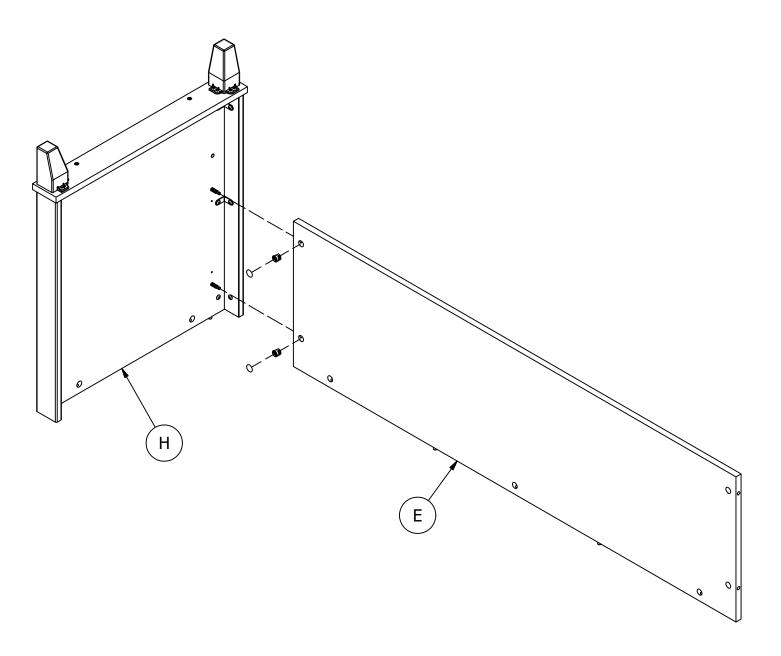

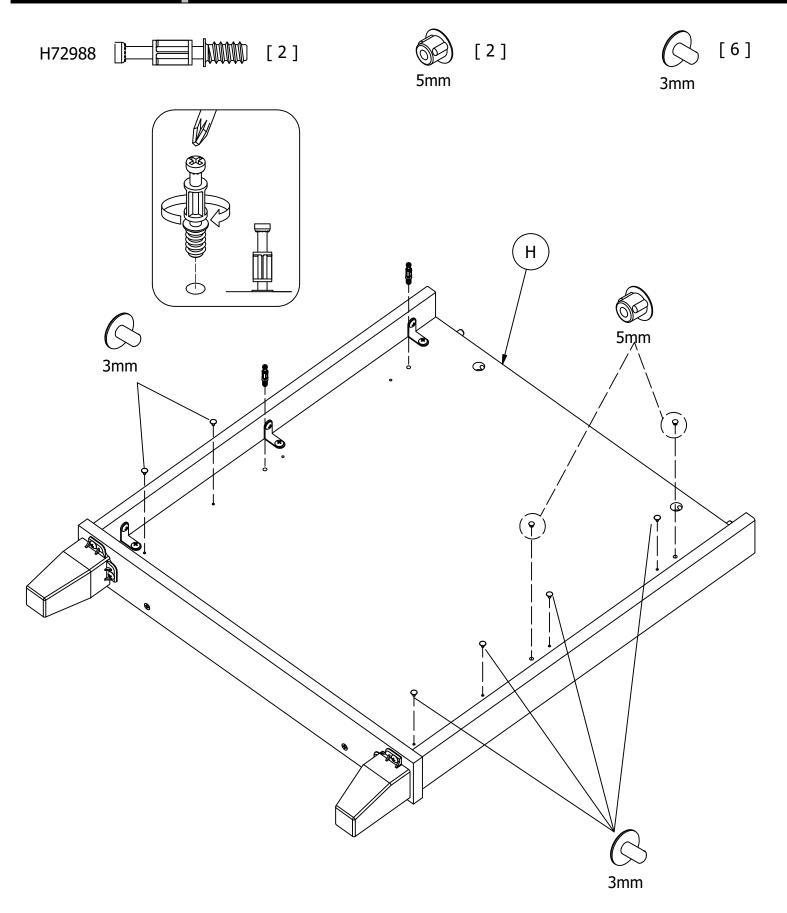

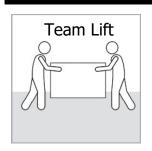


H181468US




[2]



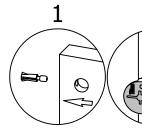


2


3





[2]

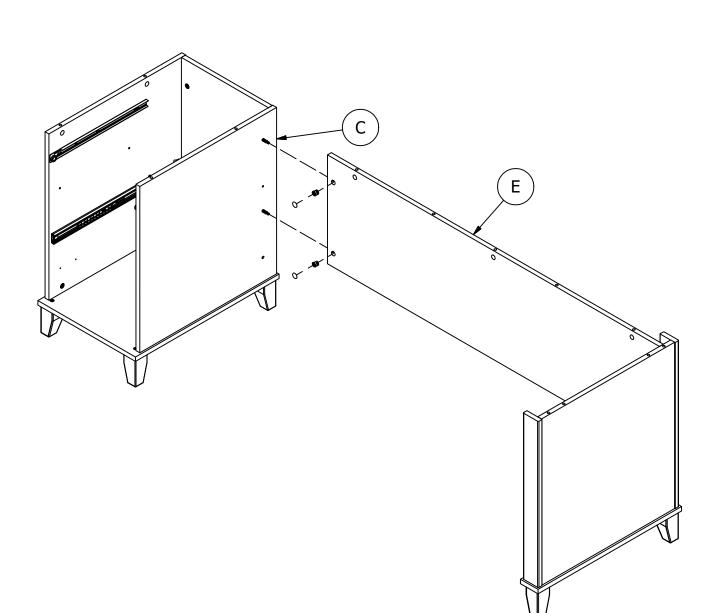

H72988 [ 9]

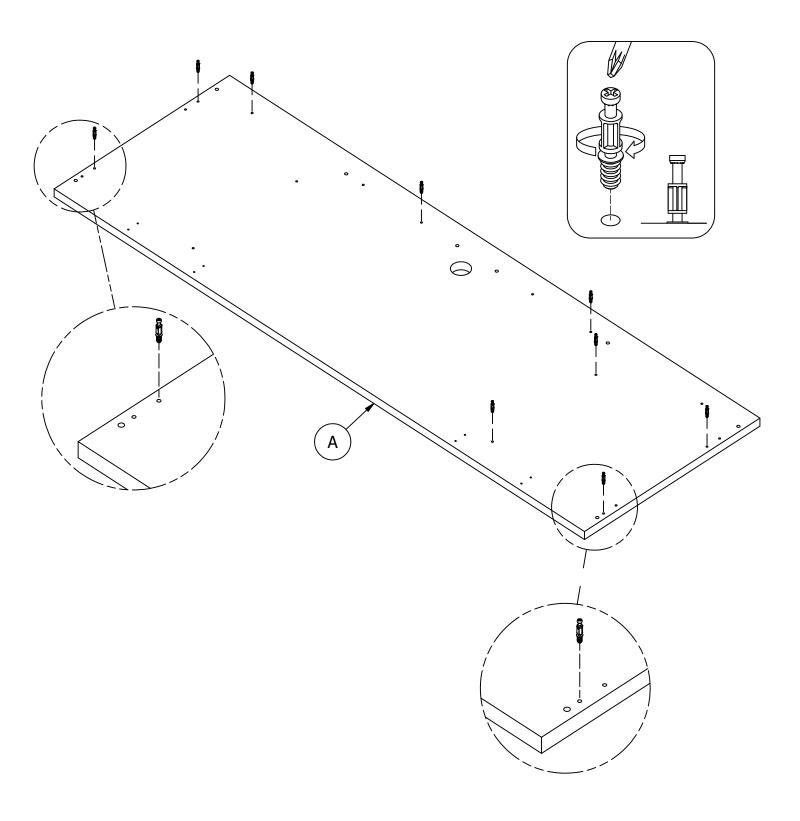

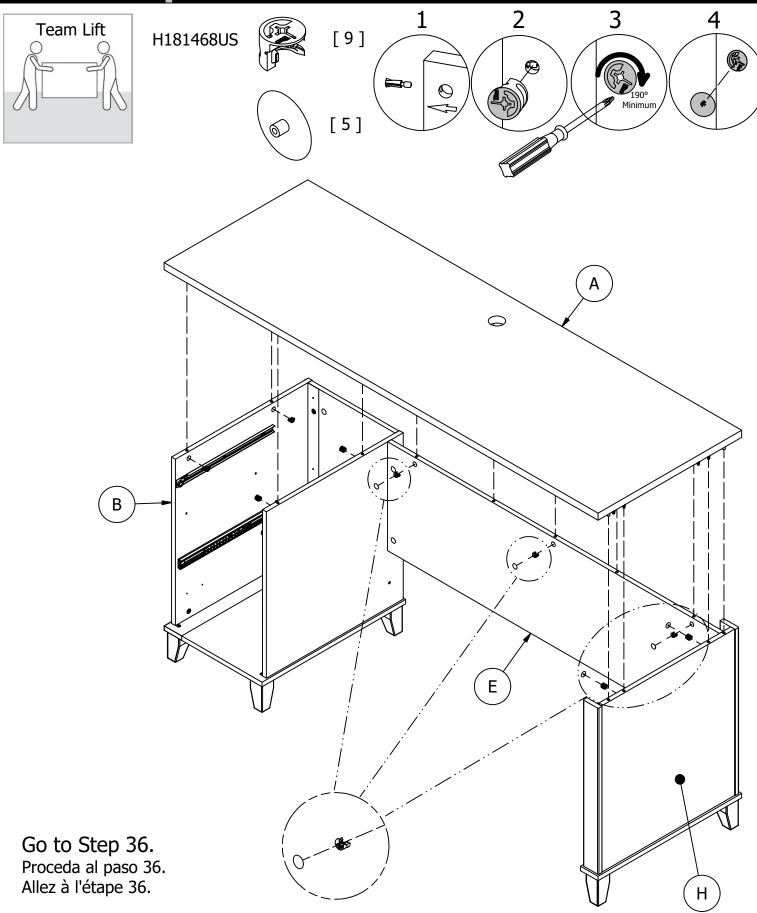


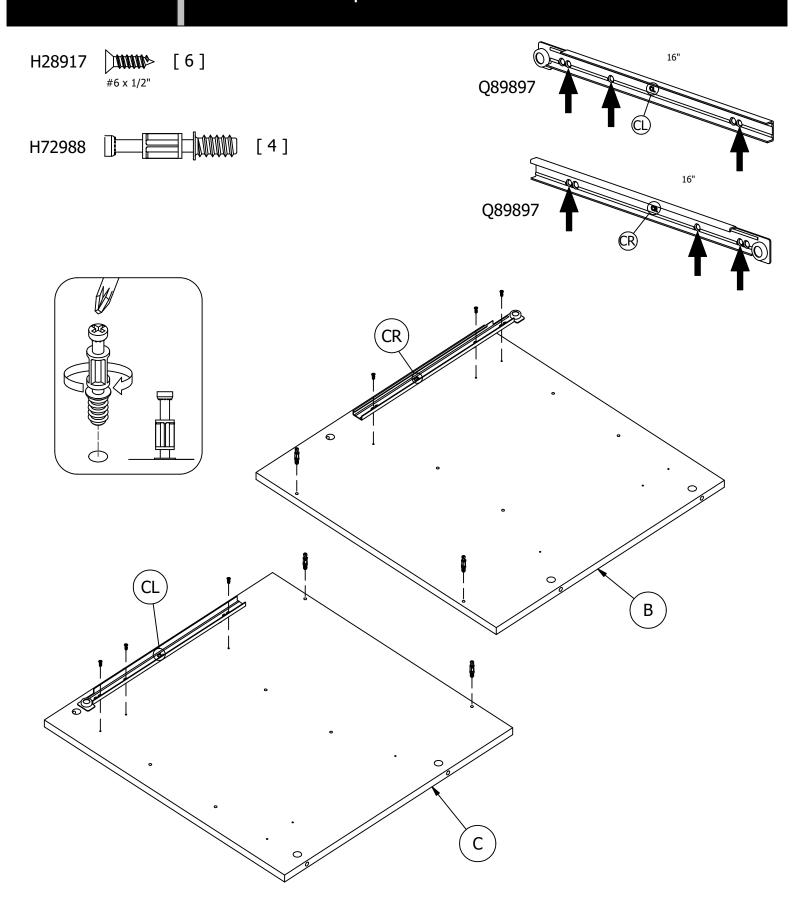








[2]

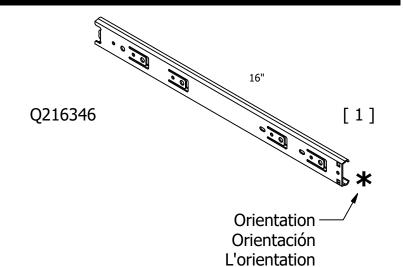

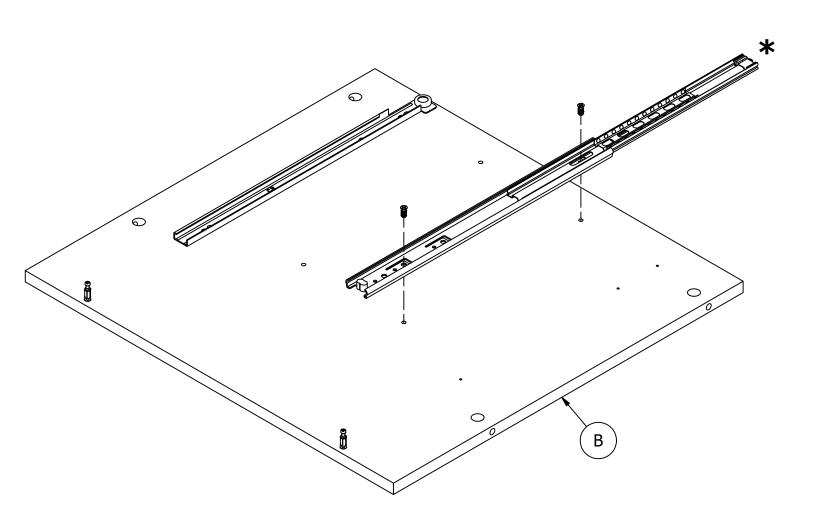


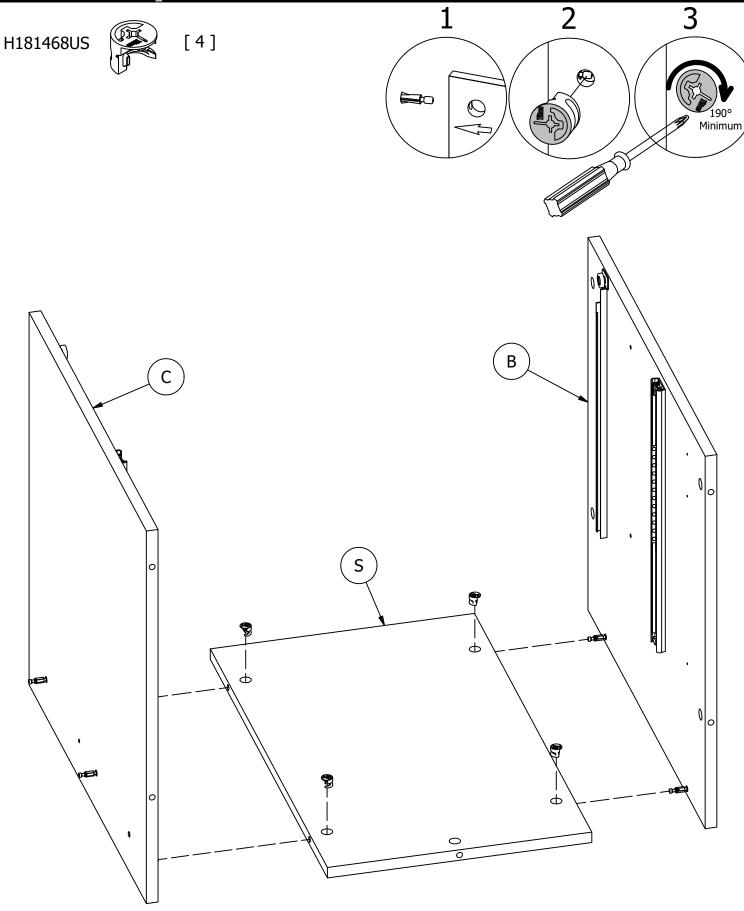

Have an assembly question or need a replacement part? Just call **1-800-950-4782**, we are here to help.

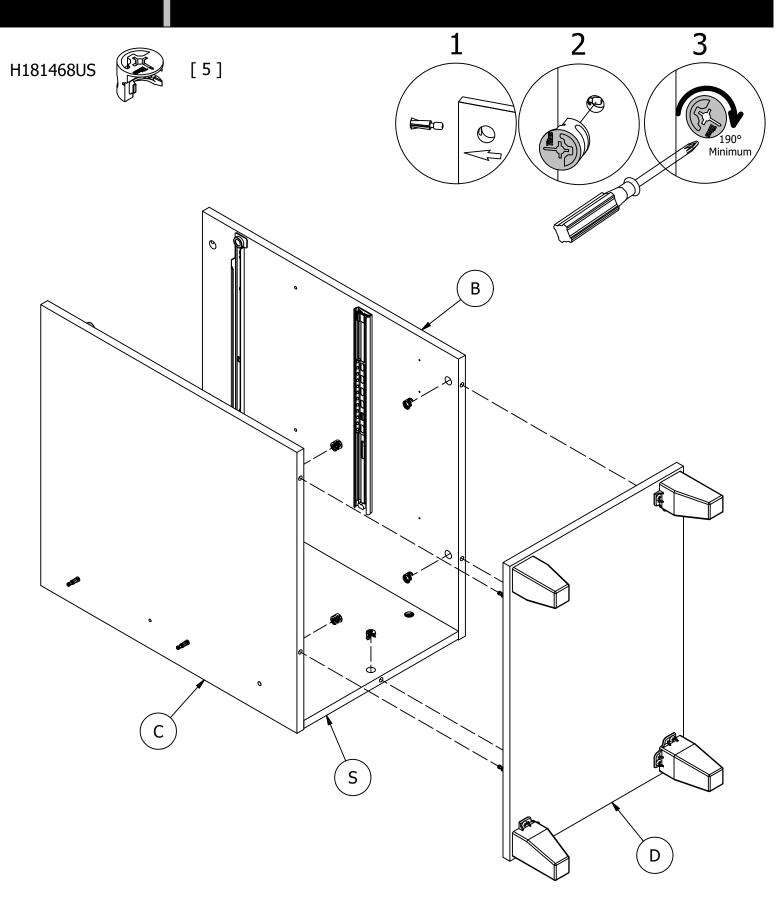



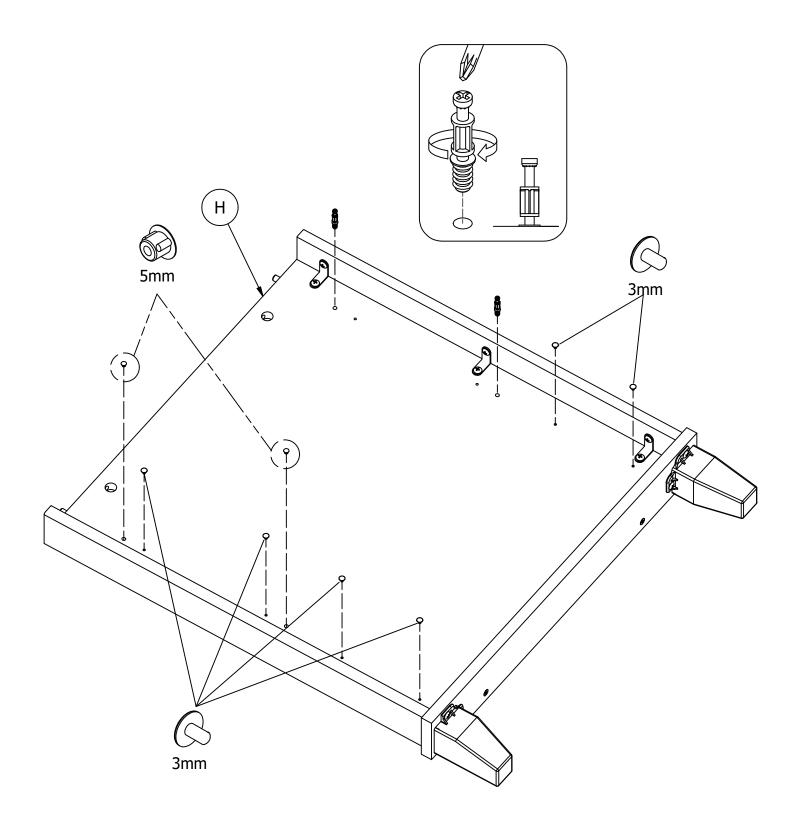










[2]





2









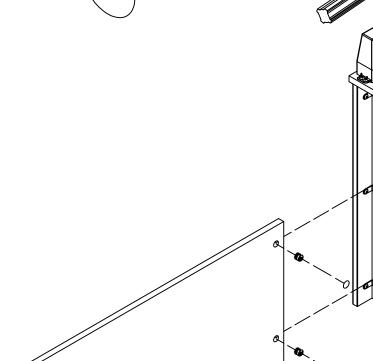

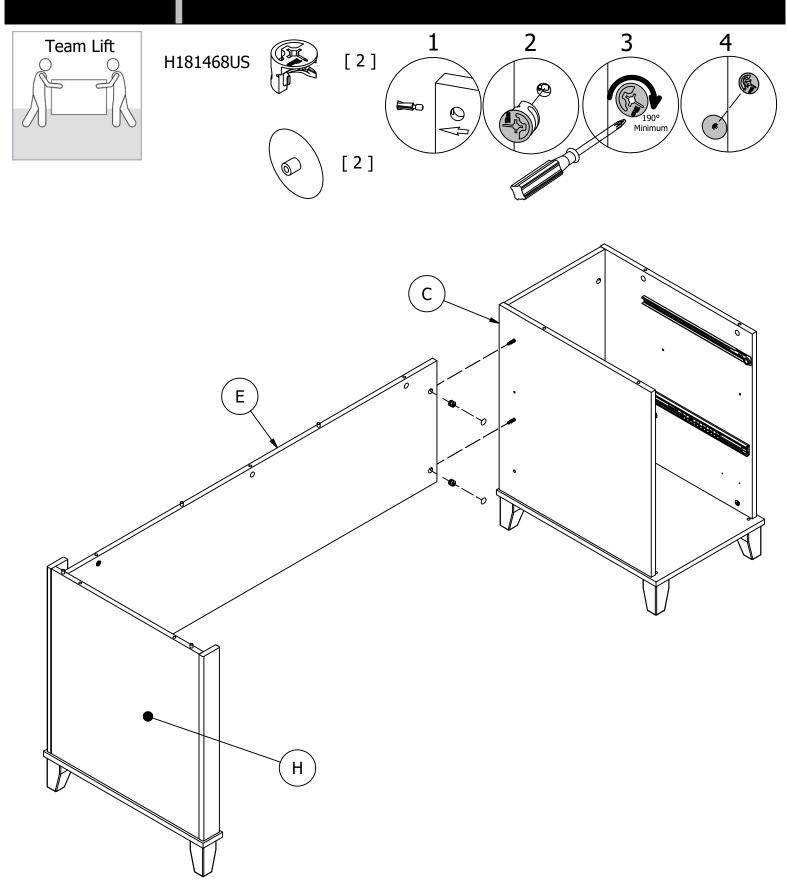


H72988 [ 9]

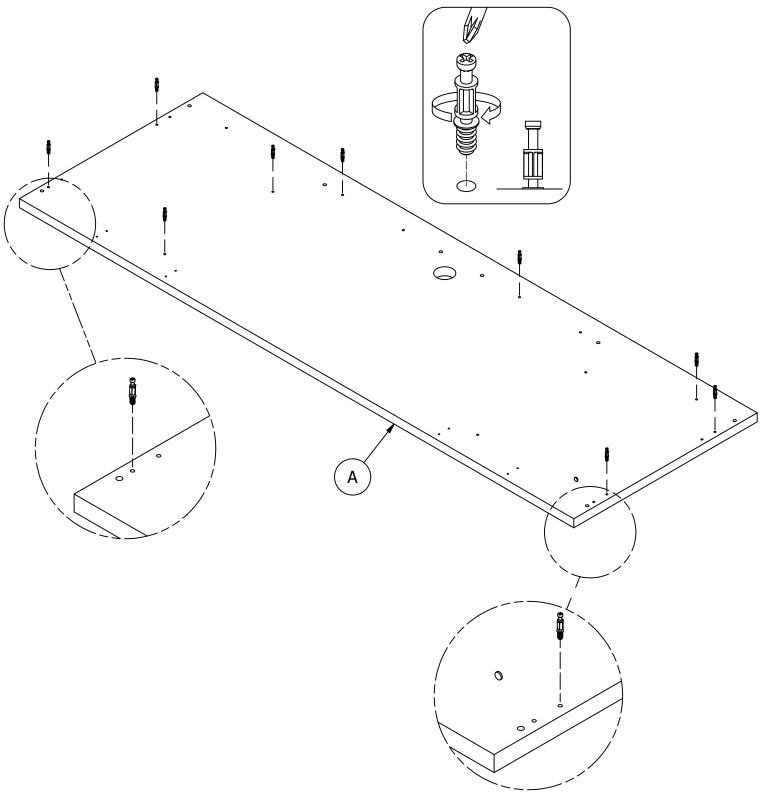

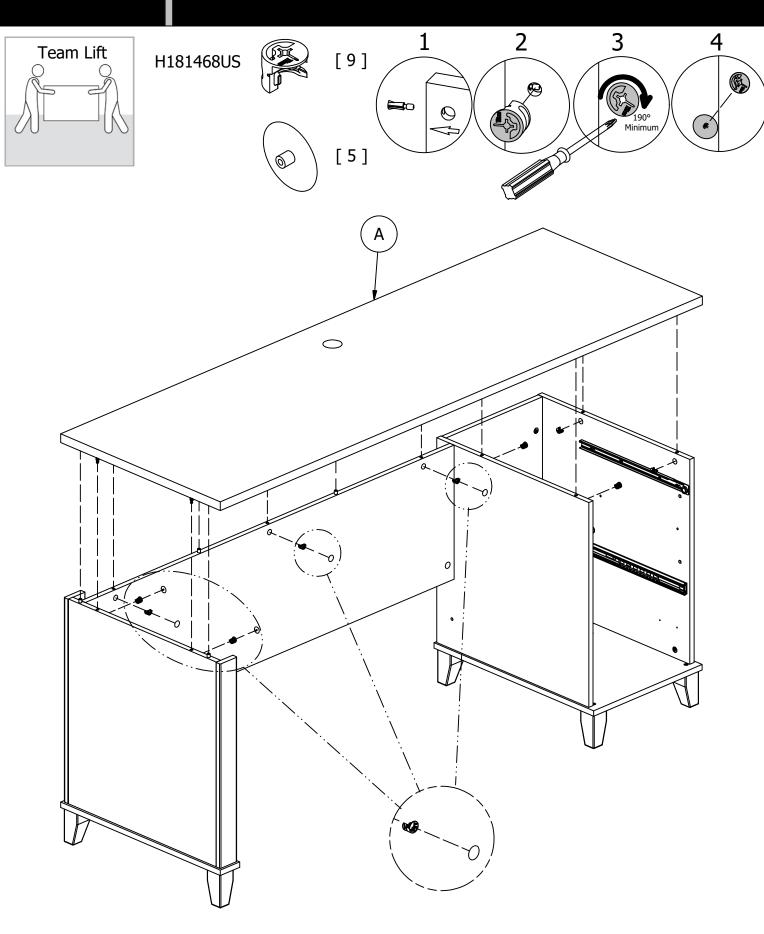


Have an assembly question or need a replacement part? Just call **1-800-950-4782**, we are here to help.

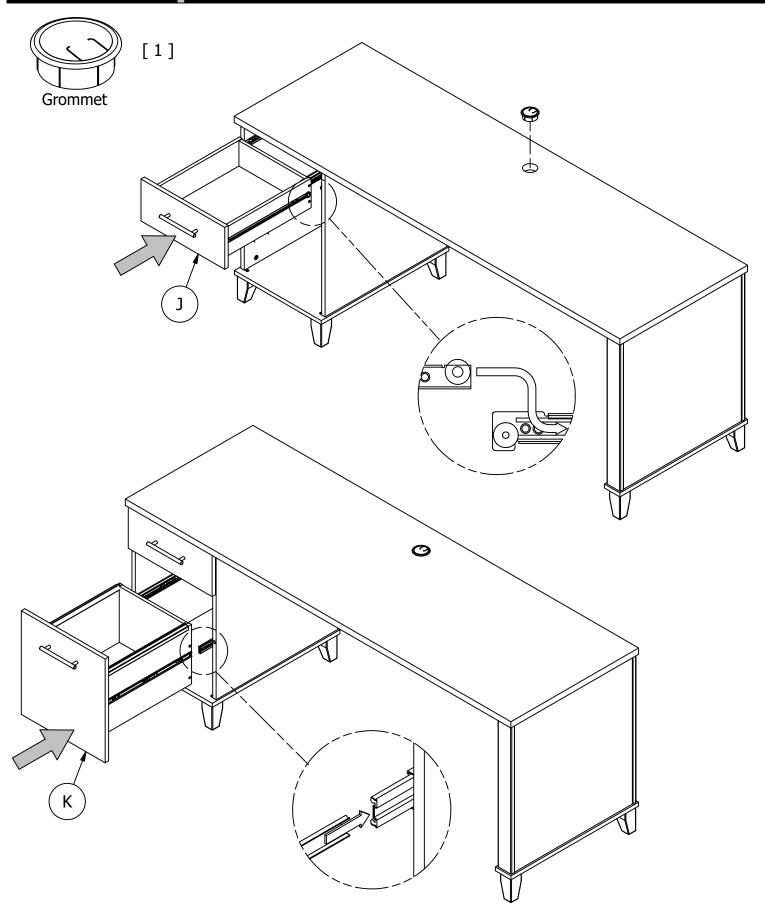


Have an assembly question or need a replacement part? Just call **1-800-950-4782**, we are here to help.


Gently clean surfaces with a damp sponge eraser.

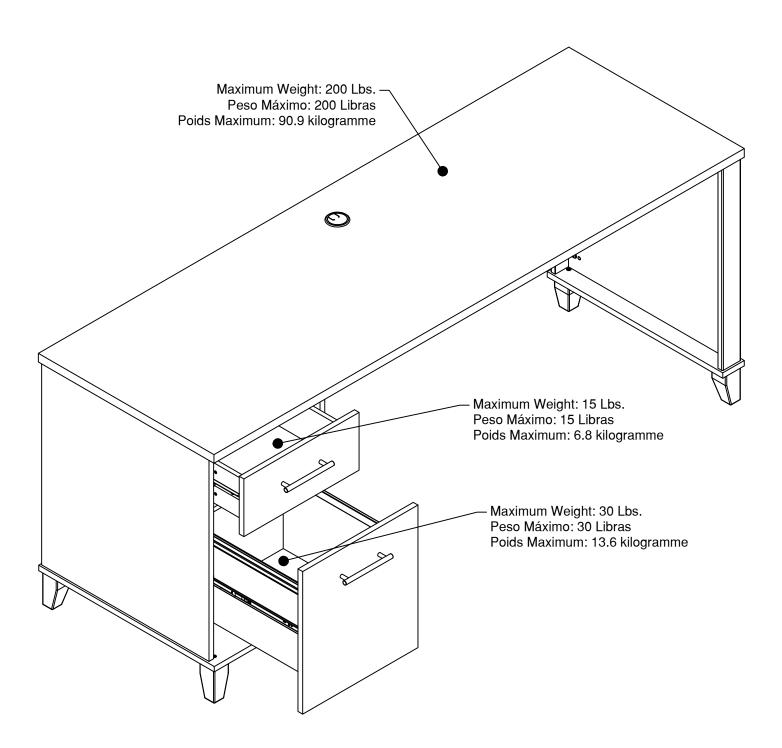


Congratulations! You are all done. If you have any questions or concerns, please call.

#### DRAWER FRONT VIEW

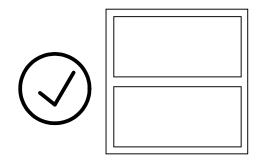

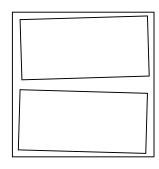




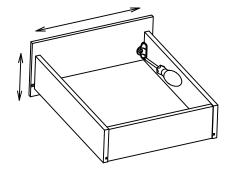

REQUIRED TOOL: PHILLIPS SCREWDRIVER


HERRAMIENTA REQUERIDA: DESTORNILLADOR PHILLIPS OUTIL REQUIS: TOURNEVIS CRUCIFORME

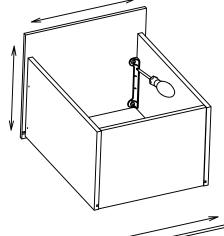






3. TIGHTEN SCREWS.



- Ajustar frentes de cajón
   Apriete los tornillos



- 2. Ajuster les façades des tiroirs
- 3. Serrer les vis

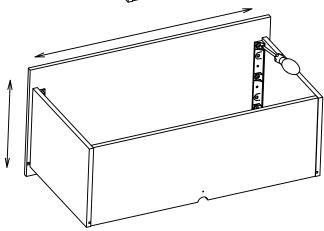

Α	W200556	[1]	J	W218511	[1]
В	W218970	וֹ 1	K	W218512	[1]
С	W218971	וֹ 1 וֹ	S	W193878	[1]
D	W196080	וֹ 1 וֹ	Т	W87410	[2]
Е	W196119		U	W106489	[2]
F	W196105	וֹ 1 וֹ	V	W215261	[2]
G	W196120	[2]	W	W218468	[1]
Н	W196121	וֹ 1 זֹ	Χ	W192433	[1]

H73619 6

[9] H195624



[1]

H196000



H192208




[6]

H184428



[3]



[6]

# WC81172

Α	W200530	[1]	J	W218513	[1]
В	W218972		K	W218514	[1]
С	W218973	[1]	S	W200494	[1]
D	W200492	וֹן זוֹן	Т	W87410	[2]
Ε	W200531	וֹן זוֹן	U	W106489	[2]
F	W200517	וֹן זוֹן	V	W215261	[2]
G	W200532	[2]	W	W218468	[1]
H	W200533	[1]		W192433	[1]

H193368




[9] H151407



[1]





H187286




[6]

H193369



[3]

H195789



[6]

Α	W195911	[1]	J	W218515	[1]
В	W218974	[1]	K	W218516	[1]
C	W218975	[1]	S	W195875	[1]
D	W195873	[1]	Τ	W87410	[2]
Ε	W195912	[1]	U	W106489	[2]
F	W195898	[1]	V	W215261	[2]
G	W195913	[2]	W	W218468	[1]
Н	W195914	[1]	Χ	W192433	[1]


H83021



[9] H118700



[1] H196000



H187286




[6]

H112099



[3] H195789



[6]

## WC81372

W200436 [1] W218517 Α [1]W218976 [1]K [1] В W218518 C W218977 [1]S W200400 [1] W200398 W87410 [2] D [1]W200437 [2] Ε [1] W106489 [2] F W200423 W215261 [1] G W200438 [2] W W218468 [1][1] W200439 [1] W192433 Н

H73620



[9]

H118700



[1]



H187287




[6]






[3]



[6]

Α	W189224	[1]	J	W218519	[1]
В	W218978	[1]	K	W218520	[1]
Ċ	W218979	[1]	S	W187457	[1]
D	W187455	[1]	Т	W87410	[2]
Ē	W189225	[1]	U	W106489	[2]
F	W189444	[1]	V	W215261	[2]
G	W189227	[2]	W	W218468	[1]
H	W189228	[1]	Χ	W192433	[1]

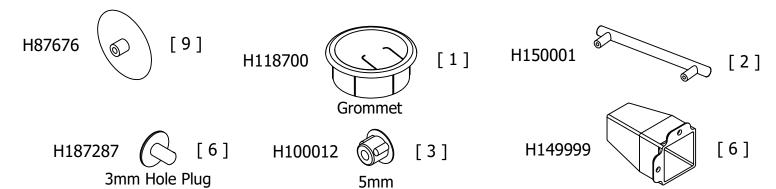


# WC81572

Α	W193879	[1]	J	W218511	[1]
В	W218980	[1]	K	W218512	[1]
C	W218981	וֹ 1 וֹ	S	W193878	[1]
D	W193876	[1]	Τ	W87410	[2]
E	W193880	וֹן זוֹן	U	W106489	[2]
F	W193883	[1]	V	W215261	[ 2 ]
G	W193881	[2]	W	W218468	וֹ 1 וֹ
Н	W193001 W103882			W192433	= =




#### WC81672 W218523 $\lceil 1 \rceil$ W189229 [1]J Α W218524 [1] [1] K W218982 В W187470 $\lceil 1 \rceil$ [1] S C W218983 W87410 [2] [1] D W186384 W106489 [2] [1] Ε W189230 W215261 [2] [1] F W189269 W W218468 $\lceil 1 \rceil$ [2] G W189232 [1] W192433 [1] W189233 Н [1] [9] H151406 H150001 H83021 [2] [6] [6] [3] H187286 H112099 H149999 5mm 3<sub>mm</sub> WC81772 W189234 [1]W218525 $\lceil 1 \rceil$ J Α [1] K W218526 $\lceil 1 \rceil$ В W218984 [1] W187463 $\lceil 1 \rceil$ C W218985 S [1] W187461 T W87410 [2] D

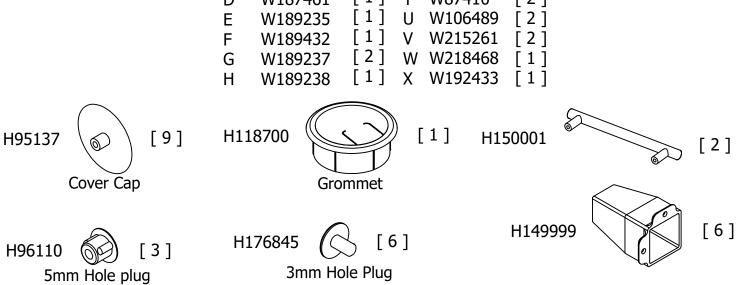

Α	W189239	[1]	J	W218527	[1]
В	W218986	[1]	K	W218528	[1]
C	W218987	[1]	S	W187469	[1]
D	W187467	וֹ 1 וֹ	Т	W87410	[2]
F	W189240	וֹן 1	U	W106489	[2]
F	W189421	וֹ 1 וֹ	V	W215261	[2]
G	W189242	[2]	W	W218468	[1]
Н	W189243	וֹן זוֹן	Χ	W192433	[1]
	* * ± 0 7 2 1 3				

H73621 [9] H118700 Gron



H171232 [ 6 ] 3mm Hole Plug H63904 5mm


[3]

H177601 Foot

# WC81972

W196118	[1]	J	W218529	[1]
W218970		K	W218530	[1]
W218971		S	W196082	[1]
W196080		Τ	W87410	[2]
W196119		U	W106489	[2]
W196105	וֹ 1 וֹ	V	W215261	[2]
W196120	[2]	W	W218468	[1]
W196121	[1]	Χ	W192433	[1]
	W218970 W218971 W196080 W196119 W196105 W196120	W218970 [1] W218971 [1] W196080 [1] W196119 [1] W196105 [1] W196120 [2]	W218970 [1] K W218971 [1] S W196080 [1] T W196119 [1] U W196105 [1] V W196120 [2] W	W218970 [1] K W218530 W218971 [1] S W196082 W196080 [1] T W87410 W196119 [1] U W106489 W196105 [1] V W215261 W196120 [2] W W218468

H73619





[1] H196000



H184428




[3]

H192208



[6]

H195623



[6]

[6]