


BOX #2

D. FOOTBOARD 1 PC F. SLAT ROLL 1 SET BED HARDWARE BOX

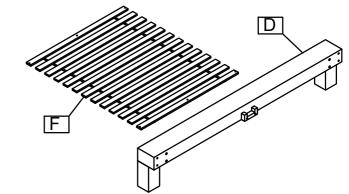


HARDWARE KIT PACKED IN BOX #1

No.	DESCRIPTION	IMAGE	QUANTITY	
1	ALLEN BOLT (5/16"x40mm)	(0)	6 PCS	
2	LOCK WASHER (5/16"x2mm)		6 PCS	
3	FLAT WASHER (8x19mm)	0	6 PCS	
4	ALLEN KEY		1 PC	


BOX #3:


- E. SIDE RAIL 2 PCS
- G. CENTER SLAT SUPPORT 1PC
- H. SUPPORT LEG 4PCS

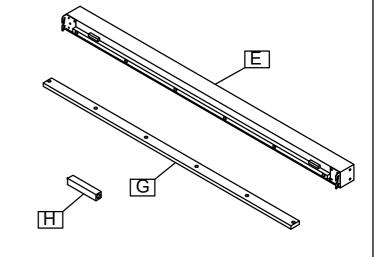


HARDWARE KIT PACKED IN BOX #2


No.	DESCRIPTION	IMAGE	QUANTITY
1	METAL DOWEL (8x40mm)		8 PCS
2	ALLEN BOLT (5/16"x20mm)	©	8 PCS
3	LOCK WASHER (5/16"x2mm)		8 PCS
4	FLAT WASHER (8x19mm)	0	8 PCS
5	WOOD SCREW (4x30mm)	() шшш	8 PCS
6	ALLEN KEY		1 PC






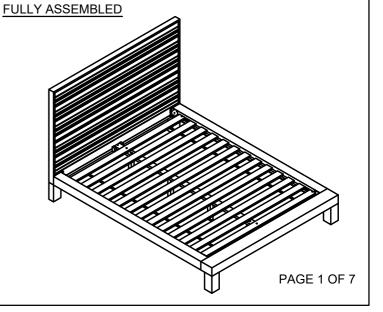




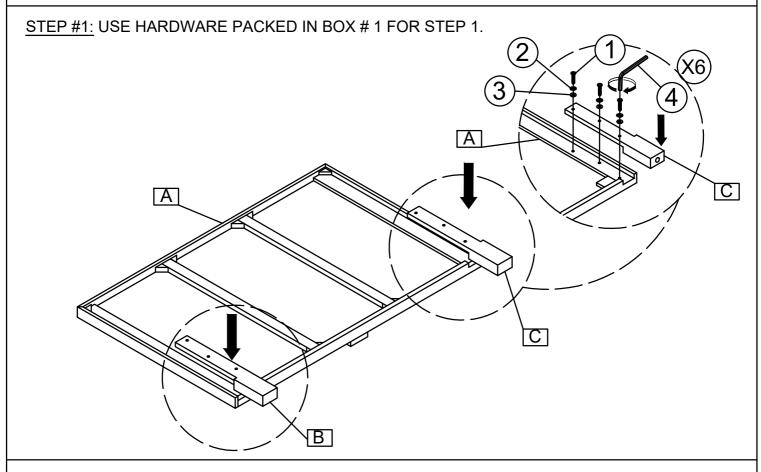


STEP #2: USE HARDWARE PACKED IN BOX # 2 FOR STEP 2 AND ALL THAT FOLLOW .

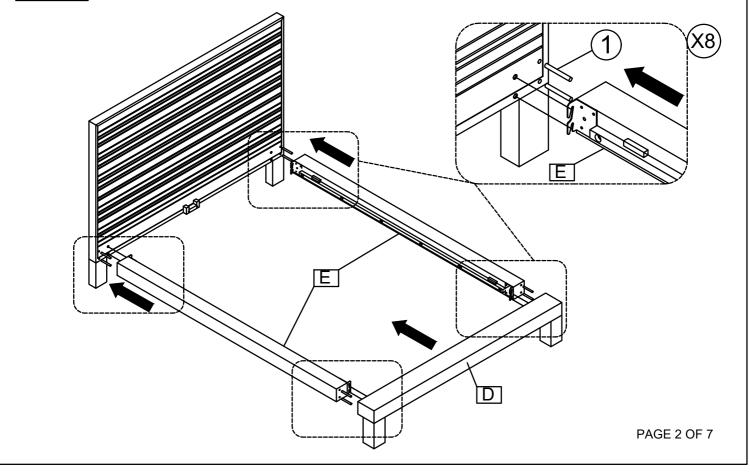



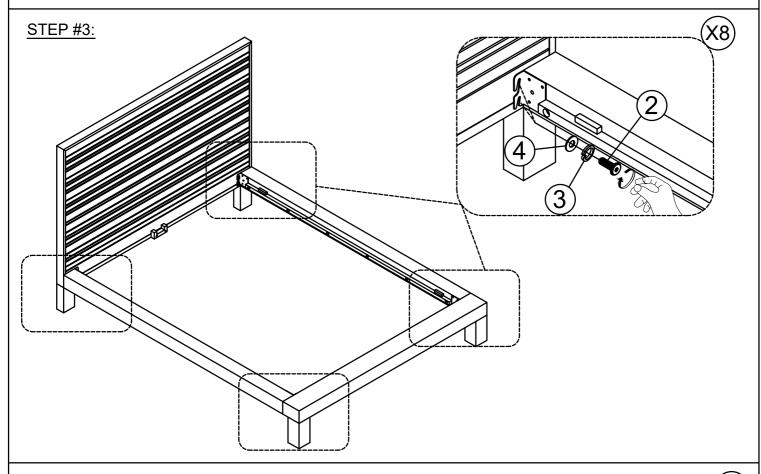

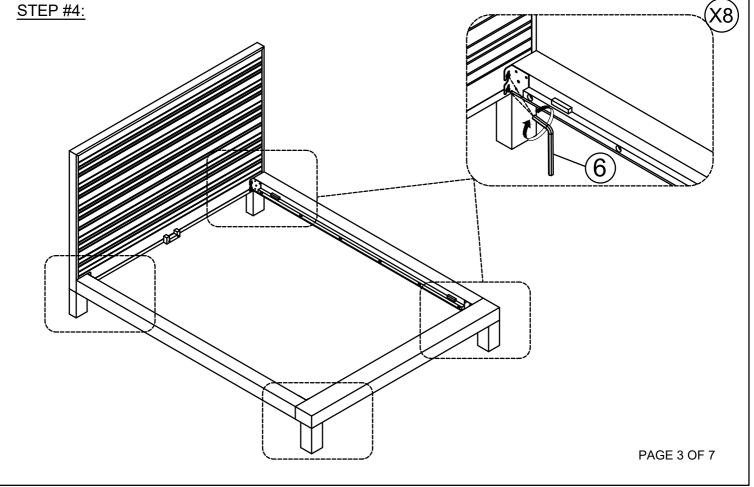







STOP


- * IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- * IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 5.

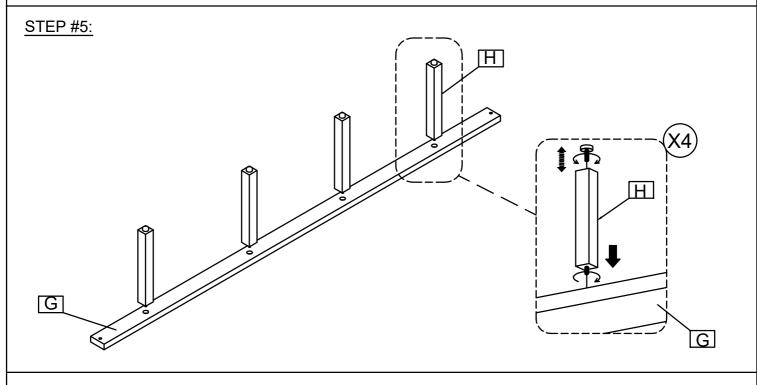

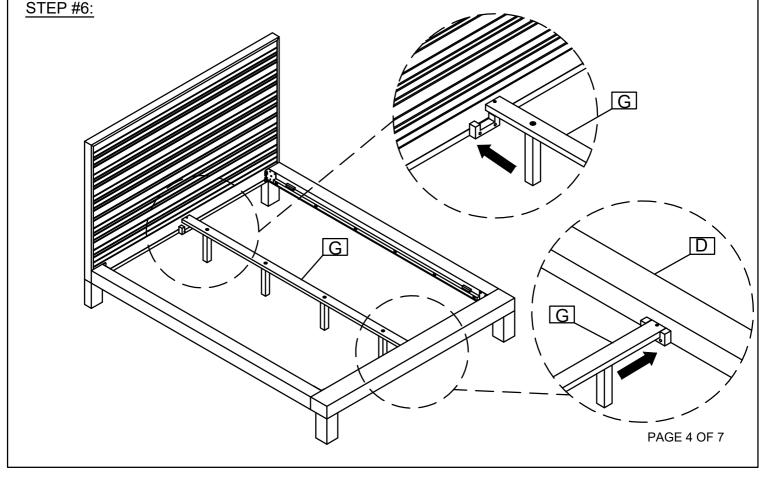




STEP #7:

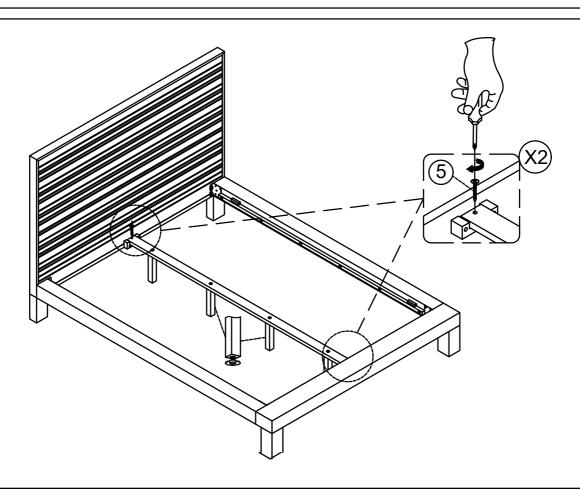


STEP #8:

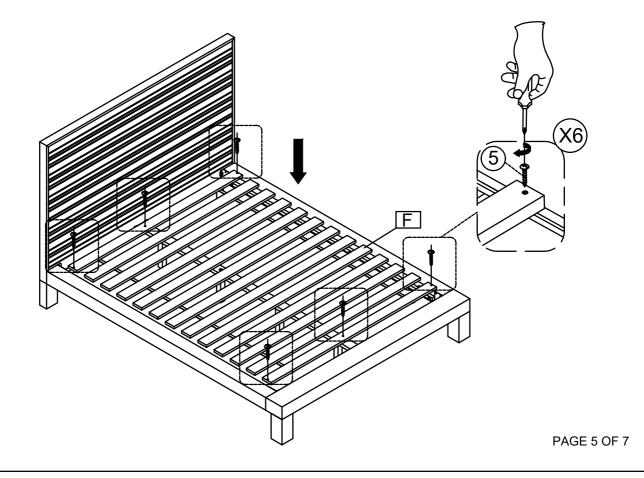




ASSEMBLY COMPLETE.

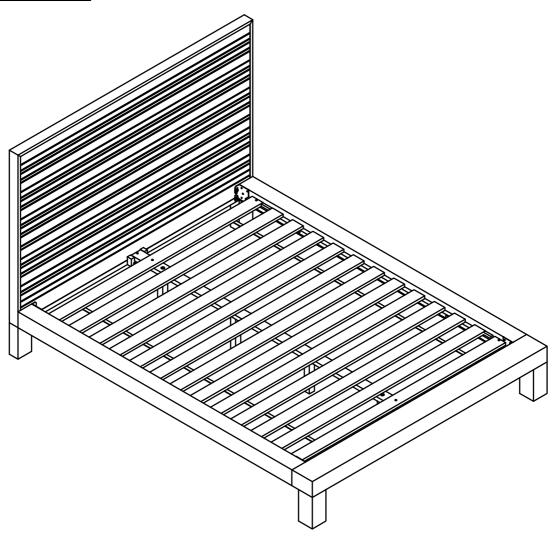

INSTRUCTIONS FOR ADJUSTING LEVELER:

- POSITION THE BED IN YOUR SPACE AND LOCATE
 THE LEVELER UNDER EACH SUPPORT LEG.
- TURN THE LEVELER COUNTER- CLOCKWISE TO EXTEND THE LEVELER AND CLOCKWISE TO RETRACT IT.
- ADJUST EACH LEVELER UNTIL EACH SUPPORT LEG IS APPLYING
 EQUAL, UPWARD PRESSURE ON THE BED SUPPORT SLAT.



MAINTENANCE INSTRUCTIONS:

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT.

 DRAGGING CAN DAMAGE THE LEG SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.

PAGE 6 OF 7



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.
PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION.
FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:


F. SLAT ROLL 1SET

5. WOOD SCREW (4x30MM) 8PCS

- G. CENTER SLAT SUPPORT 1PC
- H. SUPPORT LEG 4PCS

STEP 1:

USE ALLEN KEY (6) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

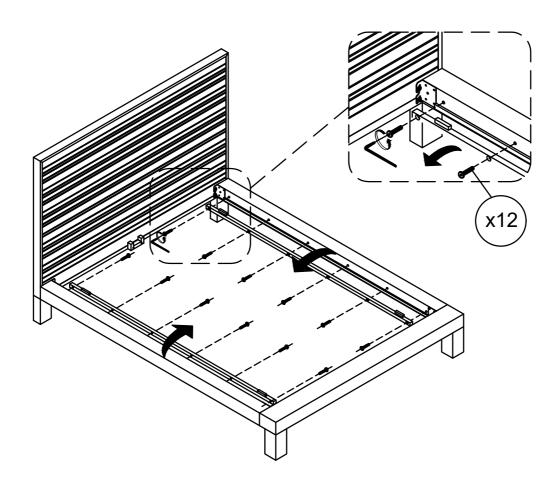

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION