KINCAID
SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTION

www.kincaidfurniture.com
Phone : 828-728-3261.

75/76 - 075-079 INTRUCTIONS TO ATTACH DECK UNIT TO BASE UNIT

IMPORTANT NOTES :


. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.


. Check to be sure that you have all parts and hardware.

. Remove all wrapping materials,including staples and packing straps before you start to assemble.

. Do not tighten all screws and bolts until completely assembled.


. Keep all hardware out of the reach of children.

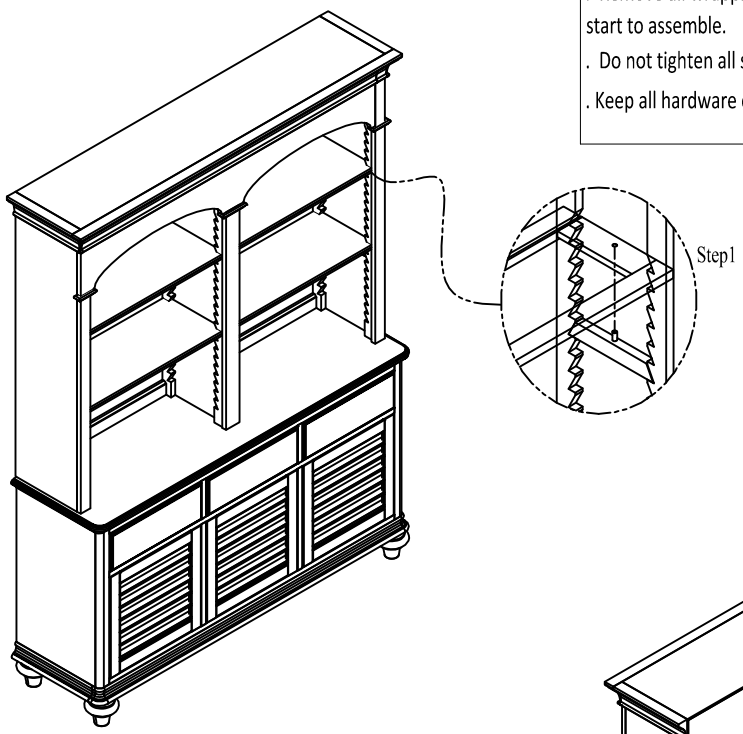

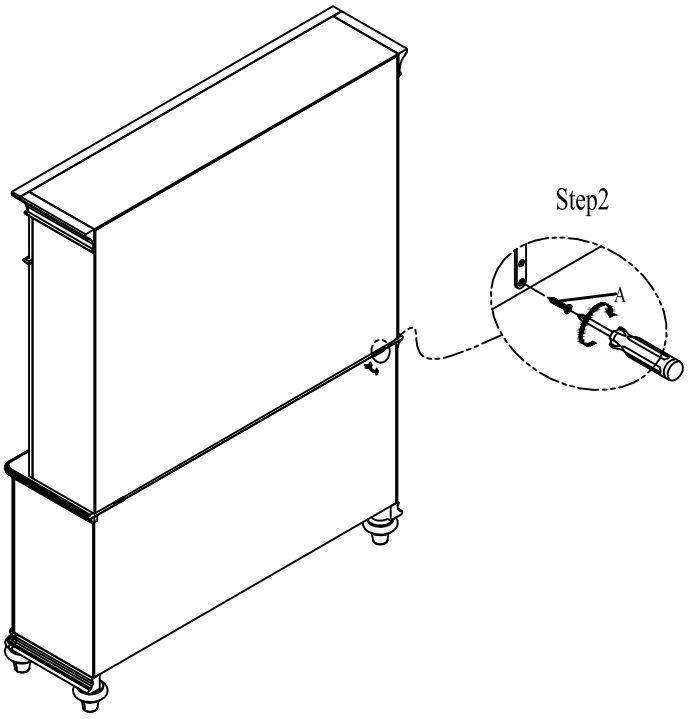


CODE	DESCRIPTION	QTY
A	Screw #4*15mm	6pcs

a.

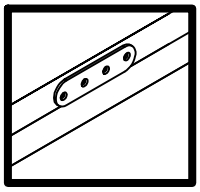

b.

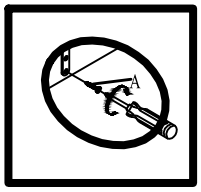

MADE IN VIETNAM