




DESIGNED IN CALIFORNIA

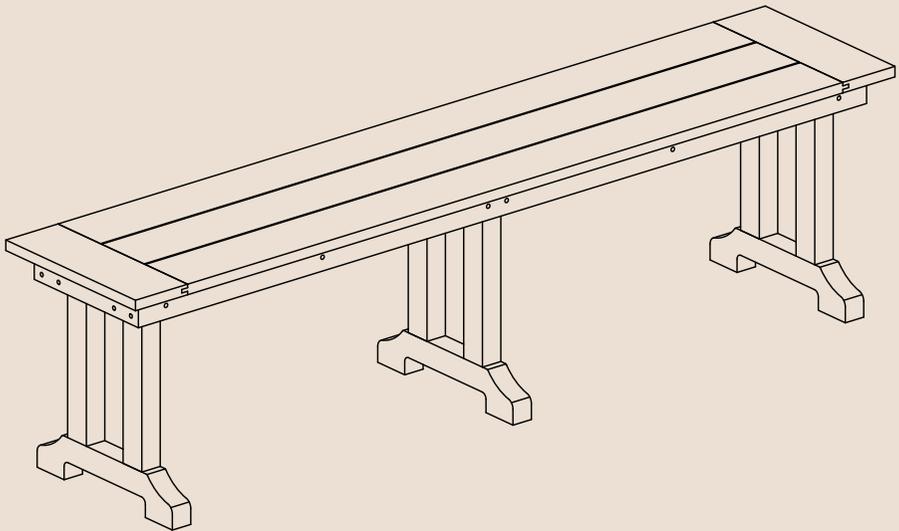

---

TRESTLE 65" BENCH

---

# THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

---

## JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

[\*https://westintrends.com/welcome\*](https://westintrends.com/welcome)



## QUESTIONS OR COMMENTS?

If you have questions reach out to  
[cs@westintrends.com](mailto:cs@westintrends.com)

---

FOLLOW, SHARE, & LEARN



## PRODUCT REGISTRATION

[\*https://westintrends.com/apps/product-registration\*](https://westintrends.com/apps/product-registration)




ACCESSIBILITY - COMMUNITY - VALUE - SUSTAINABILITY

## ! CARE & MAINTENANCE

### Do not overtighten screws. (Insert all screws before tightening screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Please adjust the speed slowly when you use electric drill for assembling to avoid screw slippage.

## TOOLS REQUIRED



ALLEN WRENCH  
(PROVIDED)



WRENCH  
(PROVIDED)



SCREWDRIVER BLADES  
(PROVIDED)



CHAIR  
660 LBS  
CAPACITY



1 PERSON  
ASSEMBLY



UP TO 20 MIN.  
ASSEMBLY

## HARDWARE

1

BOLT  
M6 x 90mm



6 PCS

2

BOLT  
M6 x 75mm



6 PCS

3

SCREW  
M6 x 80mm



6 PCS

4

NUT  
M6



12 PCS

5

WASHER  
M6




12 PCS

## PARTS

A

BENCH TOP

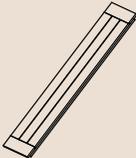

1 PC

B


BENCH LEG



6 PCS

C


BENCH  
BOTTOM FEET



3 PCS


## PRODUCT ASSEMBLY - OVERALL VIEW

Look at following overall view of this bench and exact position of each parts to be assembled.

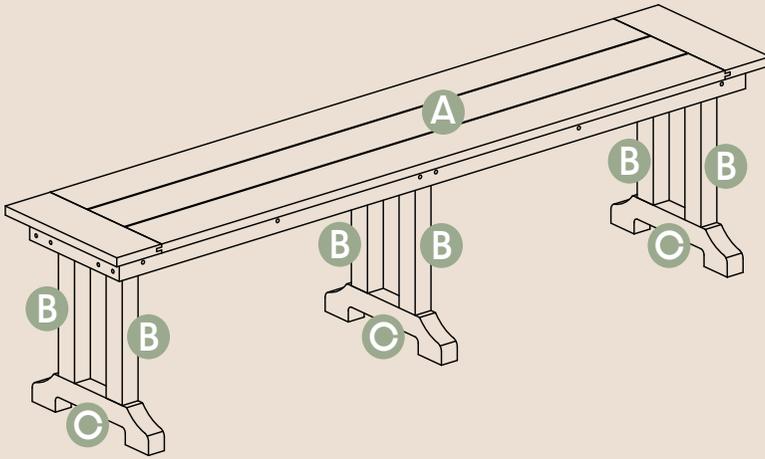

## PRODUCT ASSEMBLY


- 1 Attach Part B Bench Leg to Part A Bench Top with 6 pcs of Hardware #2 Bolt, Hardware #4 Nut and Hardware #5 Washer.

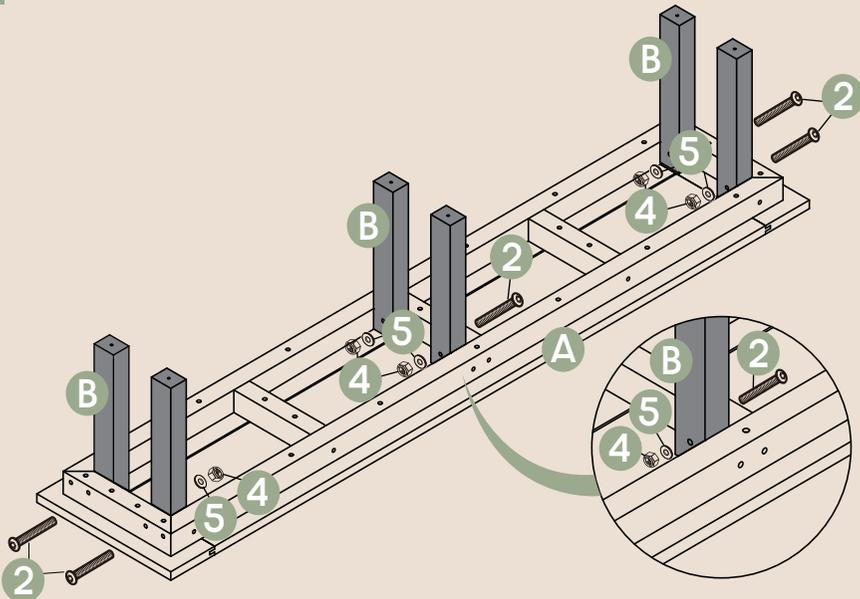

## PRODUCT ASSEMBLY

# 2


Attach **Part B Bench Leg** and **Part A Bench Top** with 6 pcs of **Hardware #1 Bolt**, **Hardware #4 Nut** and **Hardware #5 Washer**.

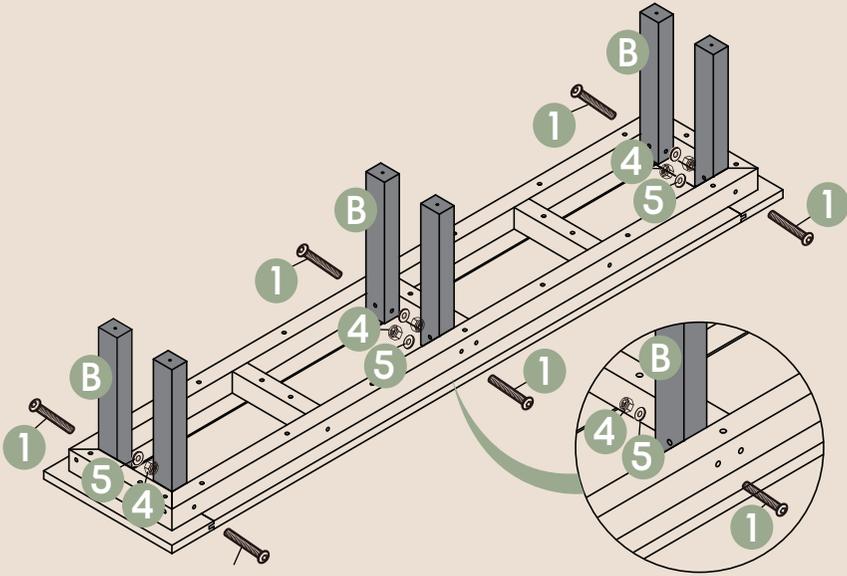

## PRODUCT ASSEMBLY


# 3

Attach **Part C Bench Bottom Feet** to **Part B Bench Leg** with 6 pcs of **Hardware #3 Screw**.

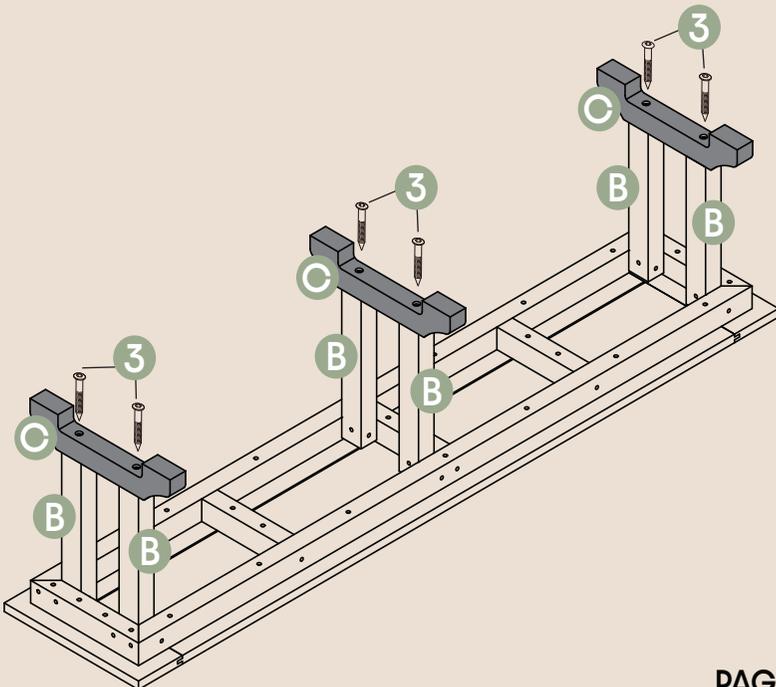

4

Check and tighten all the bolts and screws again to finish the assembly.

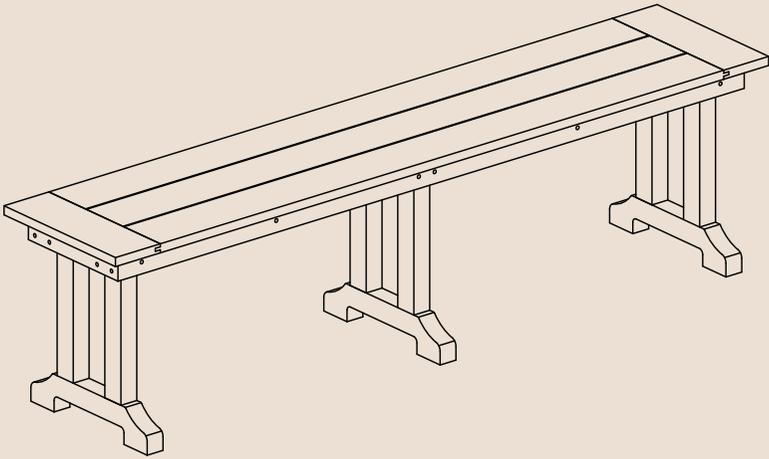

## REGISTRATION & REFUND POLICY

<https://westintrends.com/apps/product-registration>



<https://westintrends.com/policies/refund-policy>



### HAVING TROUBLE

- **Not sure how to assemble or missing pieces?**

Please contact our Customer Service Team for assistance at [cs@westintrends.com](mailto:cs@westintrends.com)

**Have Order #, Part # or SKU ready to speed up customer service!**

### CLEANING TIPS

**REGULAR CLEAN:** Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

**QUICK CLEAN:** You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

**Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.**

Pressure washer can be used for seriously deep-cleaning - **DO NOT exceed 1500 PSI** - this will remove any debris and dirt.