

BRODERICK FULL/QUEEN BED

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

MODUS FURNITURE

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME. IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:


F. BED SLAT	5PCS	8. WOOD SCREW (8X30mm)	11PCS
G. SLAT SUPPORT	5PCS	9. ALLEN BOLT (6X40mm)	6PCS


STEP 1:


USE ALLEN KEY **(10)** TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

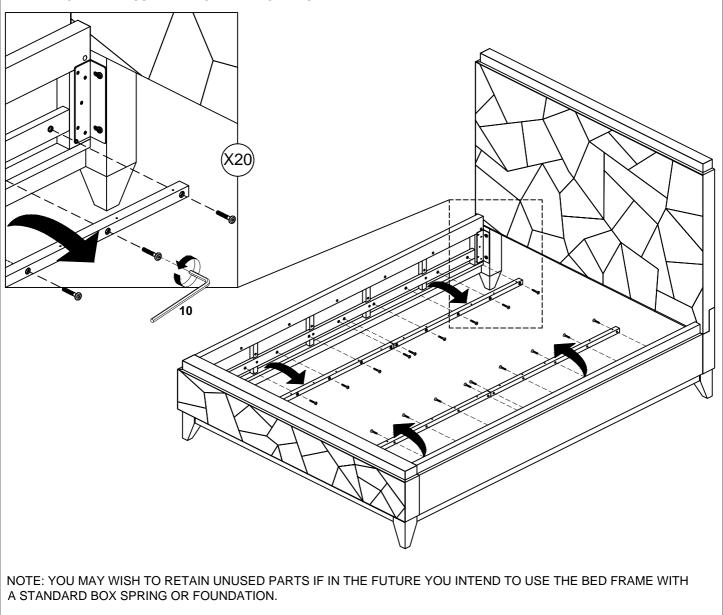

UPDATED : FEBRUARY 27TH, 2020

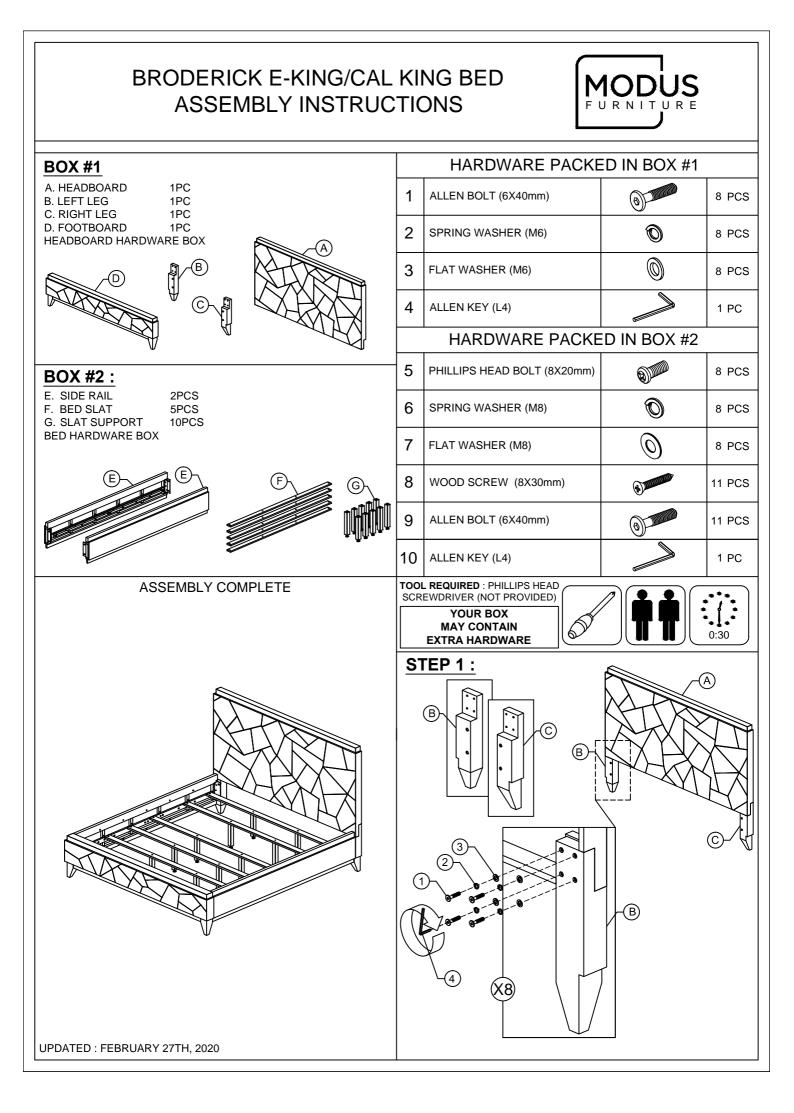

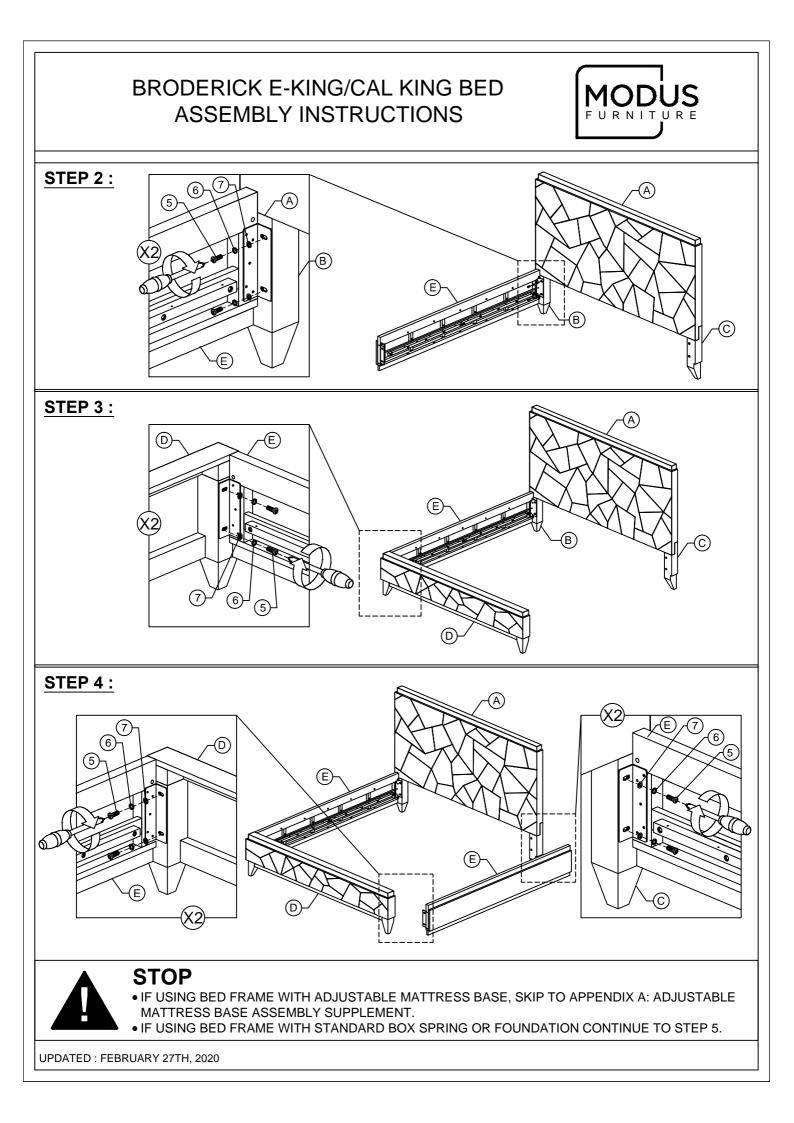

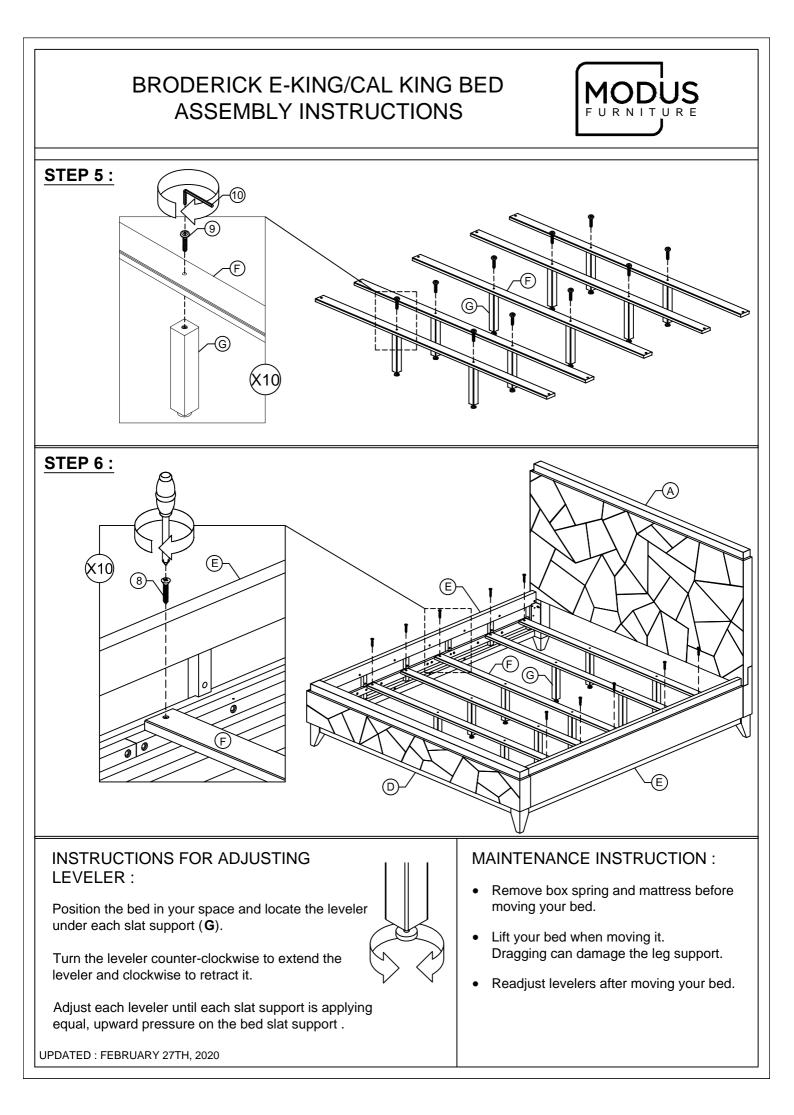

BRODERICK E-KING/CAL KING BED APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

\frown				1		
Μ	C)	D	L	19	S
Fυ	R	N	ΙT	U	R	E

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME. IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. BED SLAT	
G. SLAT SUPPORT	


5PCS 10PCS

8. WOOD SCREW (8X30mm)
9. ALLEN BOLT (6X40mm)

11PCS 11PCS

STEP 1 :

USE ALLEN KEY **(10)** TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

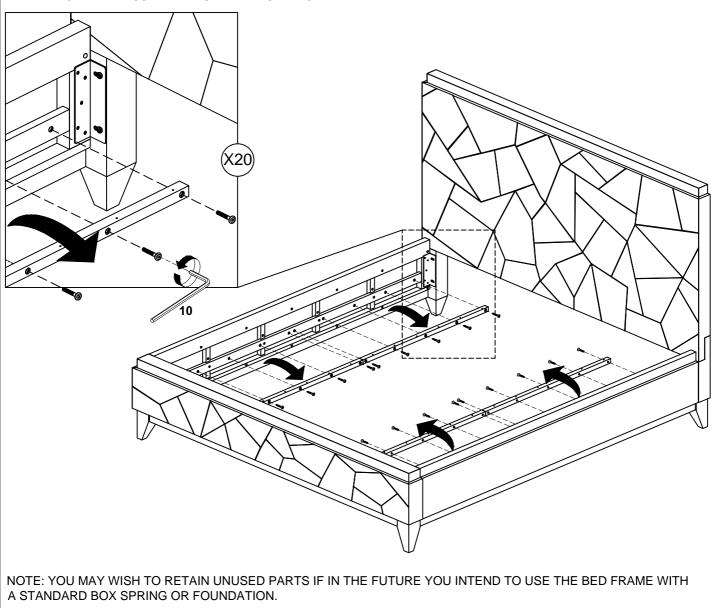

UPDATED : FEBRUARY 27TH, 2020