

zecliner[®]

FLEXSTEEL

 **bedgear**[®]

HOW TO ATTACH THE DRI-TEC[®] CHAIR PROTECTOR



GETTING STARTED

Remove the chair protector from the bag.


Recline the chair fully so the leg rest extends, exposing the zipper between the seat and backrest.



Step 1: Install the Protector

Slip the protector over the seat and leg rest, starting at the bottom and working up toward the seat.

The **BEDGEAR** Powerband® Strap should end up between the seat and backrest.

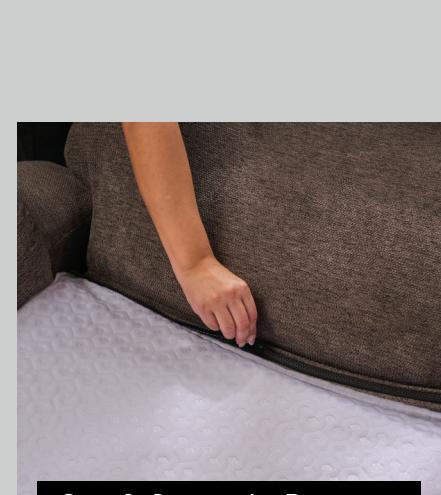

Step 2: Secure the Protector

Unzip the zipper connecting the seat and backrest.

Tuck the **BEDGEAR** Powerband® Strap underneath to secure the protector.

Zip back up once tucked in.

Your Zecliner® is now ready for sleeping!