
ASSEMBLY INSTRUCTIONS

KINCAID®
furniture company, inc.
A La-Z-Boy Company

69-1130 END TABLE CONCRETE TOP

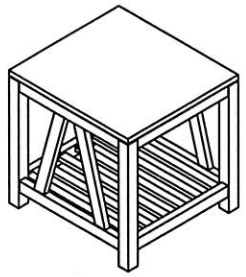

69-1130

HARDWARE LIST			
ITEM	DRAWING	DESCRIPTION	Q' TY
A		Bolt (Φ1/4"x1-1/2")	16PCS
B		Spring Washer (Φ1/4")	16PCS
C		Flat Washer (Ø19mmXØ1/4"L)	16PCS
D		Allen Wrench (4mm)	1PC

Caution: Do not over tighten any bolts during assembly.

1. Attach the shelf and stretchers to the side frame using bolt (A), spring washer (B),flat washer (C), and tighten with the Allen wrench (D) (Figure 1)

2. Attach the top to the top frame using bolt (A), spring washer (B), flat washer (C), and tighten with the Allen wrench (D) (Figure 2)

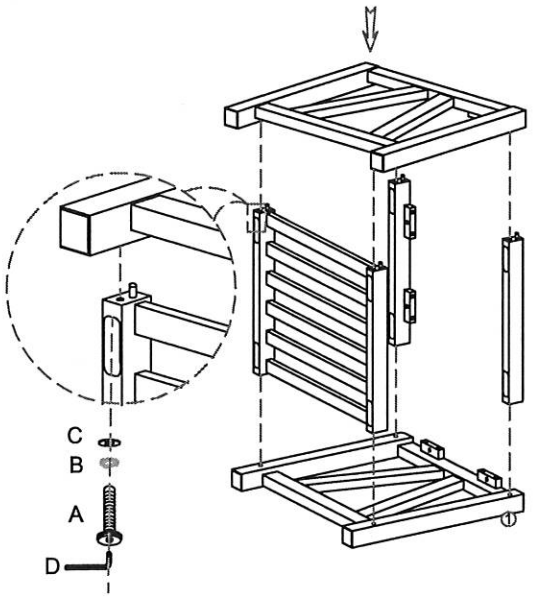


Figure 1

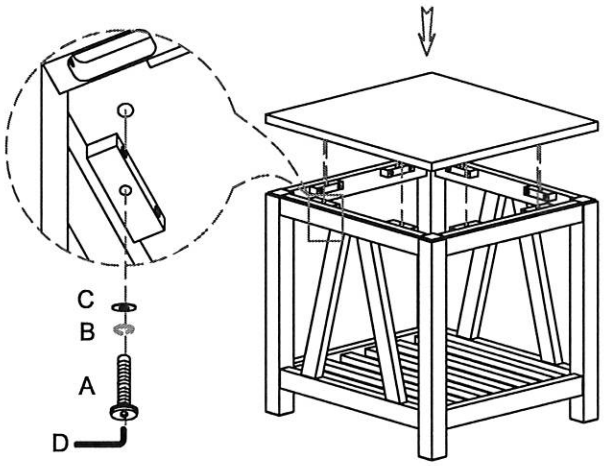


Figure 2