
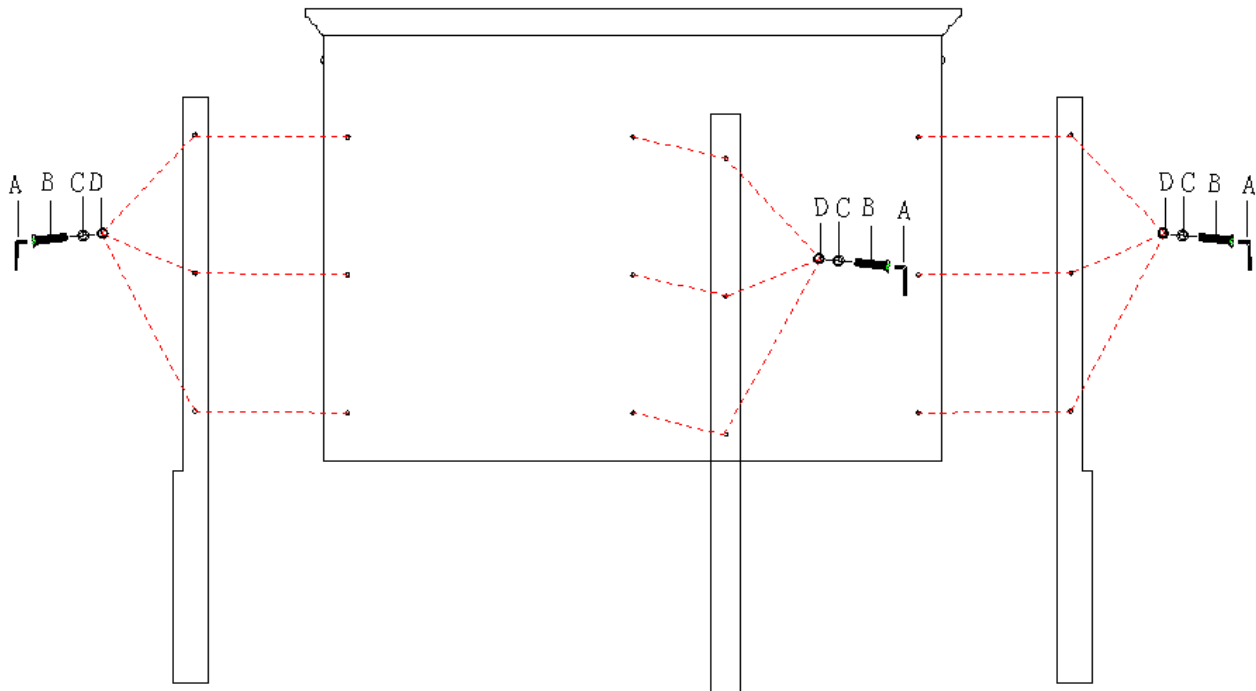


ASSEMBLY INSTRUCTION

ITEM# 5750-90251-MWD 5/0 Panel Headboard
ITEM# 5750-90267-MWD 6/0 & 6/6 Panel Headboard

Caution: Please make sure you have all parts indicated below prior to assembly. This headboard is heavy and can best be assembled with the help of two people.

NO.	HARDWARE LIST		Q'TY
A		ALLEN WRENCH	1
B		BOLT	9
C		LOCK WASHER	9
D		FLAT WASHER	9

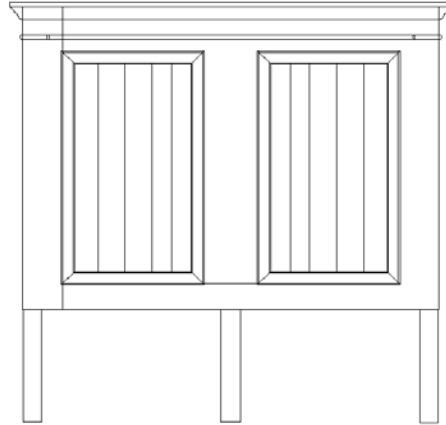

Assembly steps:

Attach side posts to each side of back, using bolts (B), flat washers (D) and lock washers (C). Secure bolts (B) by allen wrench (A). Then attach and secure the middle post to center of back in the same way.

Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.