
KINCAID
SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTION

487-830/831 Small China Base And Deck

www.kincaidfurniture.com
Phone : 828-728-3261.

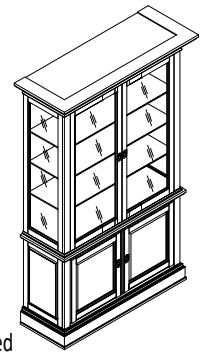

3) Assembly is completed

IMPORTANT NOTES :


. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.

. Check to be sure that you have all parts and hardware.


. Remove all wrapping materials,including staples and packing straps before you start to assemble.

. Do not tighten all screws and bolts until completely assembled.


. Keep all hardware out of the reach of children.

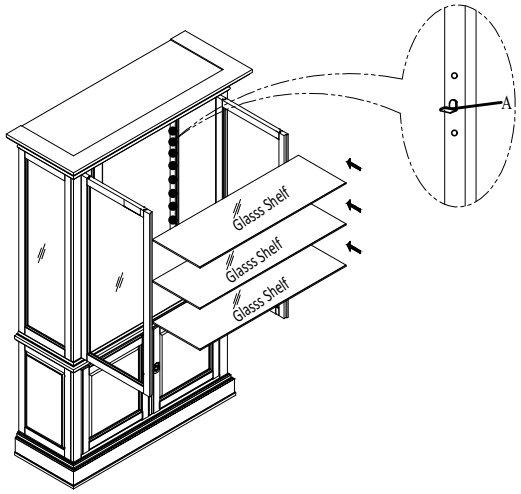


CODE	DESCRIPTION	QTY
A		15pcs
B	Screw #4*19mm	6pcs

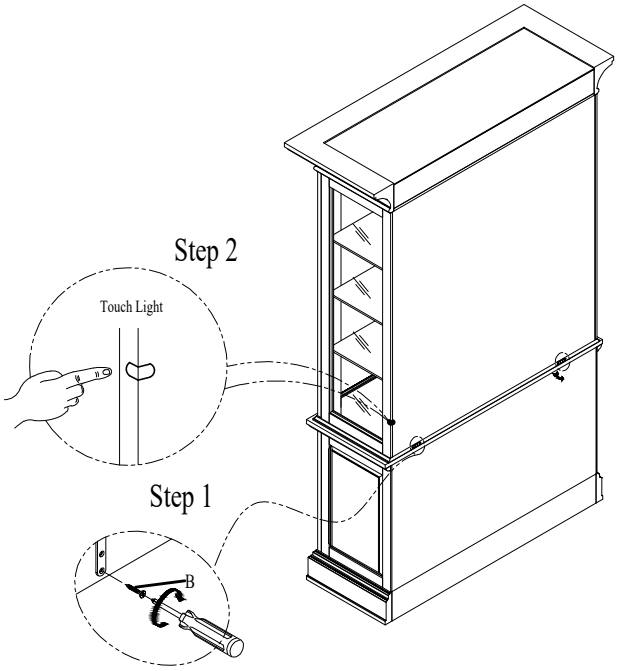

a.

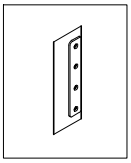

b.

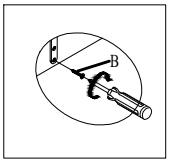

MADE IN VIETNAM