



## INSTALLATION INSTRUCTIONS

### SB-3122 Widespread Faucet

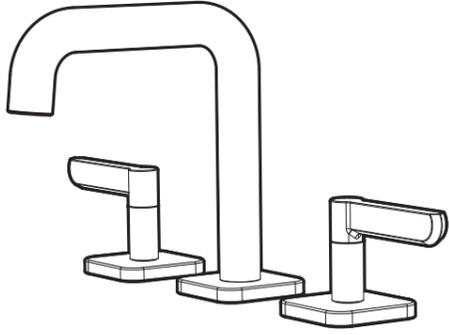


### SB-3123 Widespread Faucet

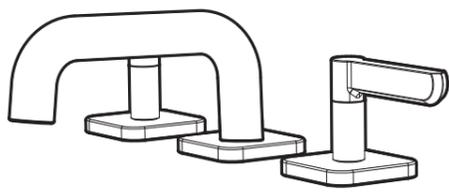

92-SB-3122-01

## TOOLS & SUPPLIES NEEDED

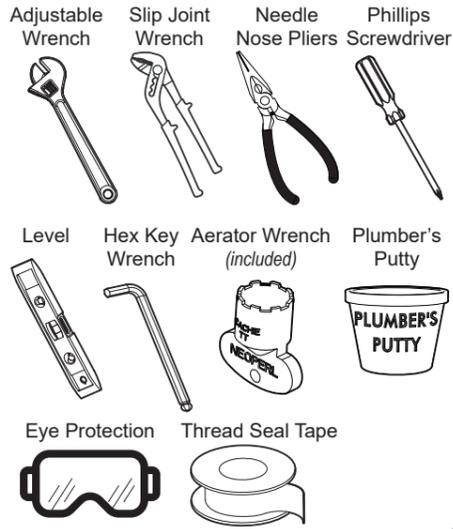

## IMPORTANT

### SAFETY TIPS:

Be sure to read and understand all instructions before beginning installation.

Inspect all connections after installation.

Cover the drain to avoid loss of parts.

Be sure to wear proper eye protection.

Do NOT over tighten any connections or damage may occur.


This faucet has an operating range of 20-80psi

### FINISH MAINTENANCE:

Your new product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

## PREPARE ENDBODY

- 1 The "COLD" and "HOT" Endbody Assemblies are clearly marked. Remove Valve Support (A) and Rubber Washer (B) from the Cold Side Endbody (C). Thread Endbody Mounting Nut (D) all the way down the Endbody. Repeat this for the Hot Side Endbody.

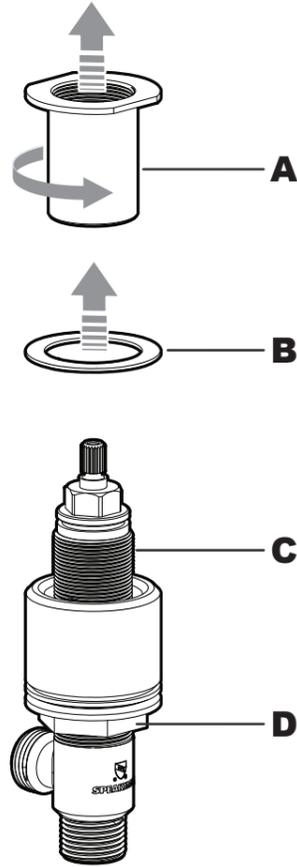


X2

## INSTALL ENDBODY

- 2 From below, insert COLD Endbody Assembly (C) up through hole in counter top. From above, place Rubber Washer (B) over Endbody Assembly (C). Thread Valve Support (A) on to the Endbody Assembly and Hand Tighten into position.

Align Endbody (C) so the Outlet is facing towards the center as shown below. From below Hand tighten Mounting Nut (D) into position.

Repeat for HOT Endbody Assembly.

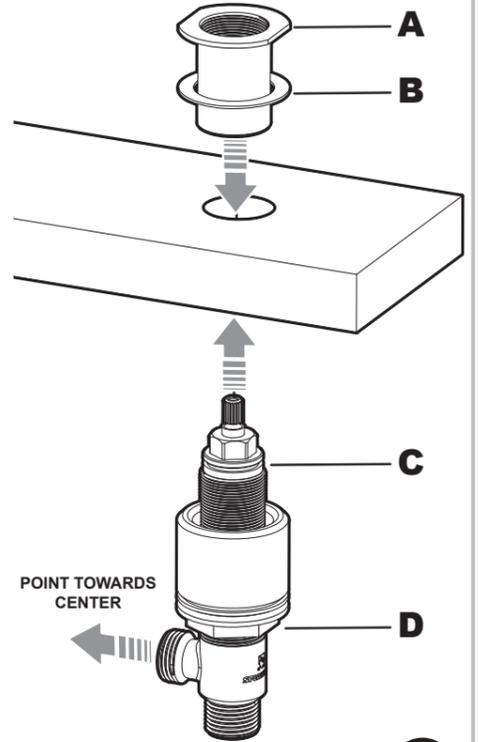

X2

### NEED HELP?

For additional assistance or service please contact:




800-537-2107



www.speakman.com

## PREPARE ESCUTCHEON


- 3 Remove Escutcheons (A) from Handle Base Assemblies (B).

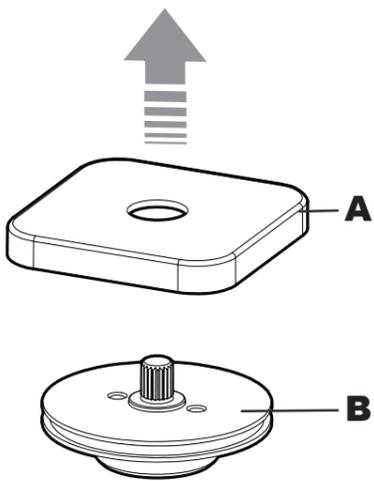


X2

## INSTALL HANDLE BASE

- 4 Align the male Splines of the Valve Cartridge (A) to the female Splines of the Handle Base Assembly (B). Thread Handle Base Assembly (B) into top of Endbody. Use Needle Nose Pliers as shown below to tighten into position. Repeat for HOT Endbody Assembly.

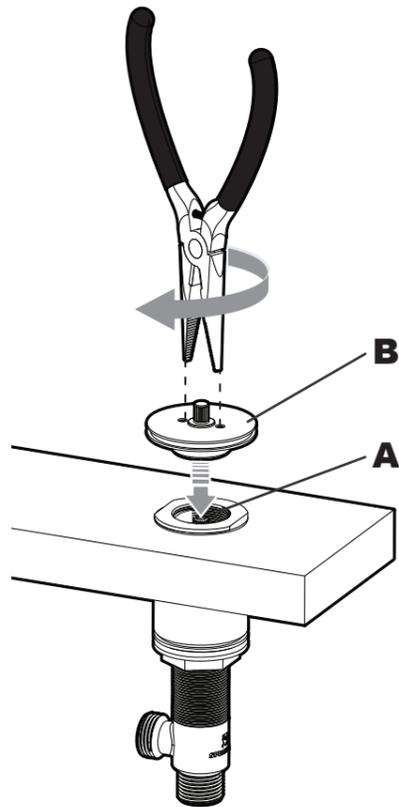


Place Escutcheon back into place.

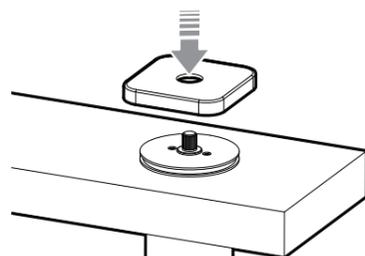

X2


## PREPARE SPOUT

- 5 Remove Inlet Tee (A), Mounting Nut (B), Metal Washer (C), and Rubber Washer (D) from Spout Assembly.

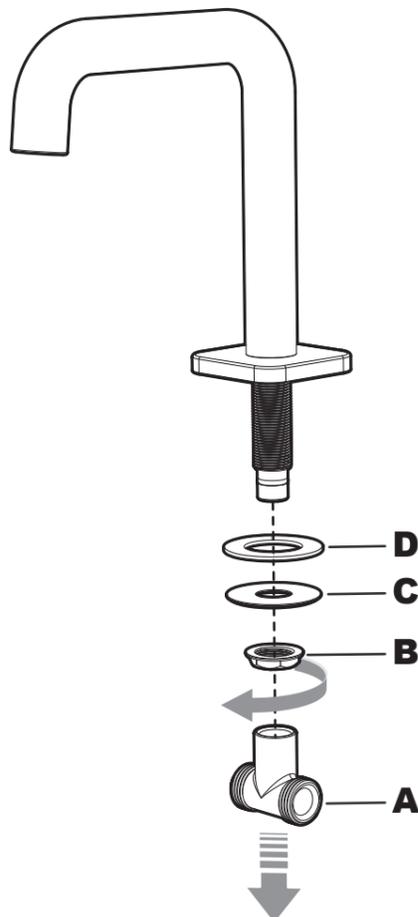


## INSTALL SPOUT

- 6 Place Spout Assembly (E) through the Center Hole of counter top. From below, reinstall the Rubber Washer (D), Metal Washer (C), Mounting Nut (B), and Inlet Tee (A). Hand tighten the Mounting Nut (B).

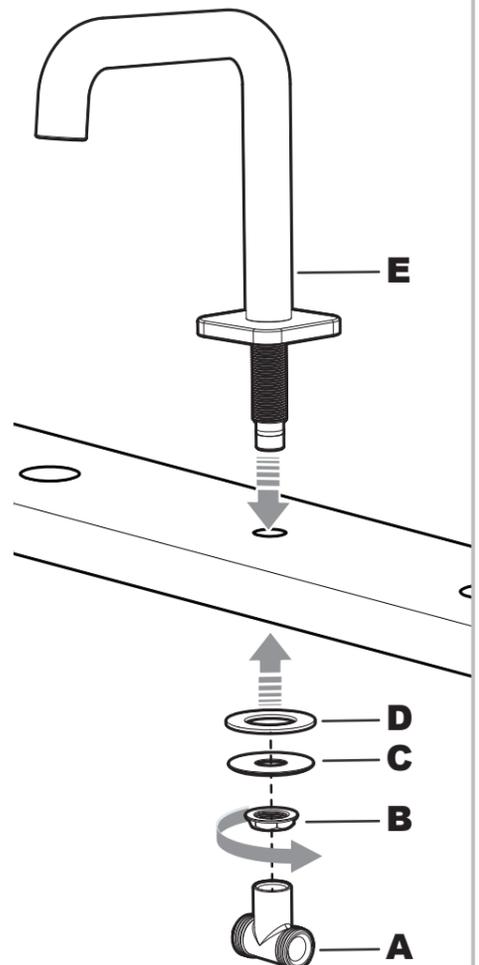


## ALIGN SPOUT AND ESCUTCHEONS

- 7 From above, align Spout and Handle bases so that they are aligned horizontally. A Straight Edge or Level will assist this process.

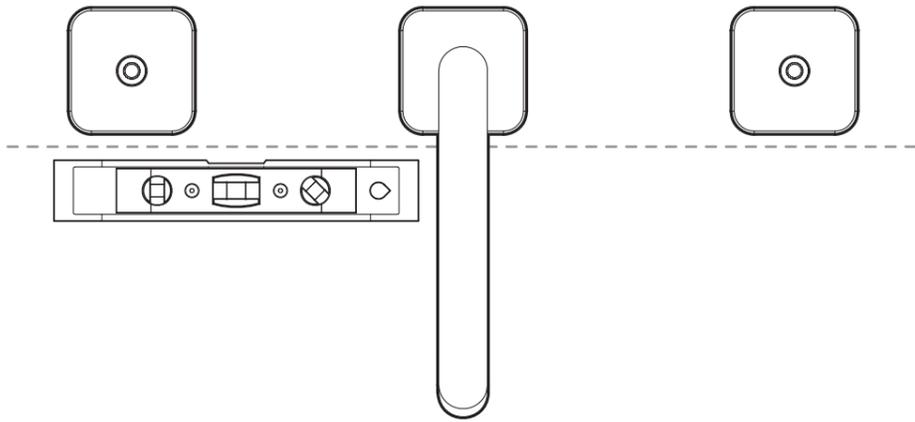

## PREPARE HANDLES


- 8 Loosen but do not remove the Set Screw (A) on the Handle Assemblies using the included Hex Key provided.

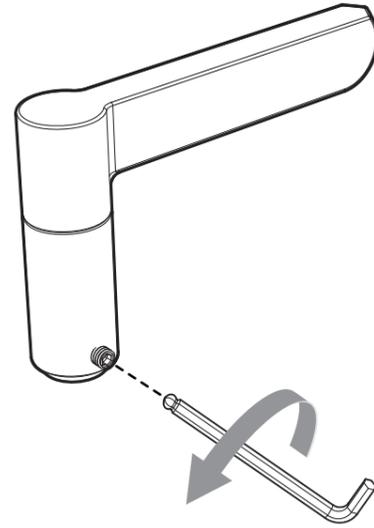

X2

## INSTALL HANDLES


- 9 Install the Handle Assemblies onto the Handle Base Assemblies. Verify that the Valves are in the OFF position. Once the Valves are verified to be in the OFF position, re-align Handles so the Set Screws are facing rearward towards the wall. Tighten Set Screws on the Handle Assemblies using the included Hex Key Wrench.

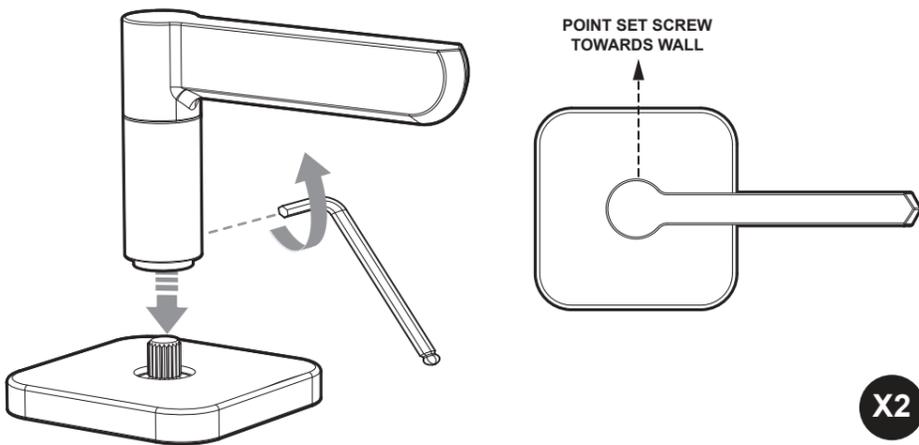

X2

## SECURE SPOUT AND ENDBODIES INTO POSITION


- 10 While maintaining the proper alignment, wrench Tighten Spout Mounting Nut (A). Then Wrench Tighten the Nuts on the Valve Bodies (B). Wrench Tighten Tee (C).

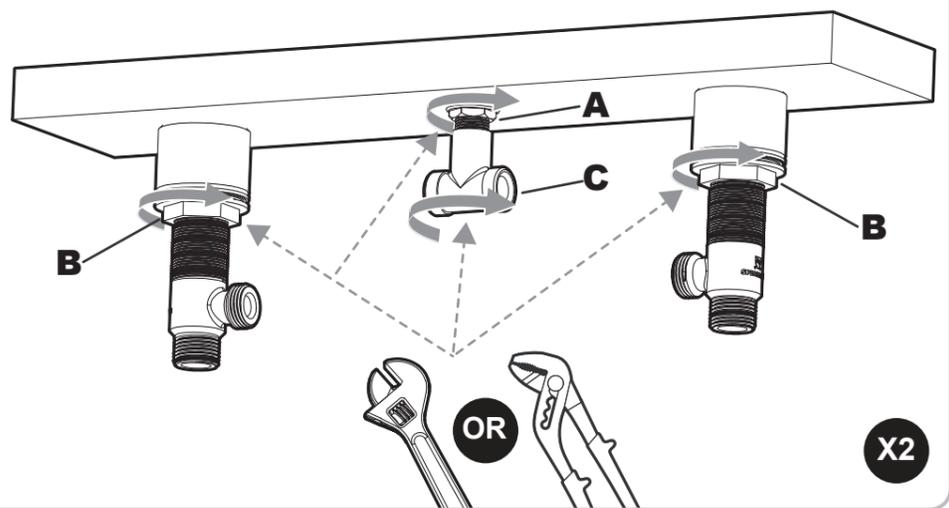

X2


## INSTALL SUPPLY LINES

- 11 From below, install the supplied Flexible Hoses (A) from the Endbody to the Inlet Tee of the Spout. Wrench Tighten. Install Inlet Supplies (not provided) to the inlets of the Endbody. Wrench Tighten. Inlet connections are 1/2"-14 NPSM.

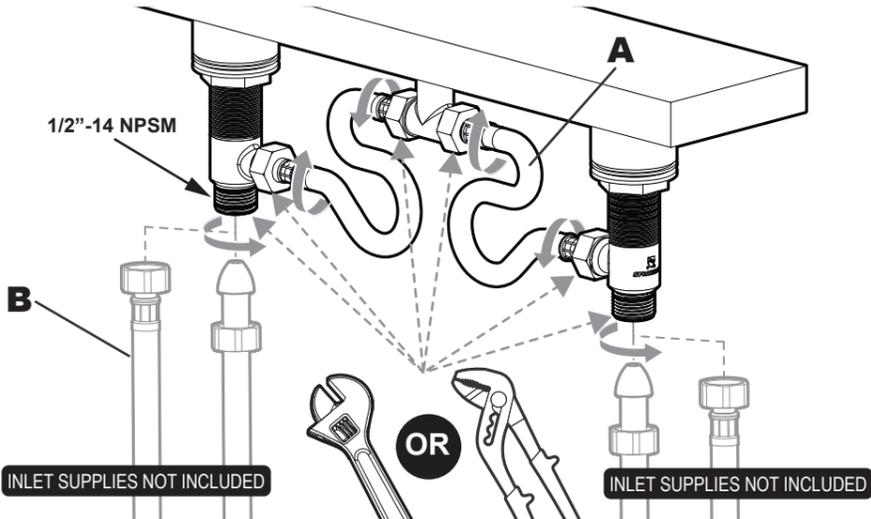


## INSTALL DRAIN ASSEMBLY

- 12 Unthread Tailpiece (B) from Drain Assembly (A). Do not lose the Rubber Gasket on the Tailpiece.

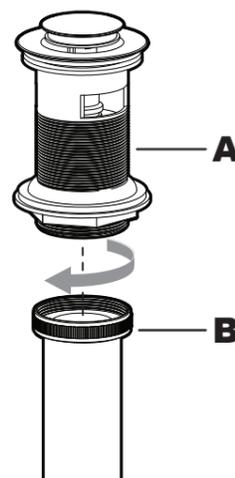


- 13 Remove Mounting Nut (A), Plastic Washer (B), and Rubber Seal (C).

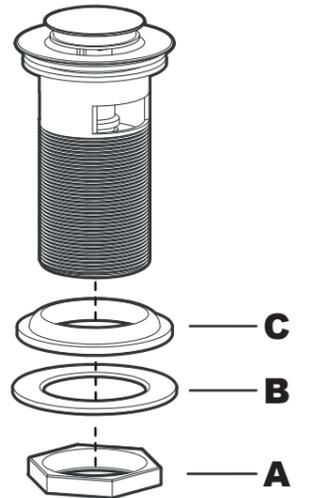


## INSTALL DRAIN ASSEMBLY


- 14 From above, insert Drain Assembly into Drain Hole of sink. Use the included Upper Drain Seal (A) or apply Plumber's Putty to the underside of the Upper Flange.

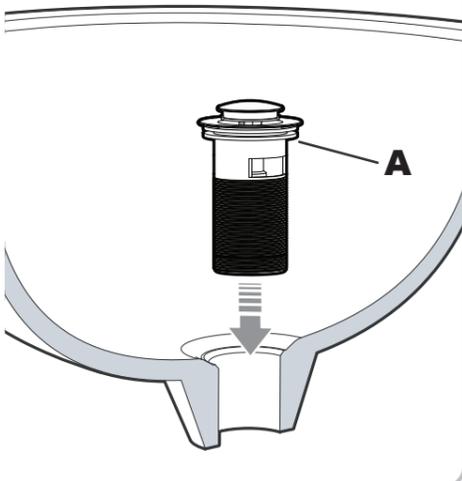


- 15 From below, install Rubber Seal (C), Plastic Washer (B) and Mounting Nut (A). Tighten with Slip Joint Pliers. Take care to not over-tighten connection.

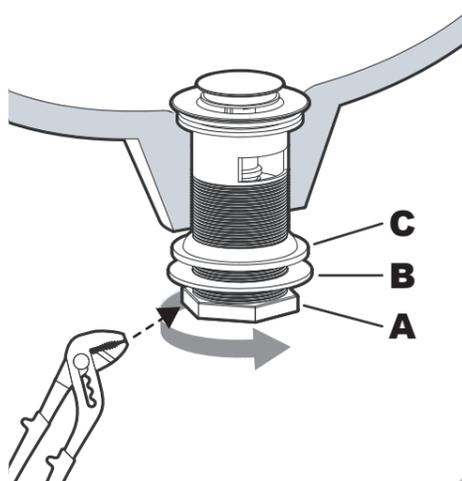

- 16 Reinstall the Tailpiece to the Drain Assembly. Ensure the Rubber Gasket is properly seated in the Tailpiece. Hand tighten the Mounting Nut. Take care to not over-tighten connection. Make remaining plumbing connections.

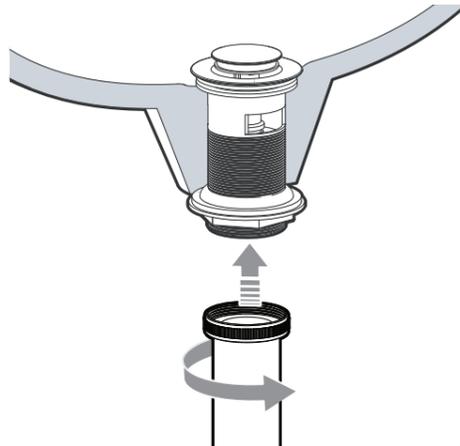


- 17 Test Drain operation by pressing down on Stopper to open/close Drain.

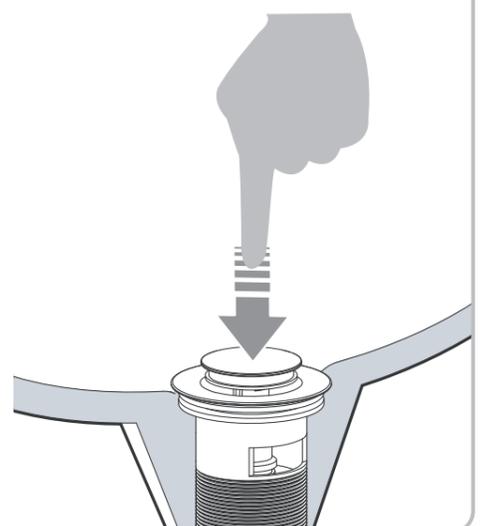


## FLUSH SYSTEM

- 18 Turn on water supplies and flush both COLD and HOT Cartridges for one minute, while checking for leaks. Return Handles to closed position when complete.

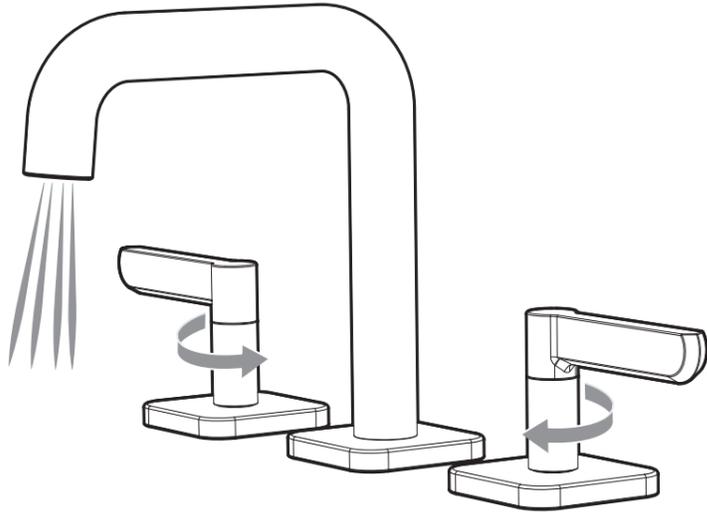


## INSTALL AERATOR


- 19 Install Aerator and secure into position using the included Aerator Key.

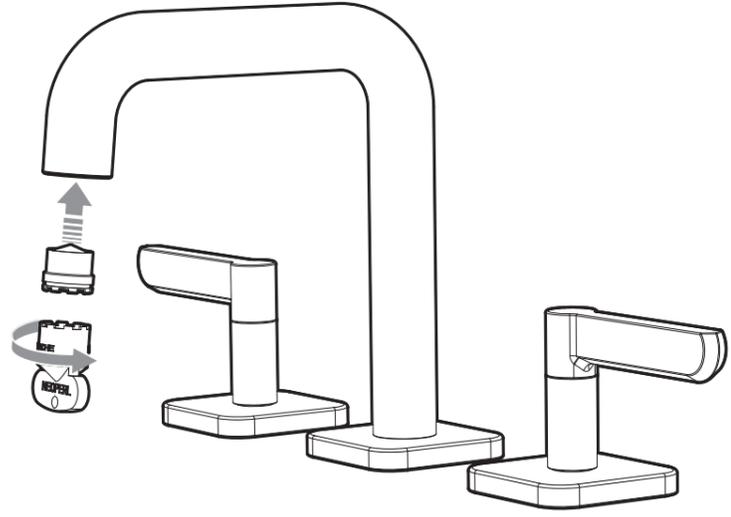


## REPAIR PARTS

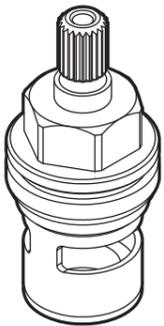

**RPG05-151717**  
COLD VALVE CARTRIDGE

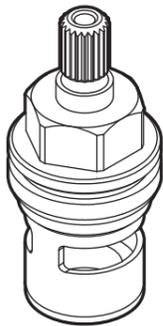

**RPG05-114665**  
HOT VALVE CARTRIDGE

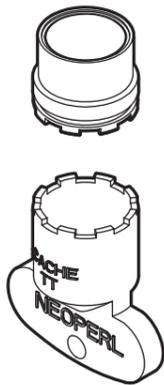

**RPG05-114666**  
AERATOR AND WRENCH

## PRODUCT WARRANTY

This product is warranted to be free of defects in material and workmanship for the period listed below from the date of installation.

**Consumer/Residential: Limited Lifetime Warranty**  
**Commercial Use: 5 Year Limited Warranty**

Speakman warrants to its purchasers only ("Buyer") that goods are sold free from defects in materials and workmanship and conform to Speakman's specifications at the time of manufacturing, provided the goods are properly installed and maintained. Buyer's sole and exclusive remedy for any goods that may prove to have had a non-conformance within the Warranty Period shall be, at Speakman's sole option, the repair or replacement of the non-conforming goods. For additional information please go to [www.speakman.com](http://www.speakman.com).

## CALIFORNIA PROPOSITION 65



### CALIFORNIA PROPOSITION 65:

**WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov). Wash hands after installation, repair, or removal of this product.

