


5 Push the Plastic Anchors (x4) into the drilled holes. Ensure the plastic anchors are flush with the wall. (Note: Plastic Anchors provided may not be suitable for all types of wall construction, seek professional help if in doubt). Enne Anne

1

Loosen Set Screws with supplied Allen Wrench, and remove Mounting Brackets from both ends

of Slide Bar assembly.

9

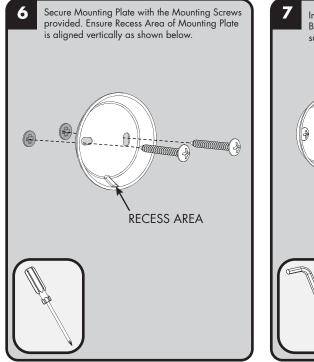

- Note: If the Hand Shower Holder no longer holds position, Loosen the Set Screw (1) from underneath the Bracket using the supplied Allen Key. Tighten the Screw (2) in the Shower Holder using a Philips Head Screwdriver. Then, re-tighten the Set Screw (1) from below.

