


# NEVIS PANEL LOW PROFILE KING BED

## ASSEMBLY INSTRUCTIONS




### BOX #1

- A. HEADBOARD 1 PC
- B. FOOTBOARD 1 PC

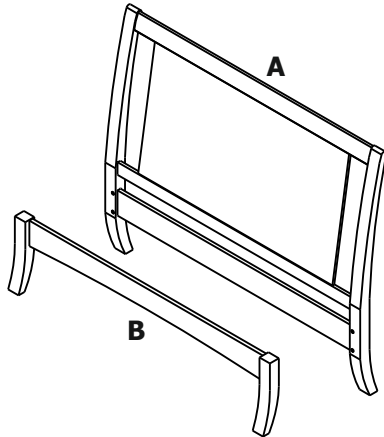


### BOX #2



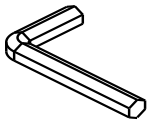



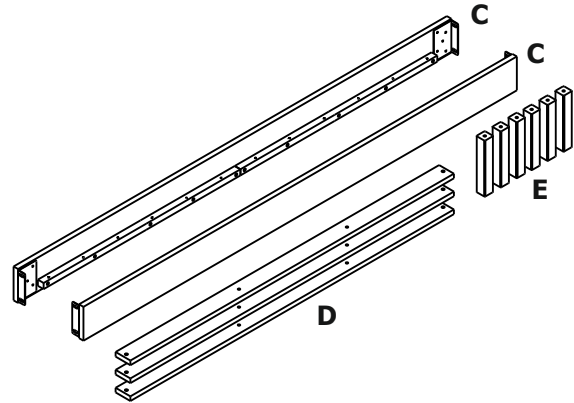- C. SIDE RAIL 2 PCS
- D. BED SLAT 3 PCS
- E. SUPPORT LEG 6 PCS
- BED HARDWARE BOX\*

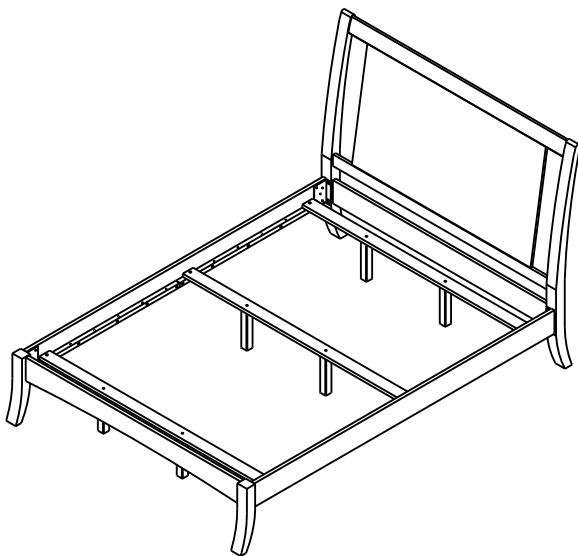

### NEVIS PANEL LOW PROFILE ASSEMBLED





### BED HARDWARE PACKED IN BOX #2


1	PHILLIPS HEAD BOLT(8x20mm)	8 PCS	2	WOOD SCREW (8x30mm)	7 PCS	3	ALLEN KEY	1 PC
								
4	ALLEN BOLT (6x40mm)	7 PCS	5	SPRING WASHER (M8)	8 PCS	6	FLAT WASHER (M8)	8 PCS
								

TOOL REQUIRED : PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED)


YOUR BOX  
MAY CONTAIN  
EXTRA HARDWARE

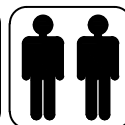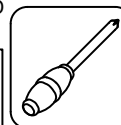


### STEP 1 :

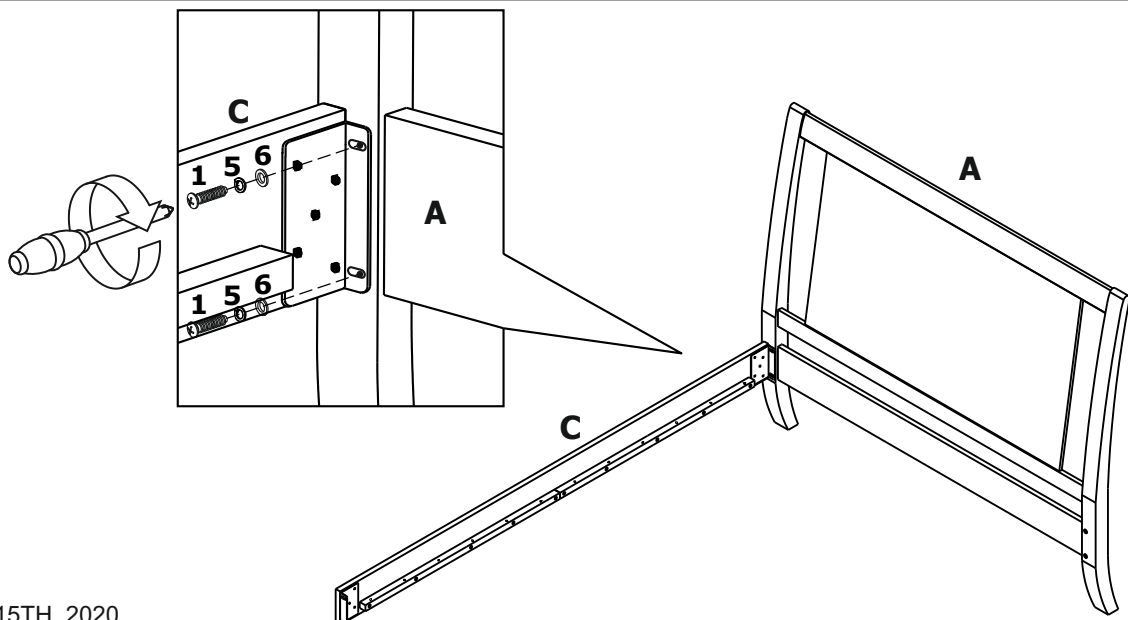

## STEP 2 :

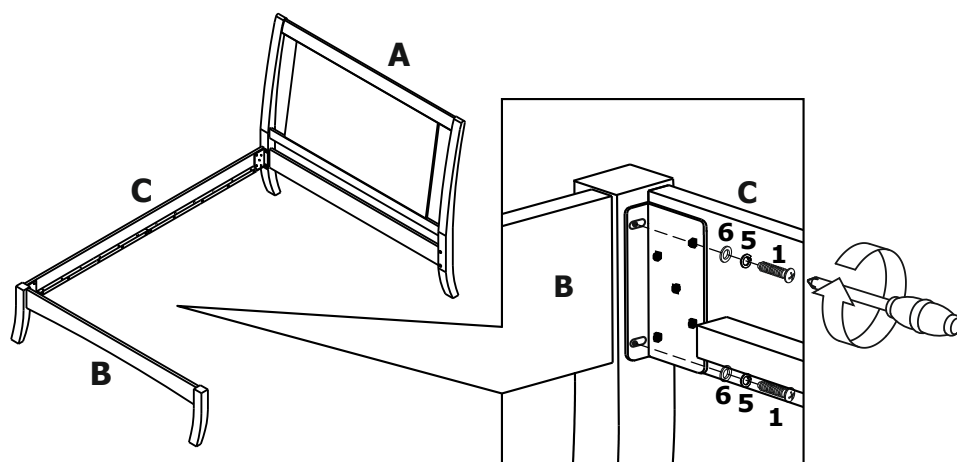


## STEP 3 :

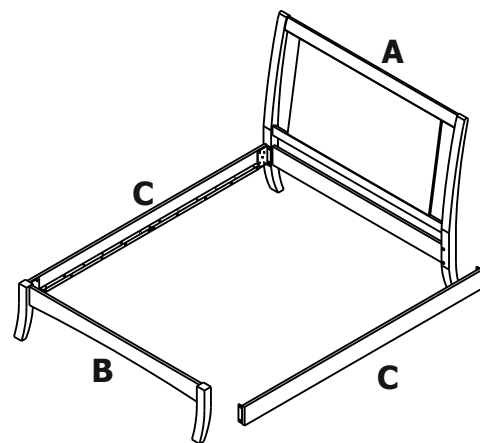


### STOP

- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 4.

## STEP 4 :

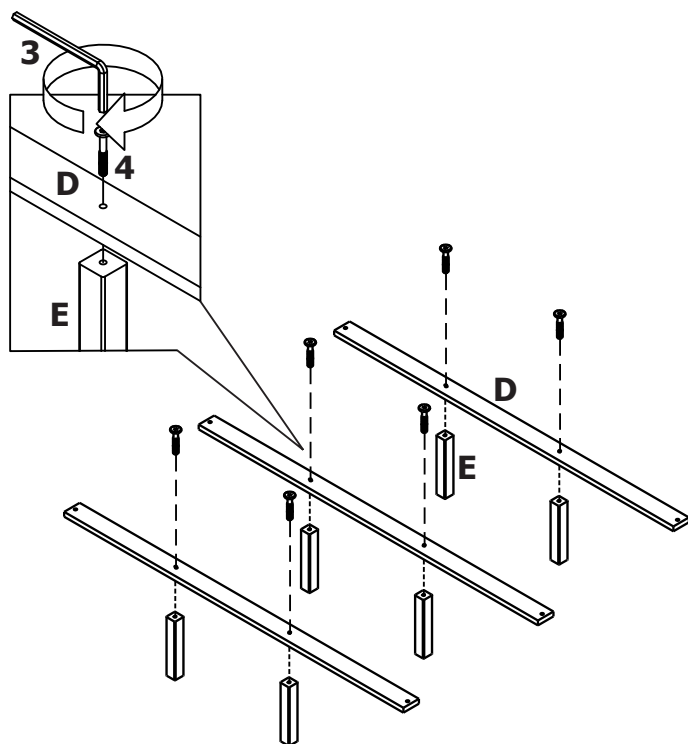

## STEP 5 :

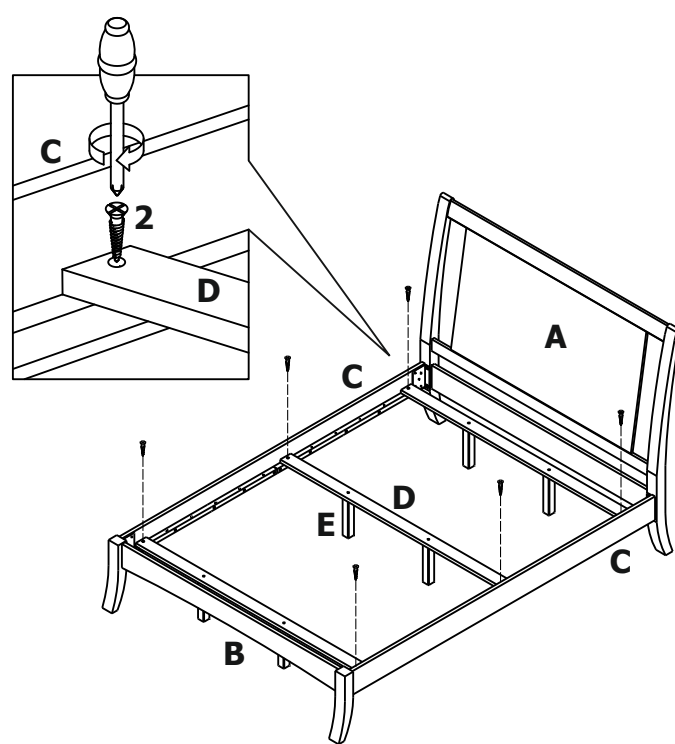


## INSTRUCTIONS FOR ADJUSTING LEVELERS :

POSITION THE BED IN YOUR ROOM.  
LOCATE LEVELERS UNDER EACH  
SUPPORT LEG (E).

TURN LEVELERS COUNTER-CLOCKWISE  
TO EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH SUPPORT  
LEG IS APPLYING EQUAL UPWARD  
PRESSURE ON THE BED SUPPORT SLAT.

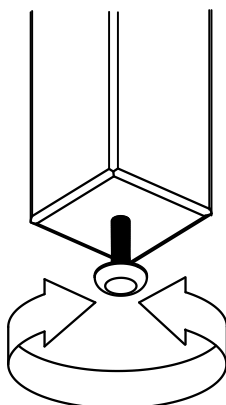

## MAINTENANCE INSTRUCTIONS :

- REMOVE BOX SPRING AND MATTRESS  
BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT.  
DRAGGING CAN DAMAGE  
THE SUPPORT LEG.
- READJUST LEVELERS AFTER MOVING  
YOUR BED.

# NEVIS PANEL LOW PROFILE KING BED



## APPENDIX A:ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. BED SLAT  
E. SUPPORT LEG


3 PCS  
6 PCS

2. WOOD SCREW (8x30mm)  
4. ALLEN BOLT (6x40mm)

7 PCS  
7 PCS

### STEP 1 :

USE ALLEN KEY **(3)** TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

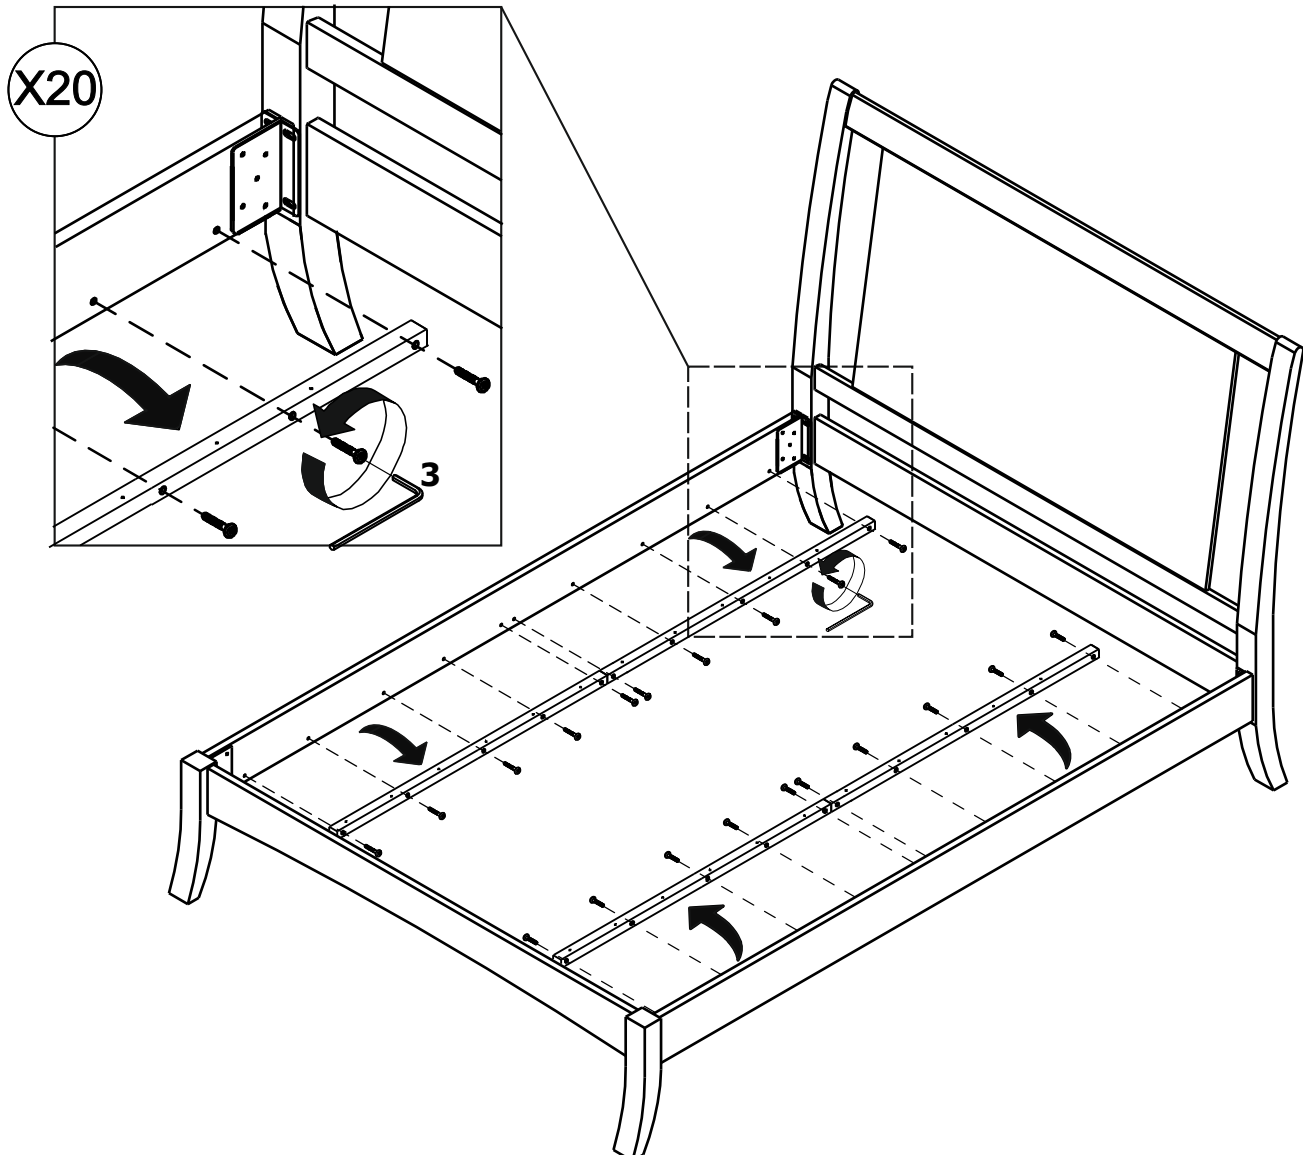

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

UPDATED : JUNE 15TH, 2020