

BOKA WOOD/UPH FULL BED

ASSEMBLY INSTRUCTIONS




PARTS AND FITTING PACKAGING DETAIL

BOX #1

- A. HEADBOARD
- B. LEFT LEG
- C. RIGHT LEG
- D. STRETCHER


1 PC
1 PC
1 PC
1 PC

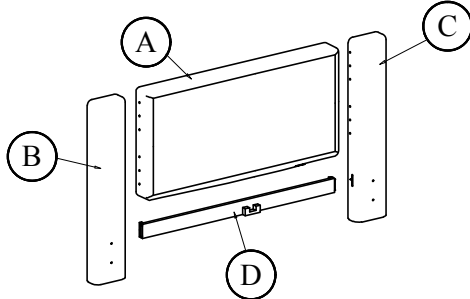

BOX #2

- E. FOOTBOARD
- F. SLAT ROLL


1 PC
1 SET

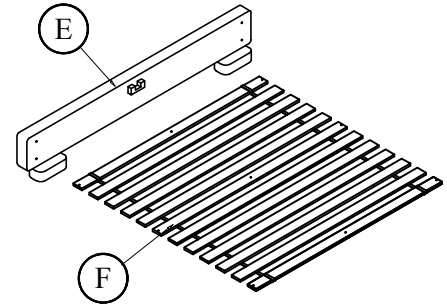


BOX #3

- G. SIDE RAILS
- H. CENTER SUPPORT
- I. SUPPORT LEG

2 PCS
1 PC
5 PCS

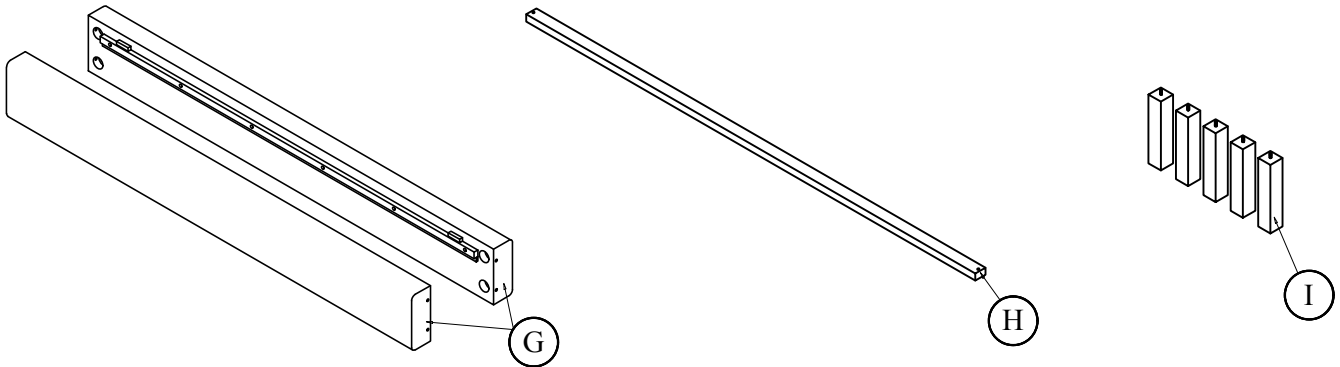

FULLY ASSEMBLED

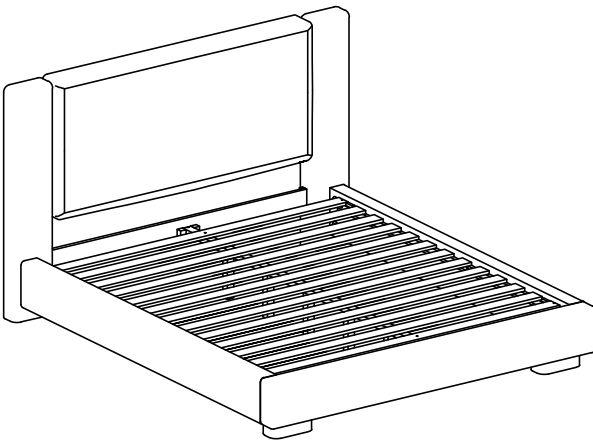


HARDWARE KIT PACKED IN BOX #1

NO.	DESCRIPTION	IMAGE	QTY
1	ALLEN BOLT (8x50mm)		8 PCS
2	ALLEN BOLT (6x40mm)		2 PCS
3	LOCK WASHER (M9)		10 PCS
4	FLAT WASHER (M8x20)		8 PCS
5	FLAT WASHER (M6x13)		2 PCS
6	ALLEN KEY		1 PC

HARDWARE KIT PACKED IN BOX #2


7	THREADED BOLT (8x70mm)		8 PCS
8	ARC WASHER (2x14x26mm)		8 PCS
9	LOCK WASHER (M9)		8 PCS
10	HEX NUT (M8)		8 PCS
11	WRENCH		1 PC
12	WOOD SCREW (4x35mm)		2 PCS
13	WOOD SCREW (4x25mm)		9 PCS
14	ALLEN KEY		1 PC




BOKA WOOD/UPH FULL BED

ASSEMBLY INSTRUCTIONS

STEP 1

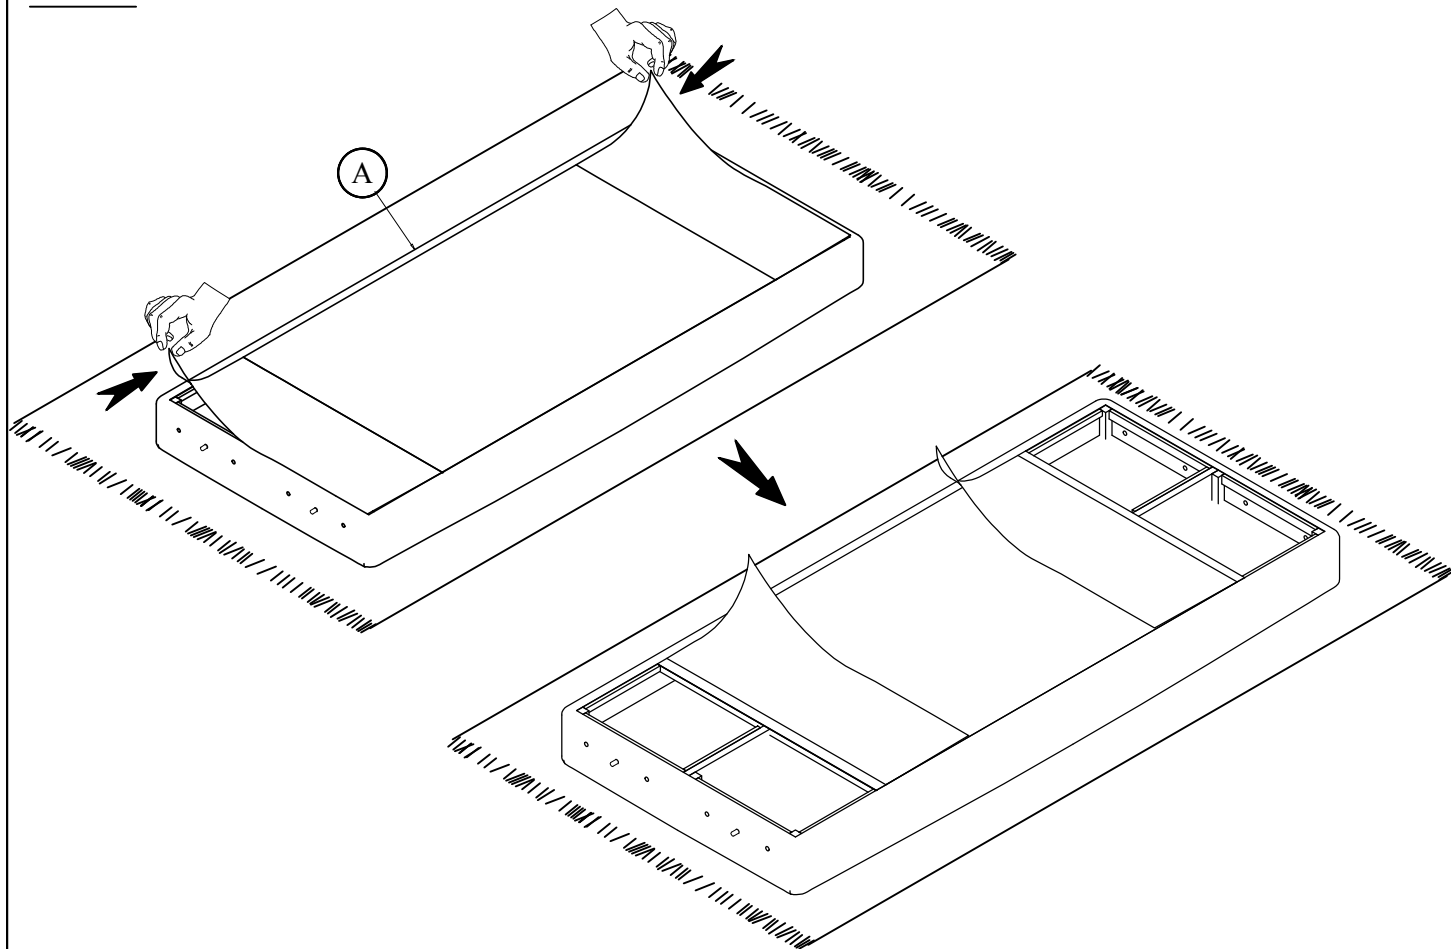

STEP 2

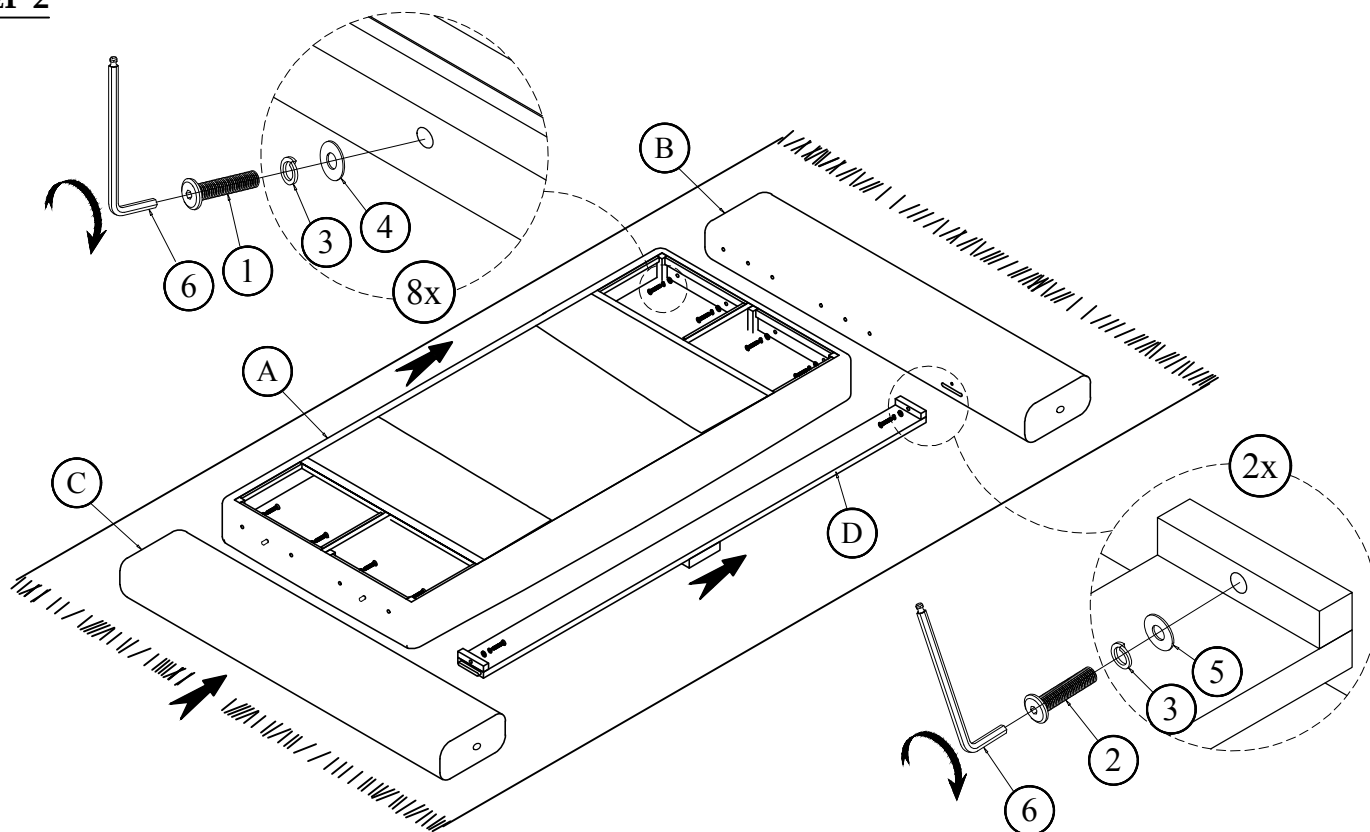


BOKA WOOD/UPH FULL BED


ASSEMBLY INSTRUCTIONS




STEP 3

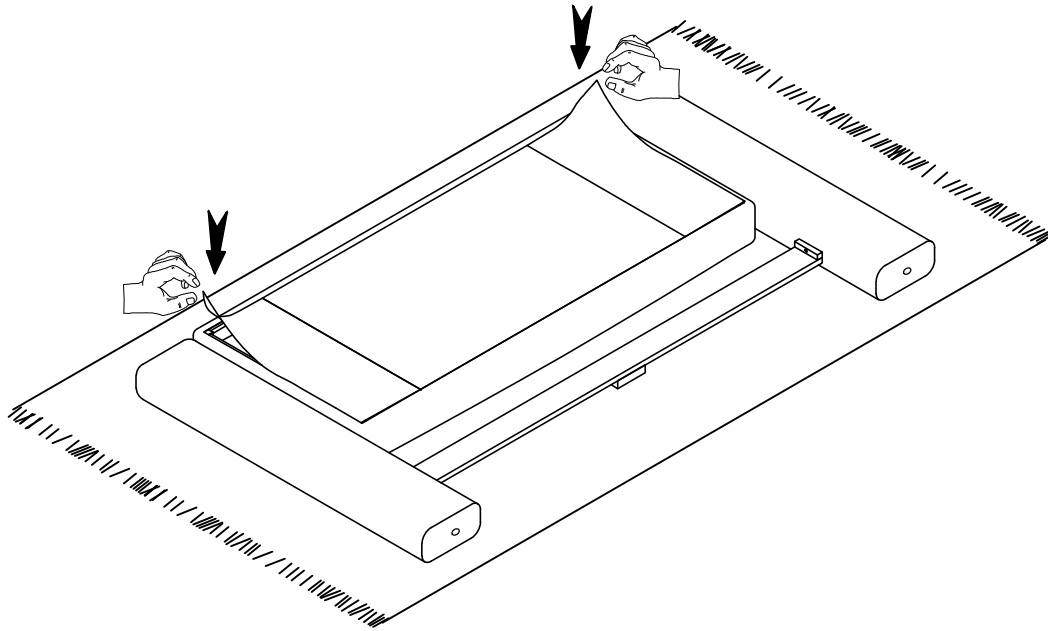

STEP 4

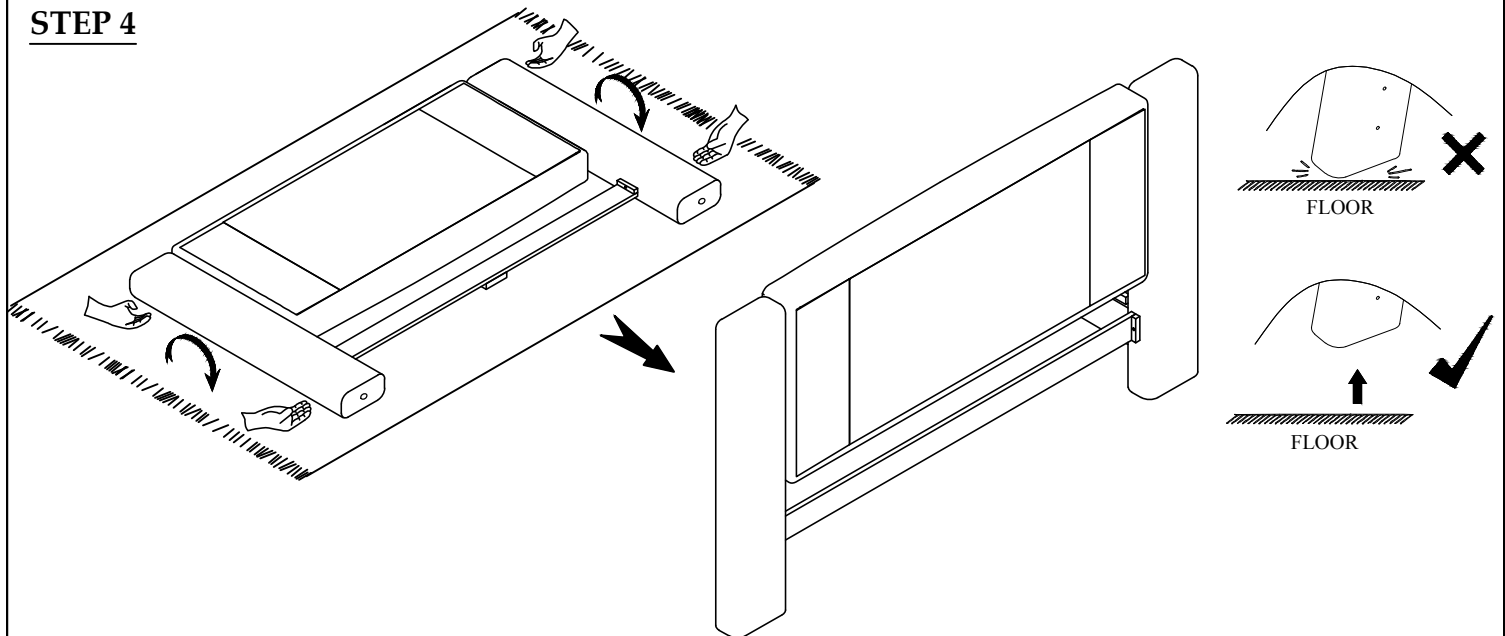

STEP 5

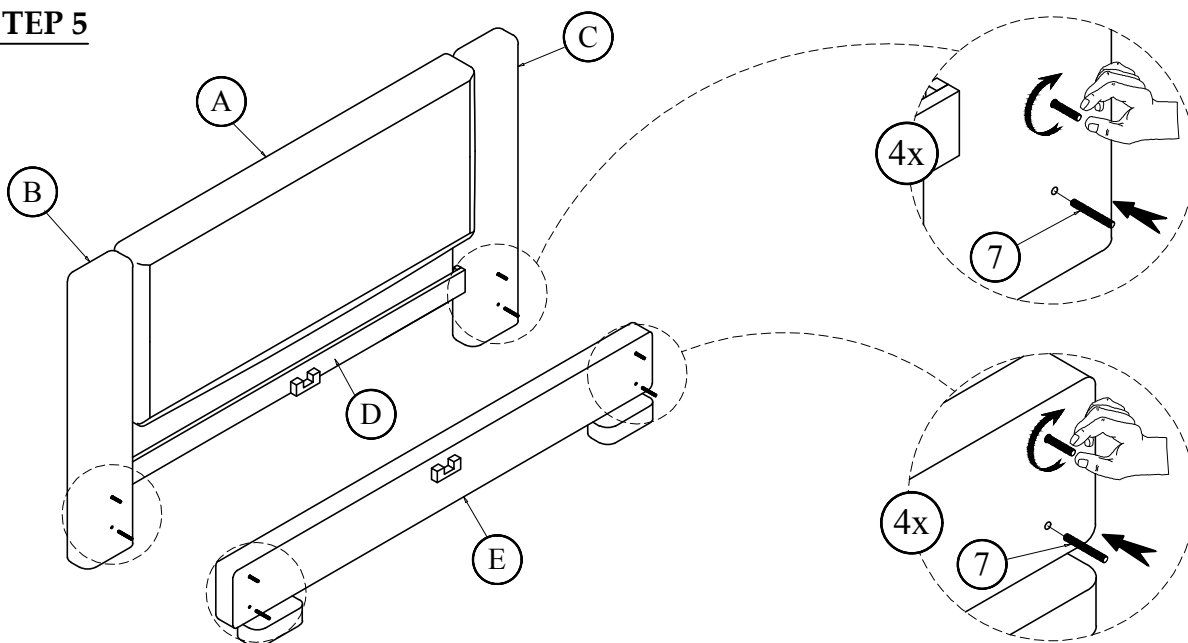


BOKA WOOD/UPH FULL BED


ASSEMBLY INSTRUCTIONS



STEP 6

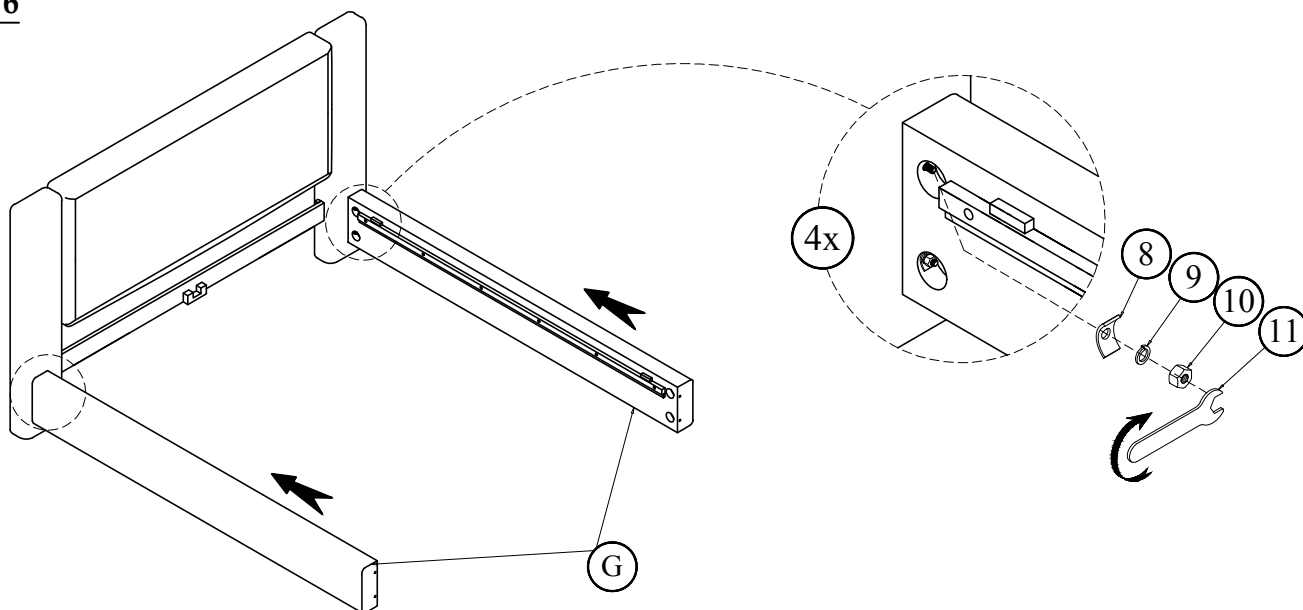


STEP 7

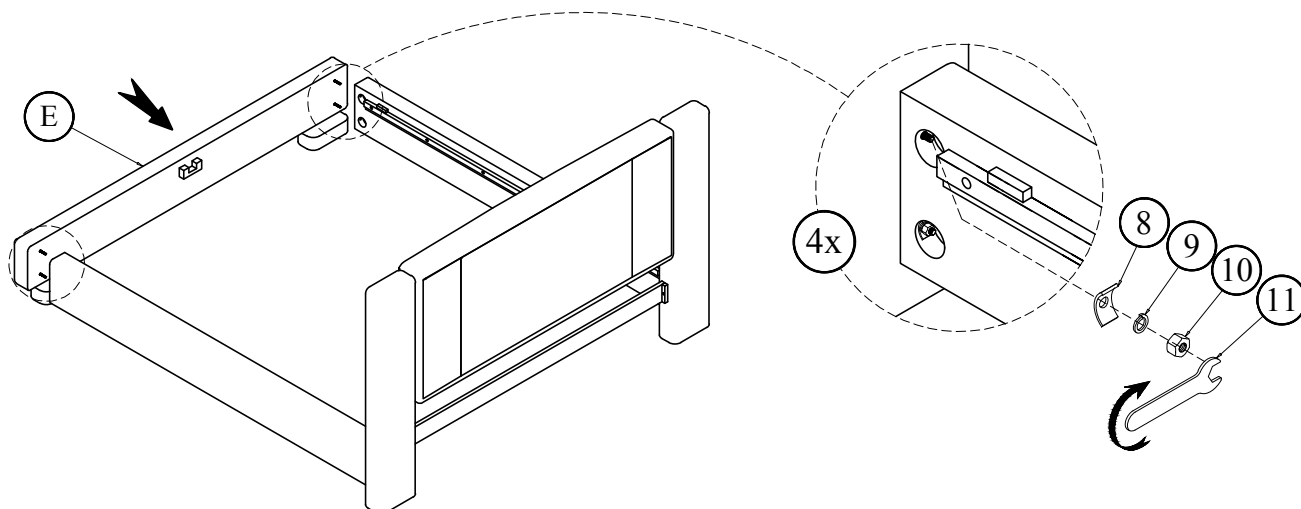

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 8, 9, 10 & 11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 8

STEP 8

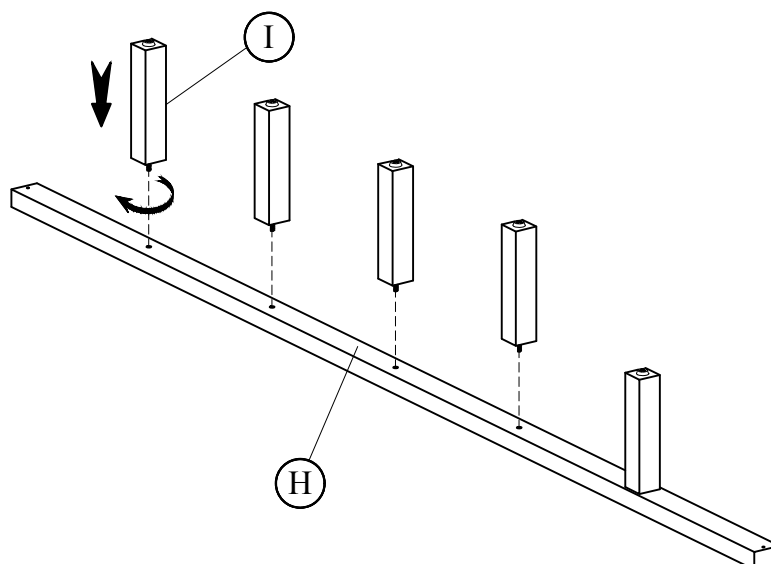


BOKA WOOD/UPH FULL BED


ASSEMBLY INSTRUCTIONS




STEP 9

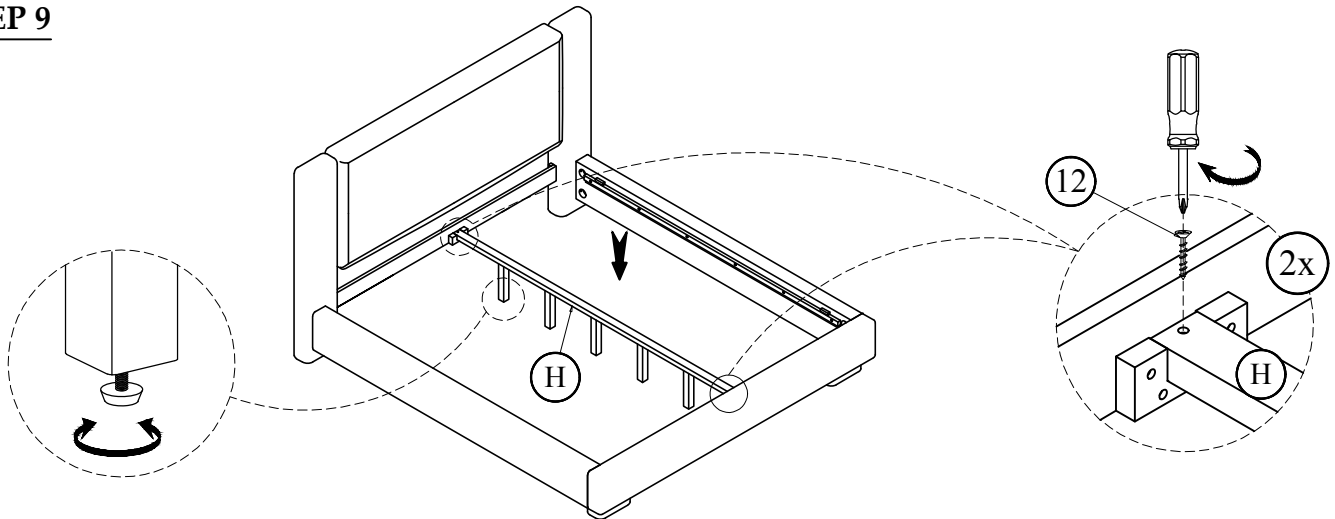

STEP 10

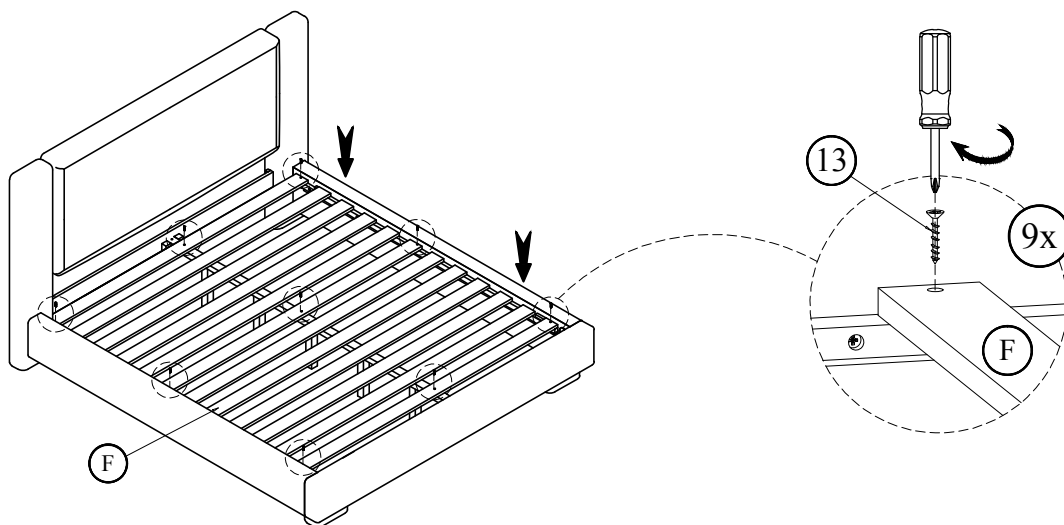

STEP 11

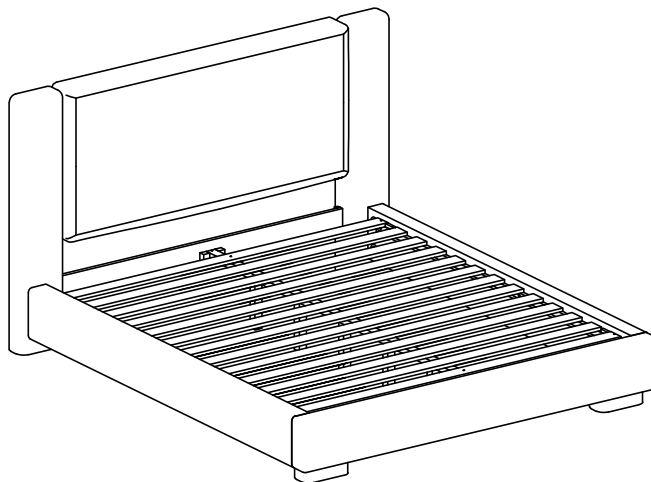

ASSEMBLY COMPLETE


PAGE 5 OF 6

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each leg support (I).

Turn the leveler counter-clockwise to extend and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the center slat.

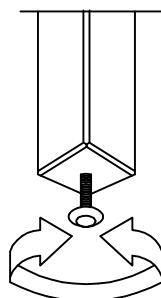

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

BOKA WOOD/UPH FULL BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL	: 1 SET	*WOOD SCREW (4x35mm)	: 2 PCS
H. CENTER SUPPORT	: 1 PC	*WOOD SCREW (4x25mm)	: 9 PCS
I. SUPPORT LEG	: 5 PCS		

STEP #1:

USE ALLEN KEY (14) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

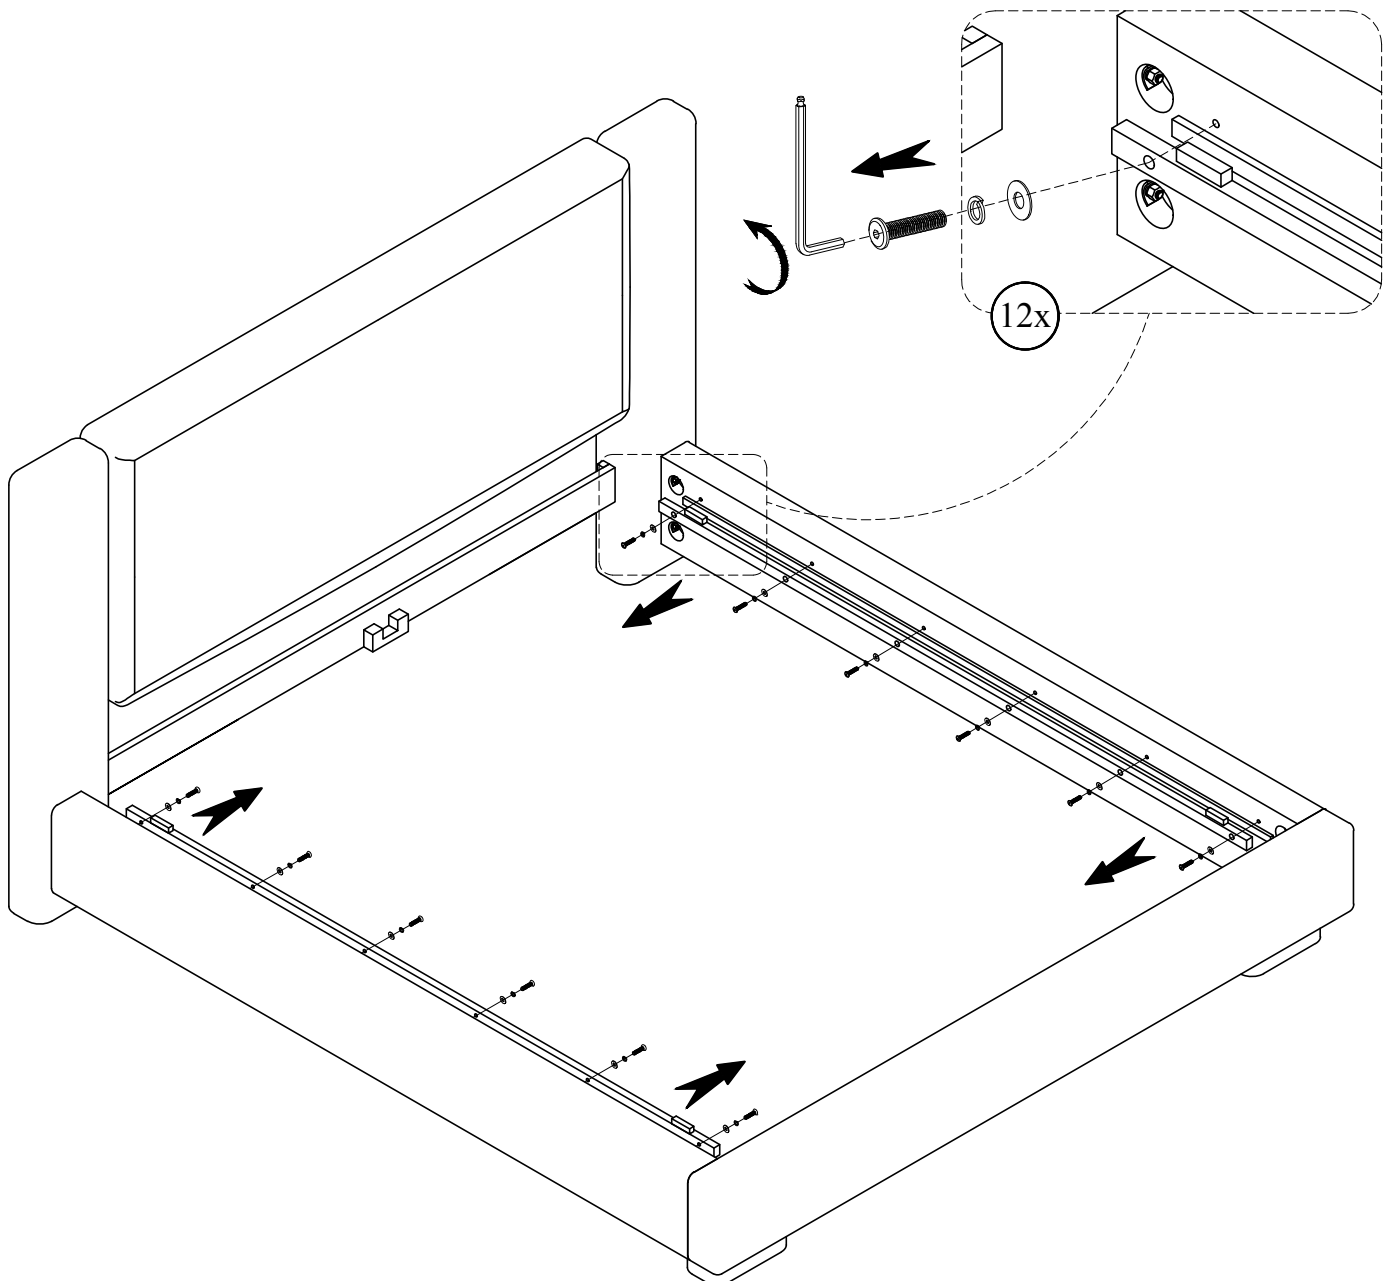

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

BOKA WOOD/UPH QUEEN BED

ASSEMBLY INSTRUCTIONS




PARTS AND FITTING PACKAGING DETAIL

BOX #1

A. HEADBOARD
B. LEFT LEG
C. RIGHT LEG
D. STRETCHER


1 PC
1 PC
1 PC
1 PC

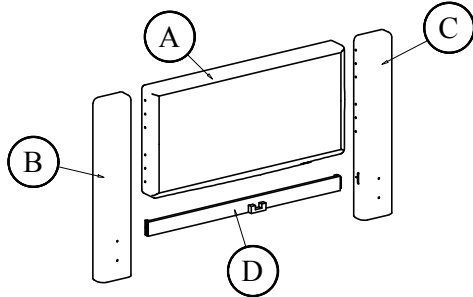

BOX #2

E. FOOTBOARD
F. SLAT ROLL


1 PC
1 SET

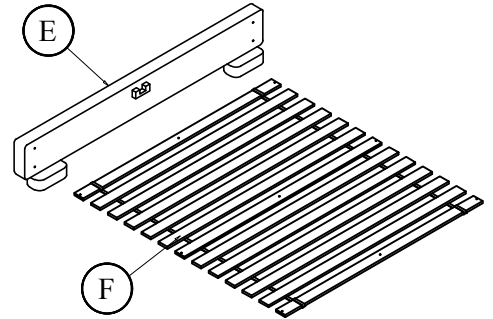


BOX #3

G. SIDE RAILS
H. CENTER SUPPORT
I. SUPPORT LEG

2 PCS
1 PC
5 PCS

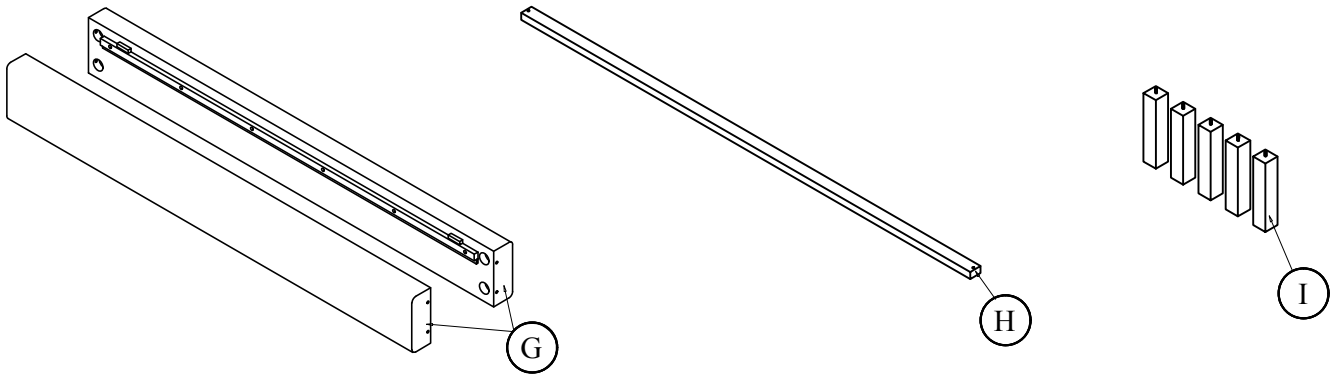

FULLY ASSEMBLED

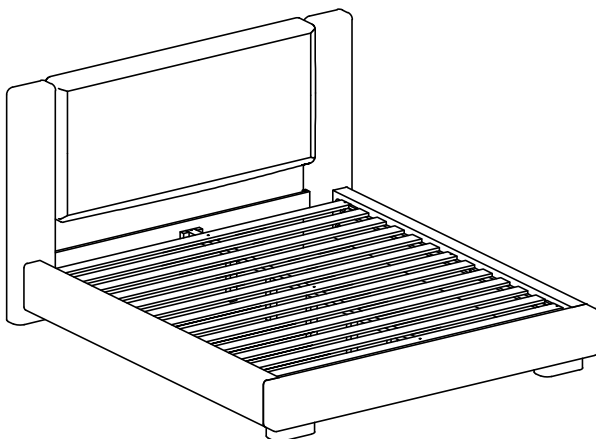


HARDWARE KIT PACKED IN BOX #1

NO.	DESCRIPTION	IMAGE	QTY
1	ALLEN BOLT (8x50mm)		8 PCS
2	ALLEN BOLT (6x40mm)		2 PCS
3	LOCK WASHER (M9)		10 PCS
4	FLAT WASHER (M8x20)		8 PCS
5	FLAT WASHER (M6x13)		2 PCS
6	ALLEN KEY		1 PC

HARDWARE KIT PACKED IN BOX #2


7	THREADED BOLT (8x70mm)		8 PCS
8	ARC WASHER (2x14x26mm)		8 PCS
9	LOCK WASHER (M9)		8 PCS
10	HEX NUT (M8)		8 PCS
11	WRENCH		1 PC
12	WOOD SCREW (4x35mm)		2 PCS
13	WOOD SCREW (4x25mm)		9 PCS
14	ALLEN KEY		1 PC




ASSEMBLY INSTRUCTIONS

MODUS
FURNITURE

STEP 1

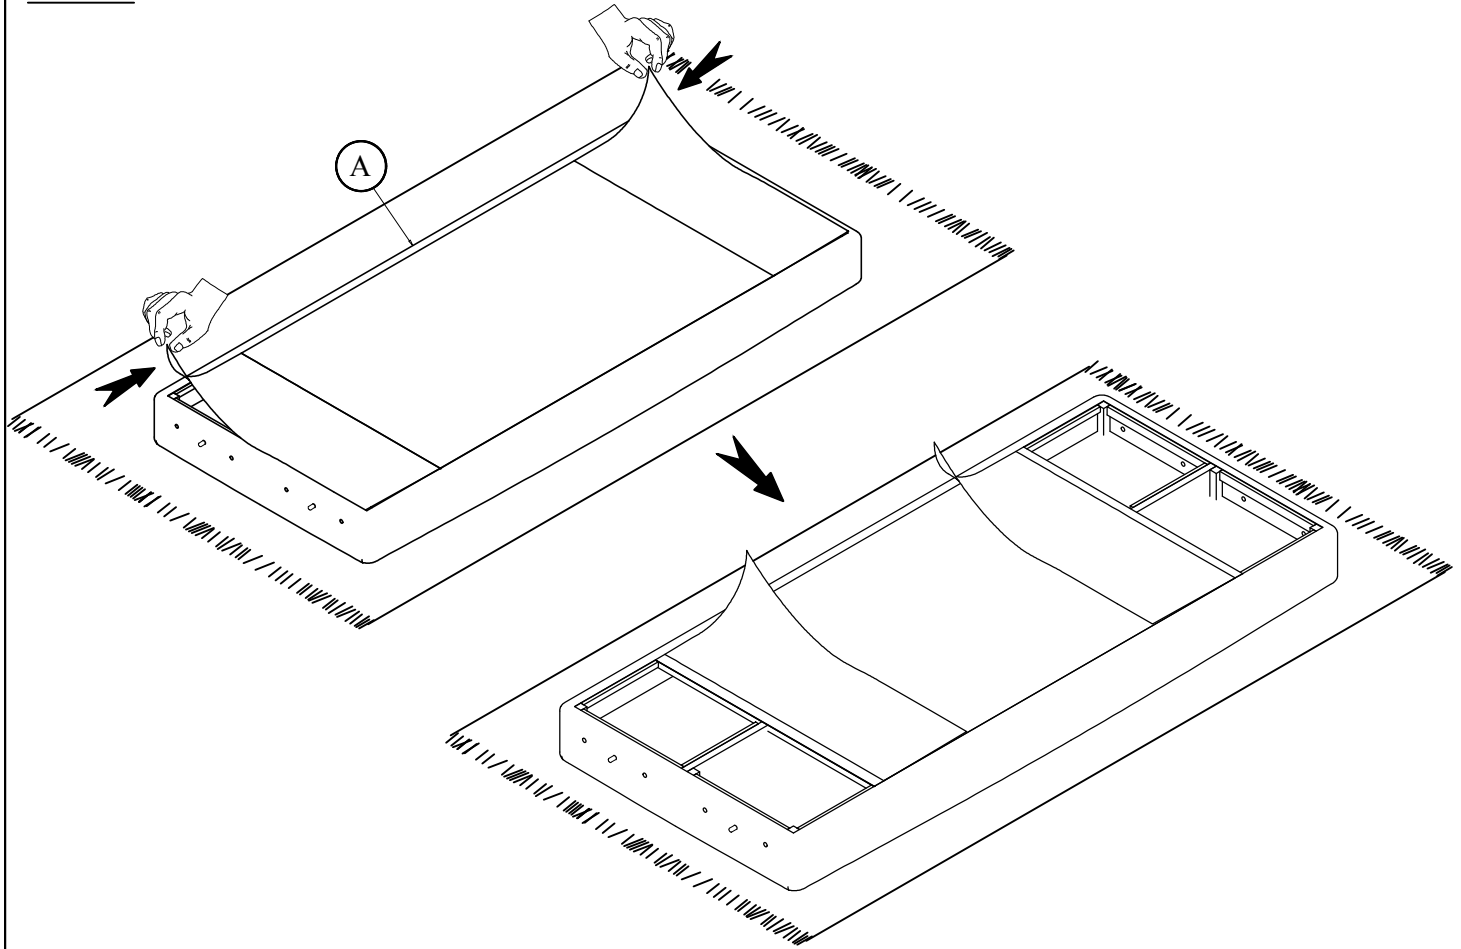


STEP 2

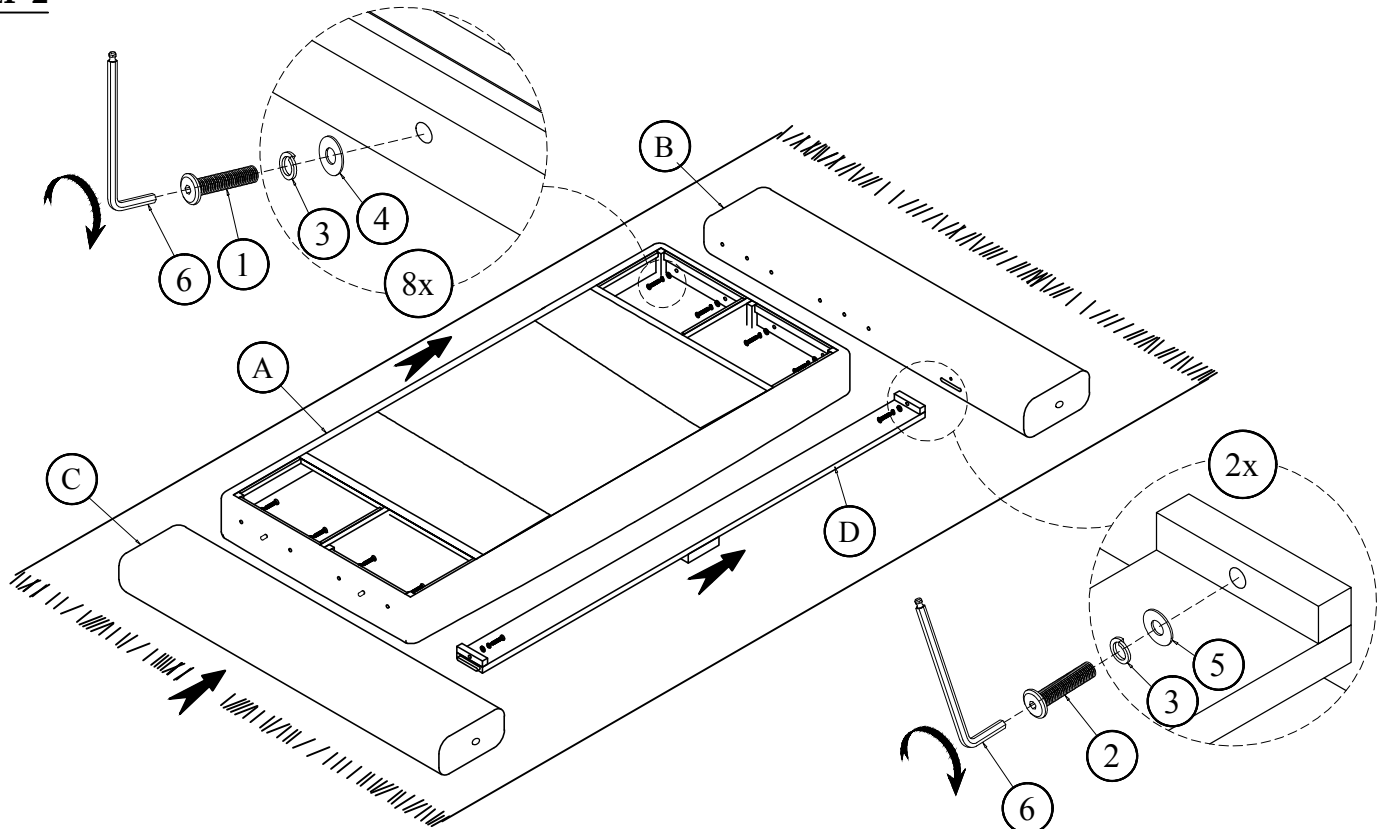


BOKA WOOD/UPH QUEEN BED

ASSEMBLY INSTRUCTIONS


STEP 3

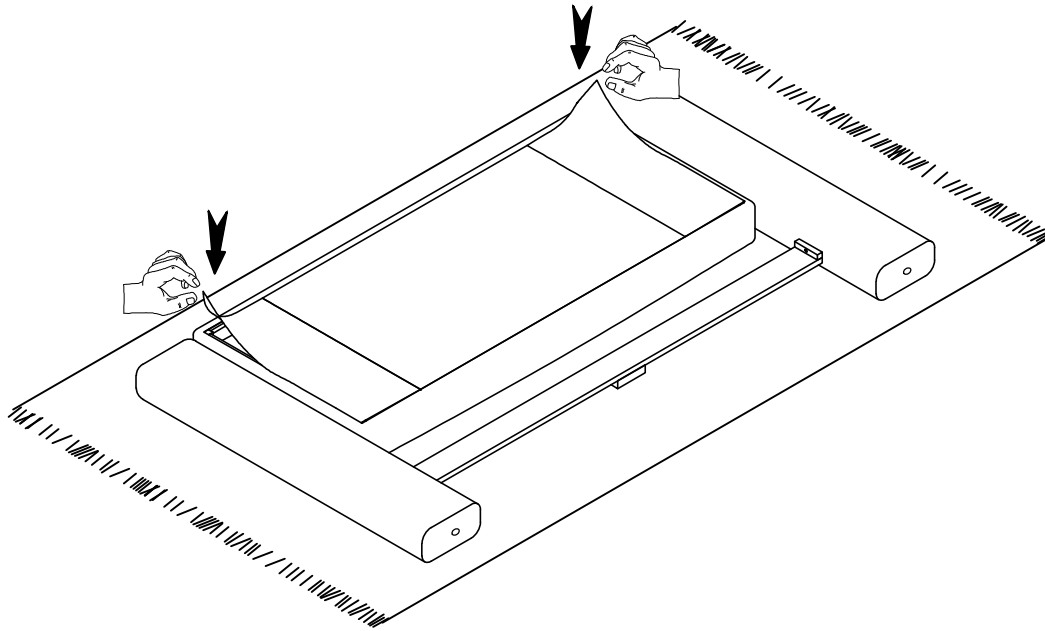

STEP 4

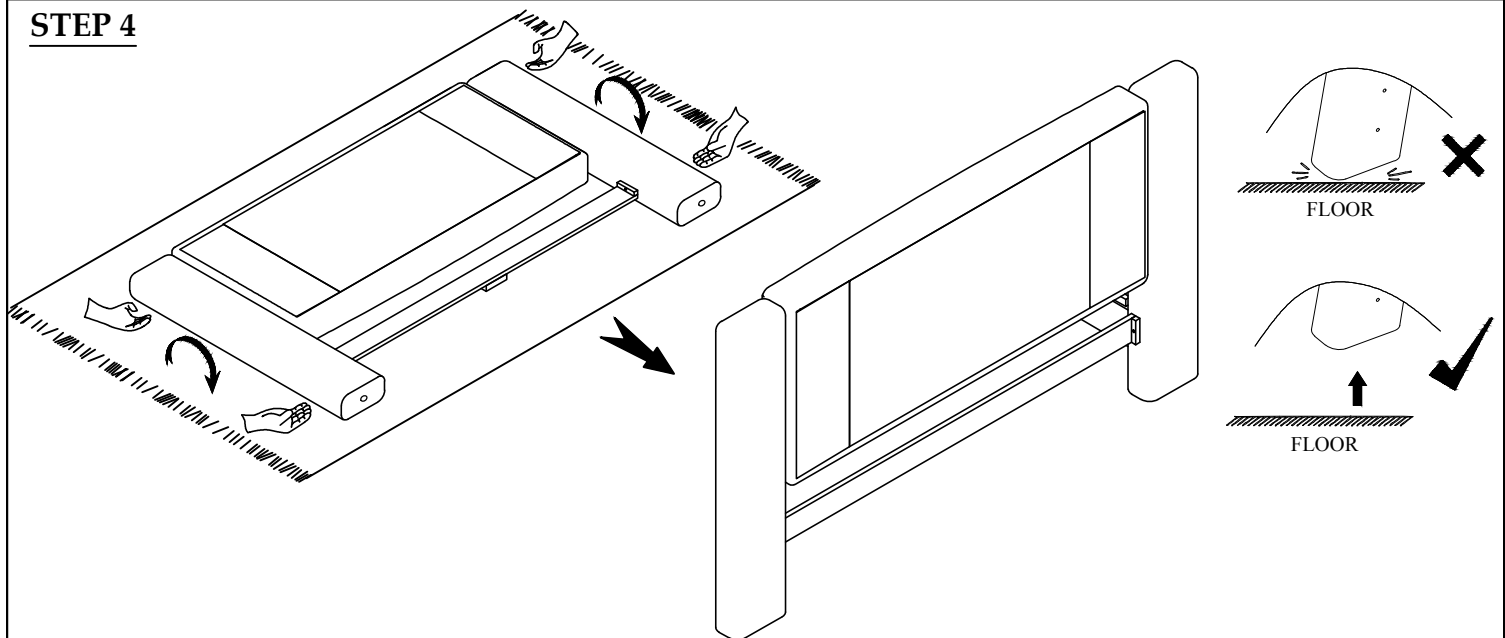

STEP 5

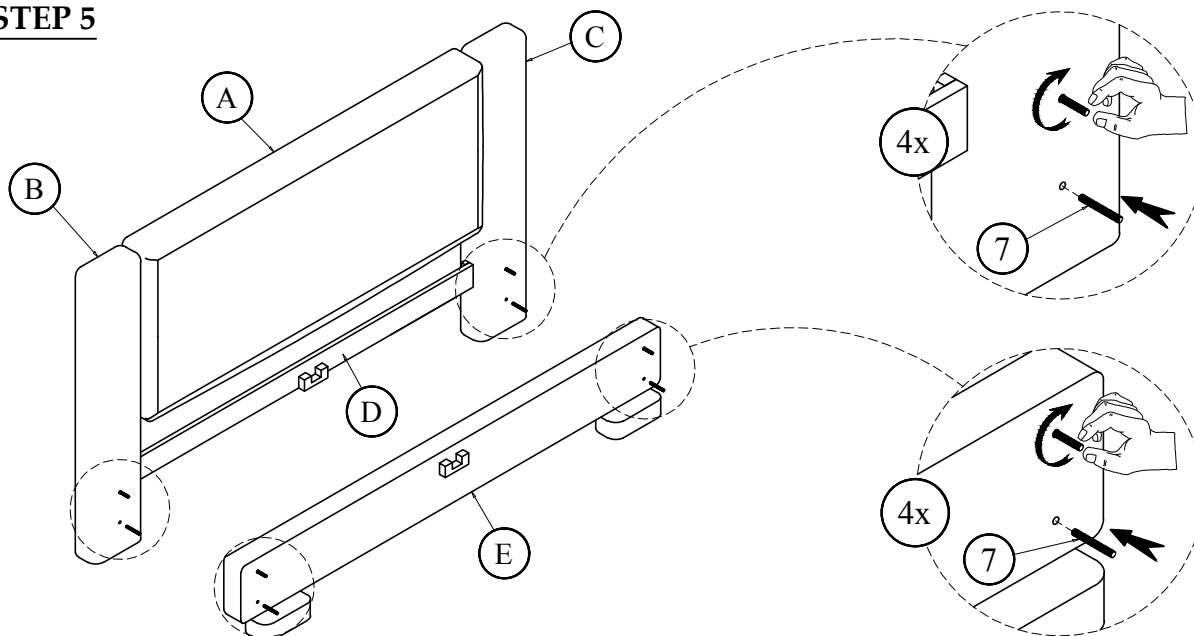


BOKA WOOD/UPH QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 6

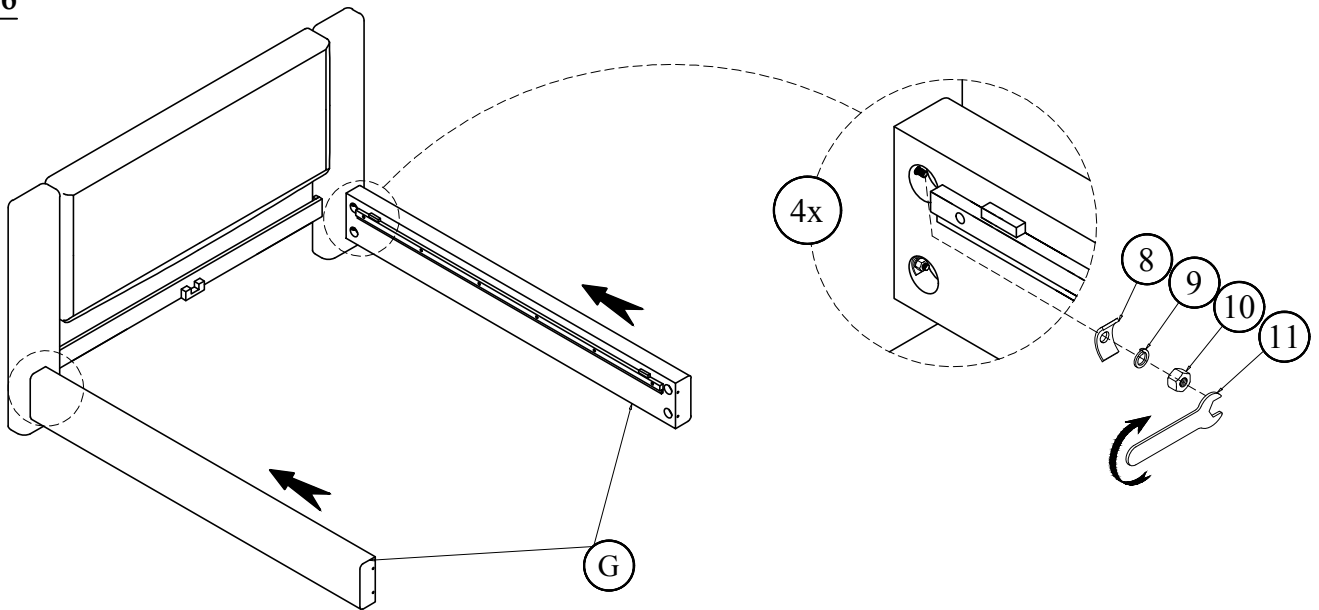


STEP 7

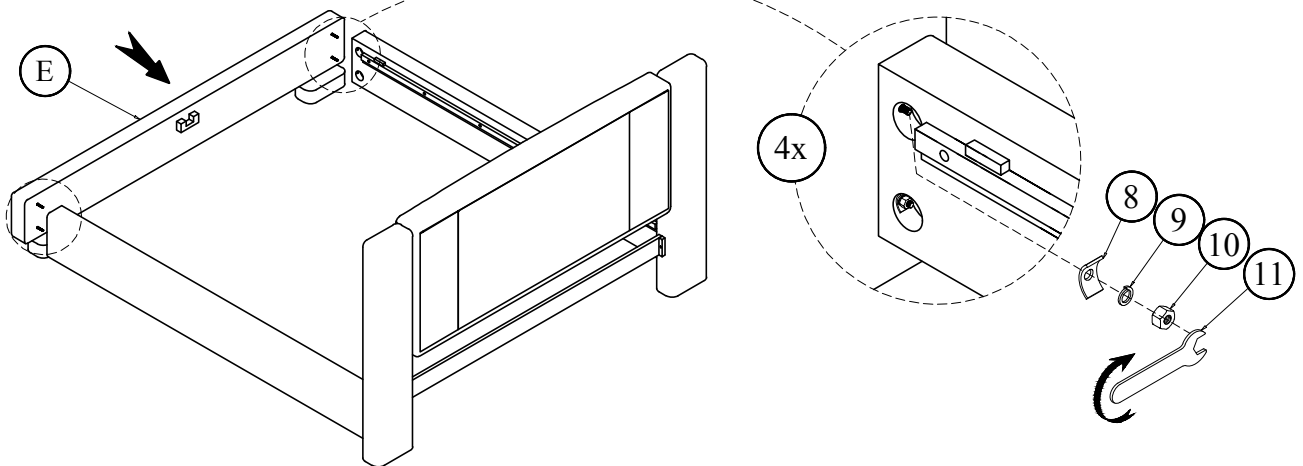

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 8, 9, 10 & 11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 8

STEP 8

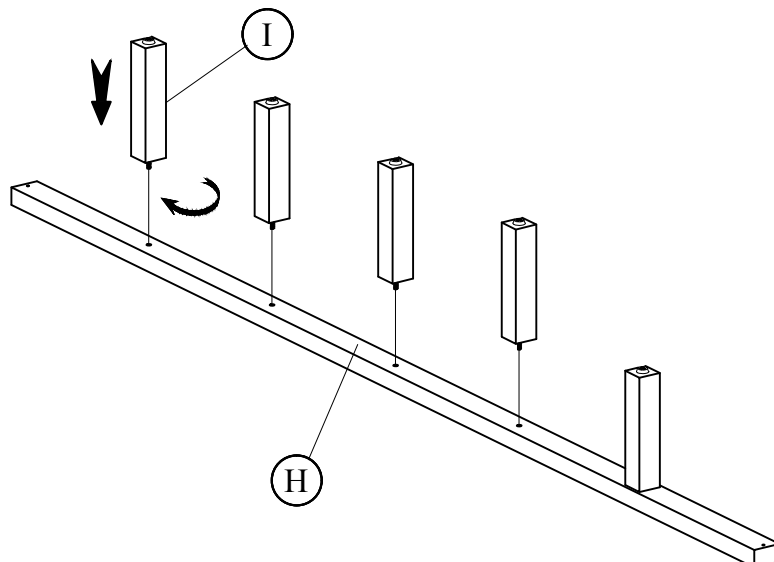


BOKA WOOD/UPH QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 9

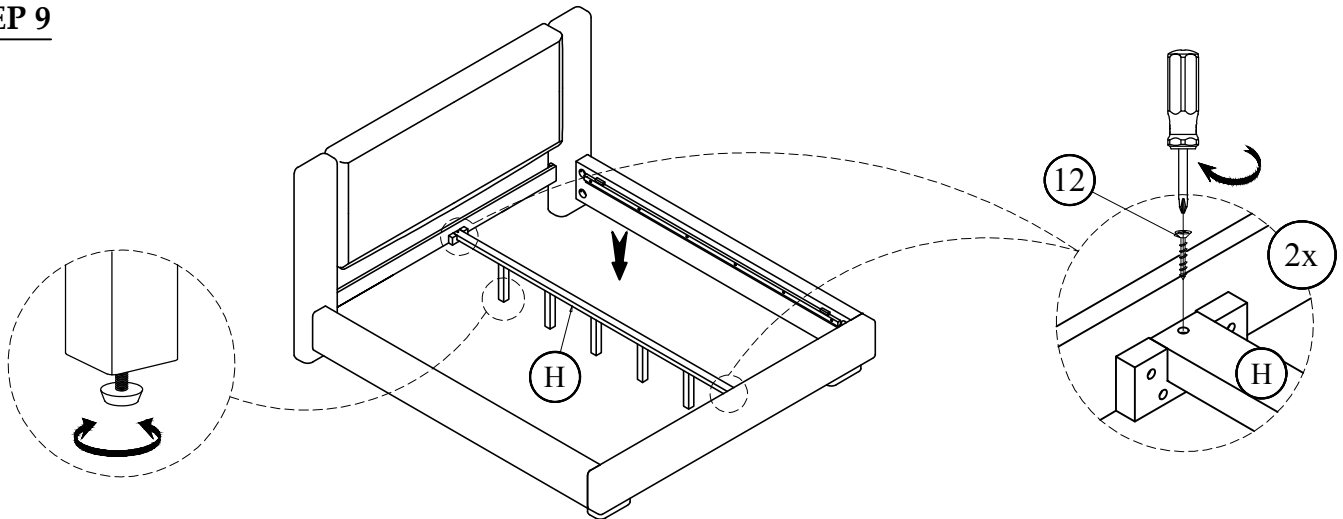

STEP 10

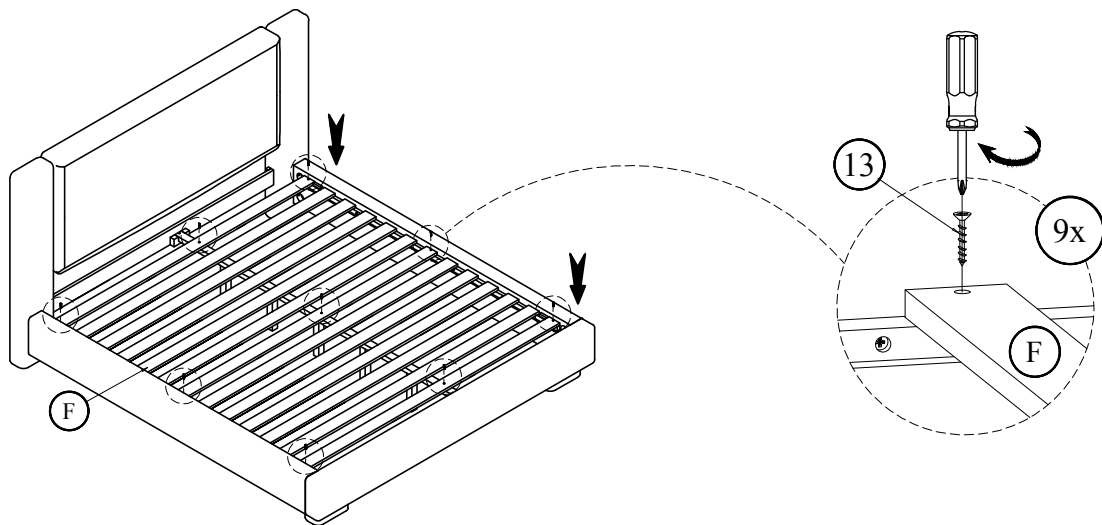

STEP 11

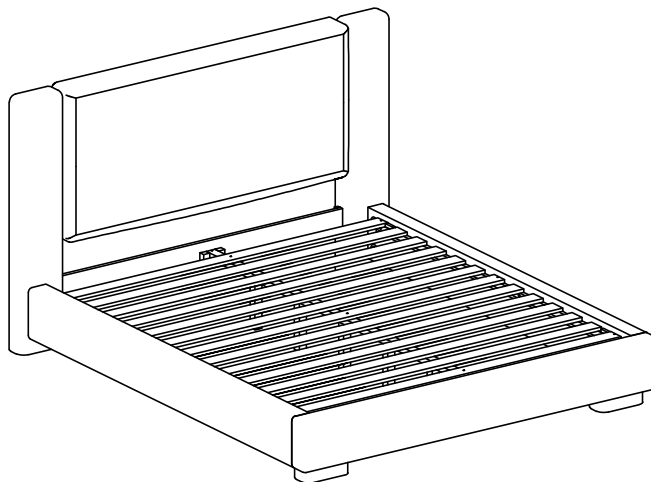

ASSEMBLY COMPLETE


PAGE 5 OF 6

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each leg support (I).

Turn the leveler counter-clockwise to extend and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the center slat.

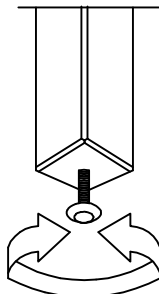

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

BOKA WOOD/UPH QUEEN BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL	: 1 SET	*WOOD SCREW (4x35mm)	: 2 PCS
H. CENTER SUPPORT	: 1 PC	*WOOD SCREW (4x25mm)	: 9 PCS
I. SUPPORT LEG	: 5 PCS		

STEP #1:

USE ALLEN KEY (14) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

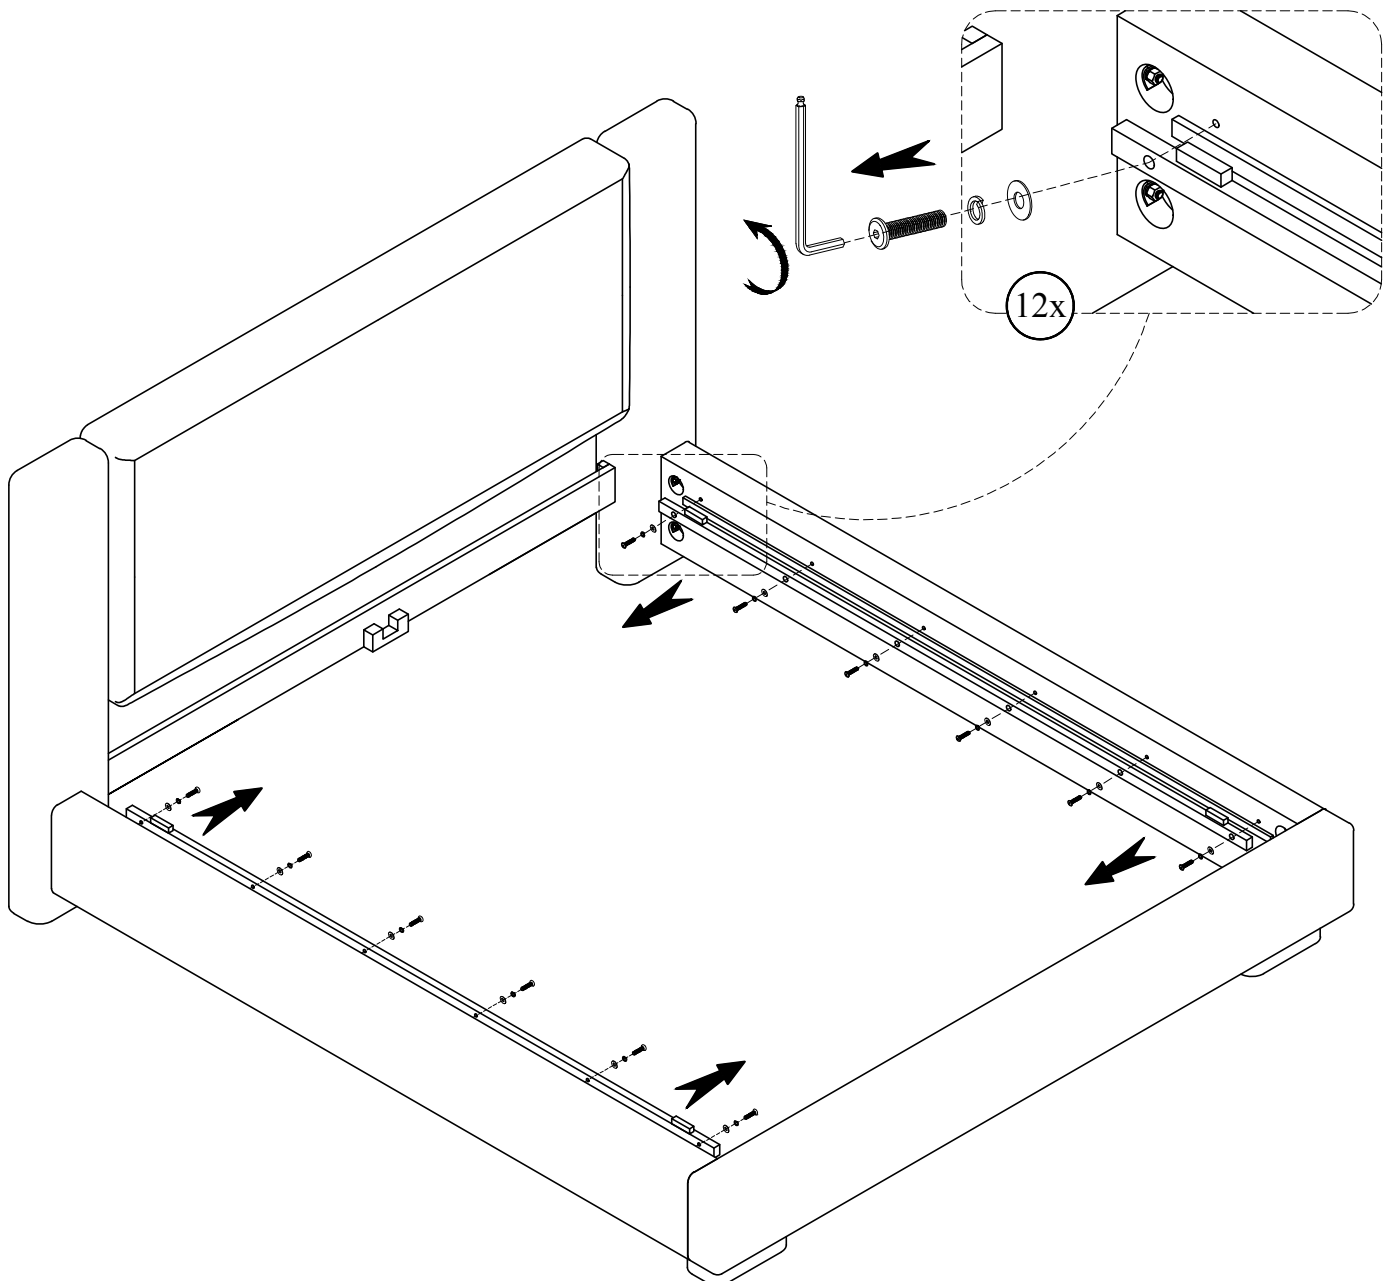

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

BOKA WOOD/UPH CAL KING BED


ASSEMBLY INSTRUCTIONS



PARTS AND FITTING PACKAGING DETAIL


BOX #1

A. HEADBOARD	1 PC
B. LEFT LEG	1 PC
C. RIGHT LEG	1 PC
D. STRETCHER	1 PC

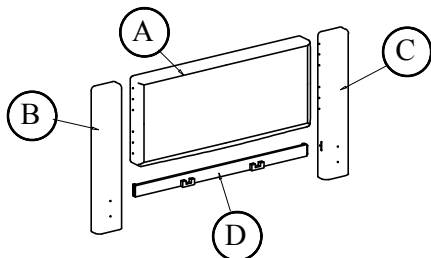



BOX #2

E. FOOTBOARD	1 PC
F. SLAT ROLL	1 SET

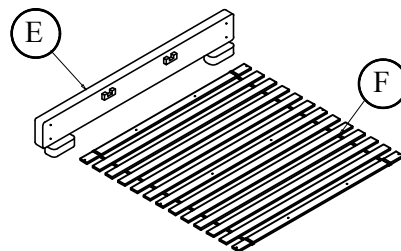


BOX #3

G. SIDE RAILS	2 PCS
H. CENTER SUPPORT	2 PCS
I. SUPPORT LEG	10 PCS
J. MATTRESS SPACER	2 PCS

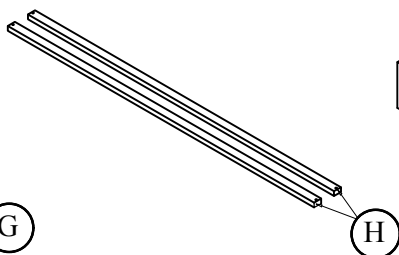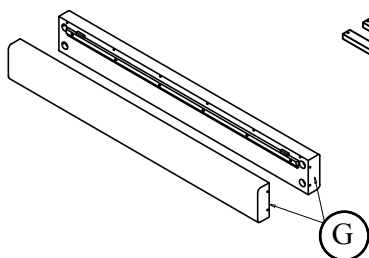

FULLY ASSEMBLED

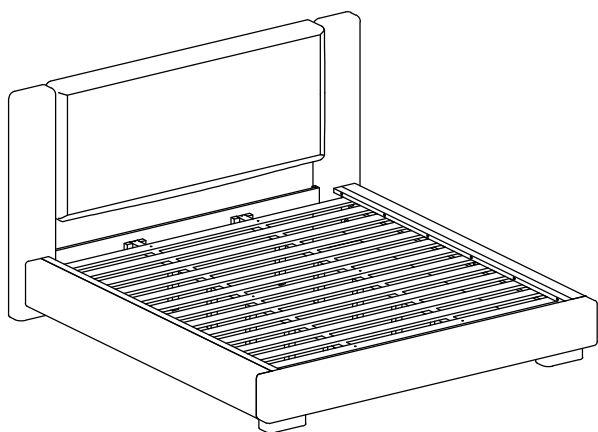


HARDWARE KIT PACKED IN BOX #1

NO.	DESCRIPTION	IMAGE	QTY
1	ALLEN BOLT (8x50mm)		8 PCS
2	ALLEN BOLT (6x40mm)		2 PCS
3	LOCK WASHER (M9)		10 PCS
4	FLAT WASHER (M8x20)		8 PCS
5	FLAT WASHER (M6x13)		2 PCS
6	ALLEN KEY		1 PC

HARDWARE KIT PACKED IN BOX #2

7	THREADED BOLT (8x70mm)		8 PCS
8	ARC WASHER (2x14x26mm)		8 PCS
9	LOCK WASHER (M9)		20 PCS
10	HEX NUT (M8)		8 PCS
11	WRENCH		1 PC
12	WOOD SCREW (4x35mm)		4 PCS
13	WOOD SCREW (4x25mm)		12 PCS
14	ALLEN BOLT (6x60mm)		12 PCS
15	FLAT WASHER (M6x13)		12 PCS
16	ALLEN KEY		1 PC




BOKA WOOD/UPH CAL KING BED


ASSEMBLY INSTRUCTIONS



STEP 1

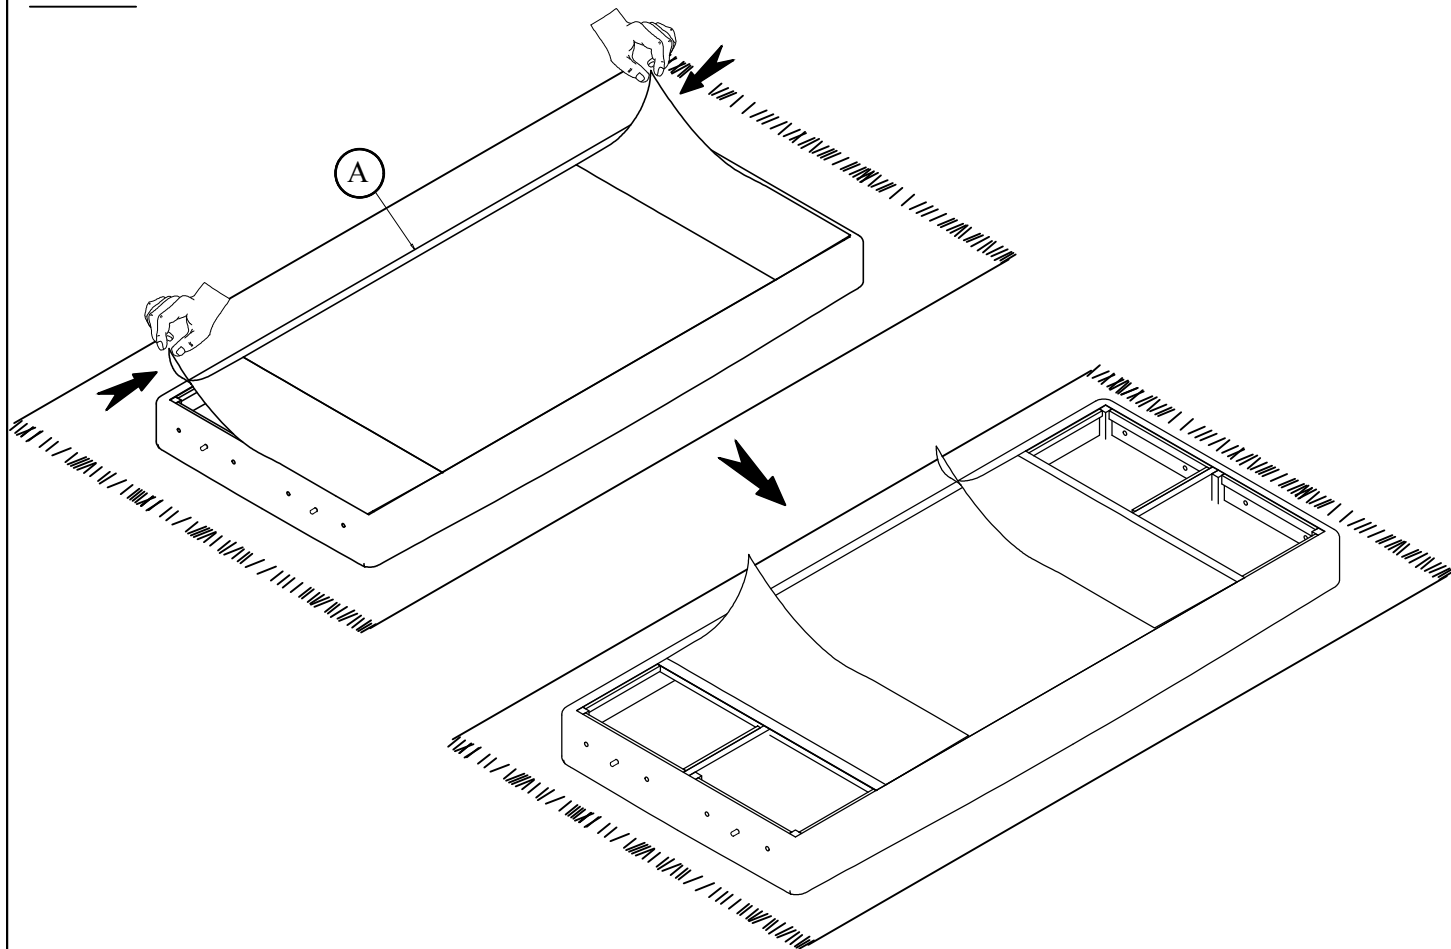


STEP 2

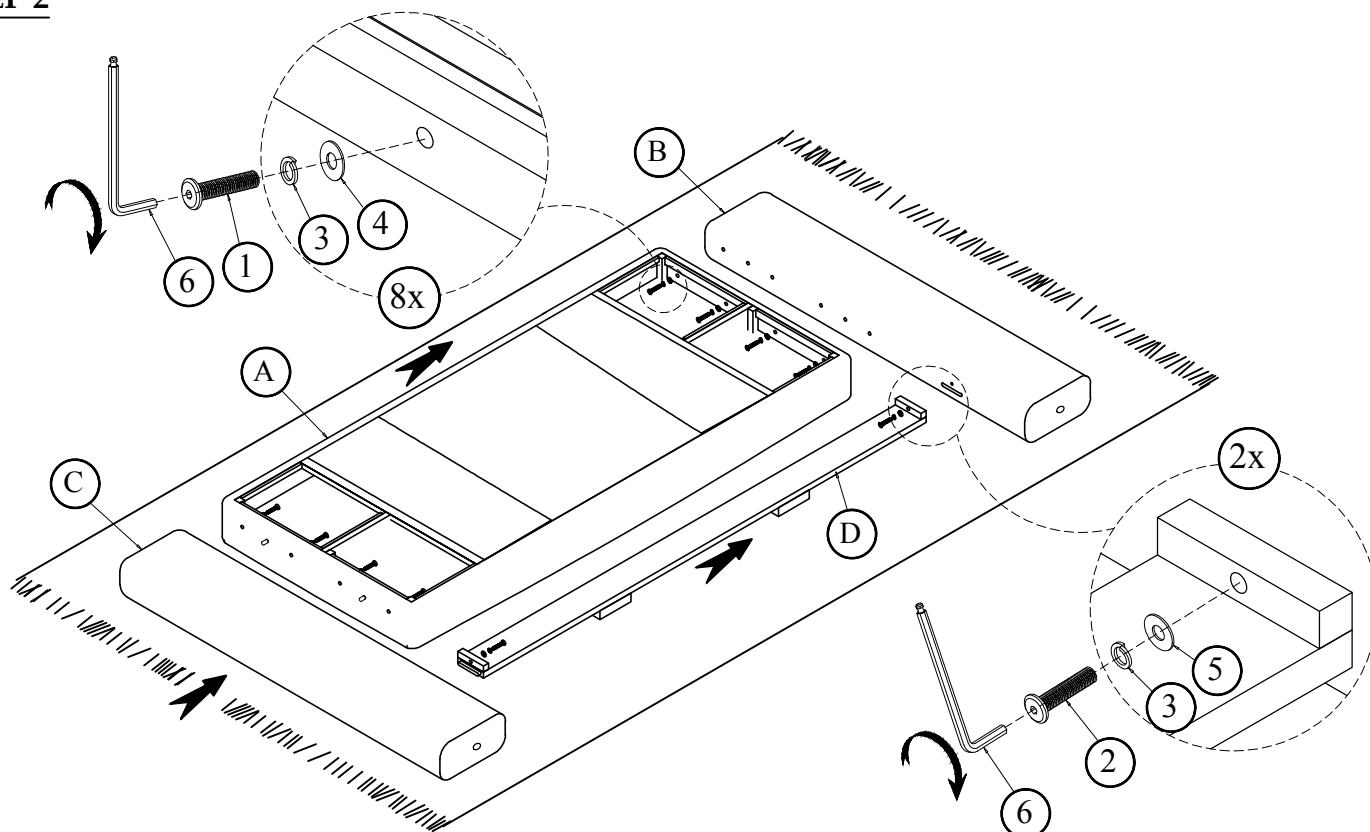


BOKA WOOD/UPH CAL KING BED

ASSEMBLY INSTRUCTIONS


STEP 3

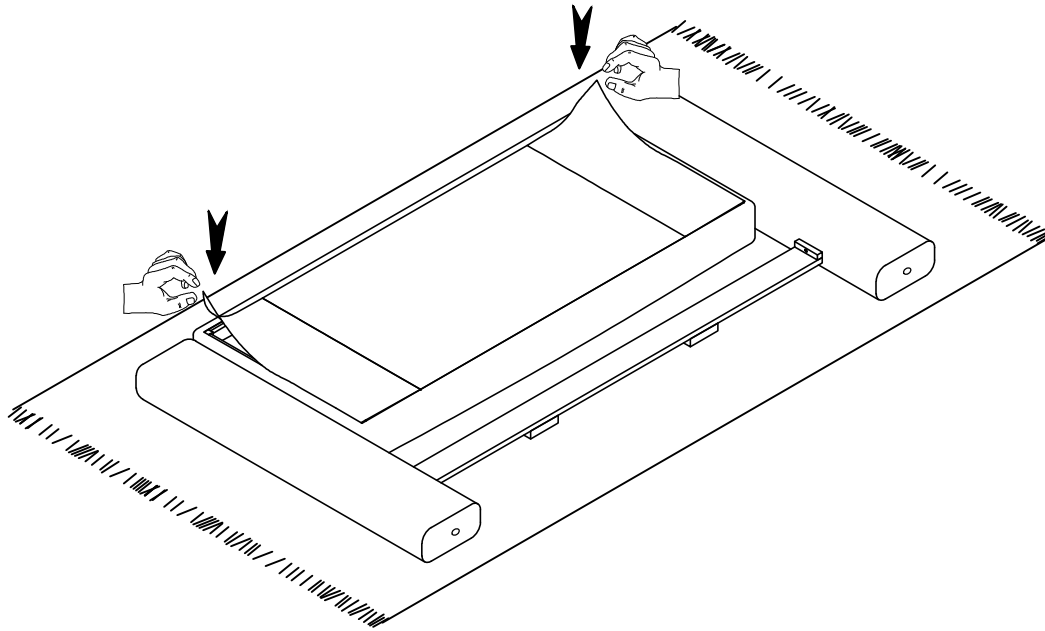

STEP 4

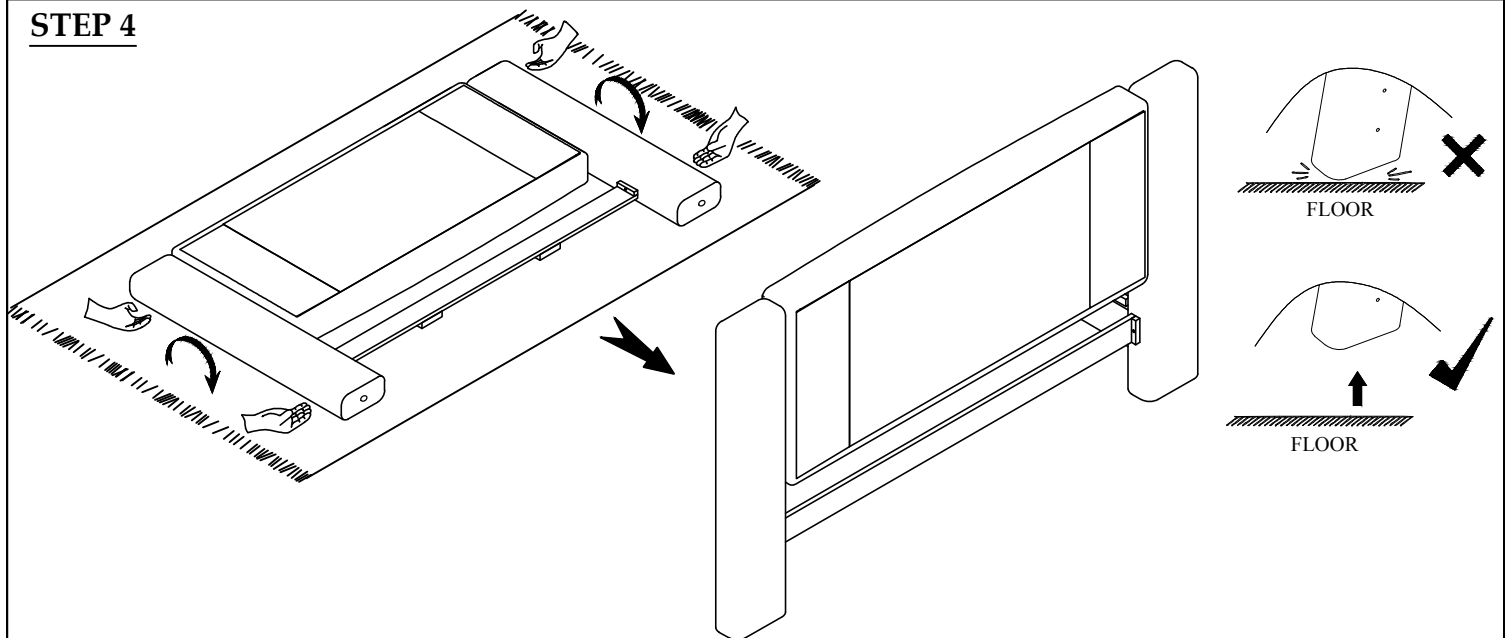

STEP 5

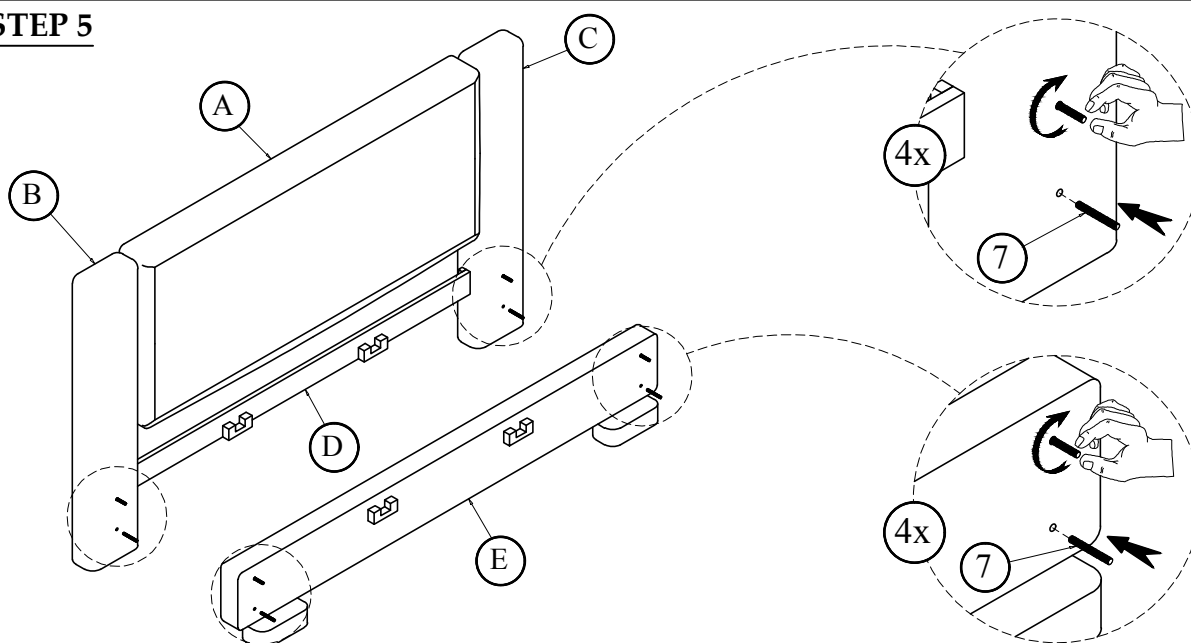


BOKA WOOD/UPH CAL KING BED


ASSEMBLY INSTRUCTIONS



STEP 6

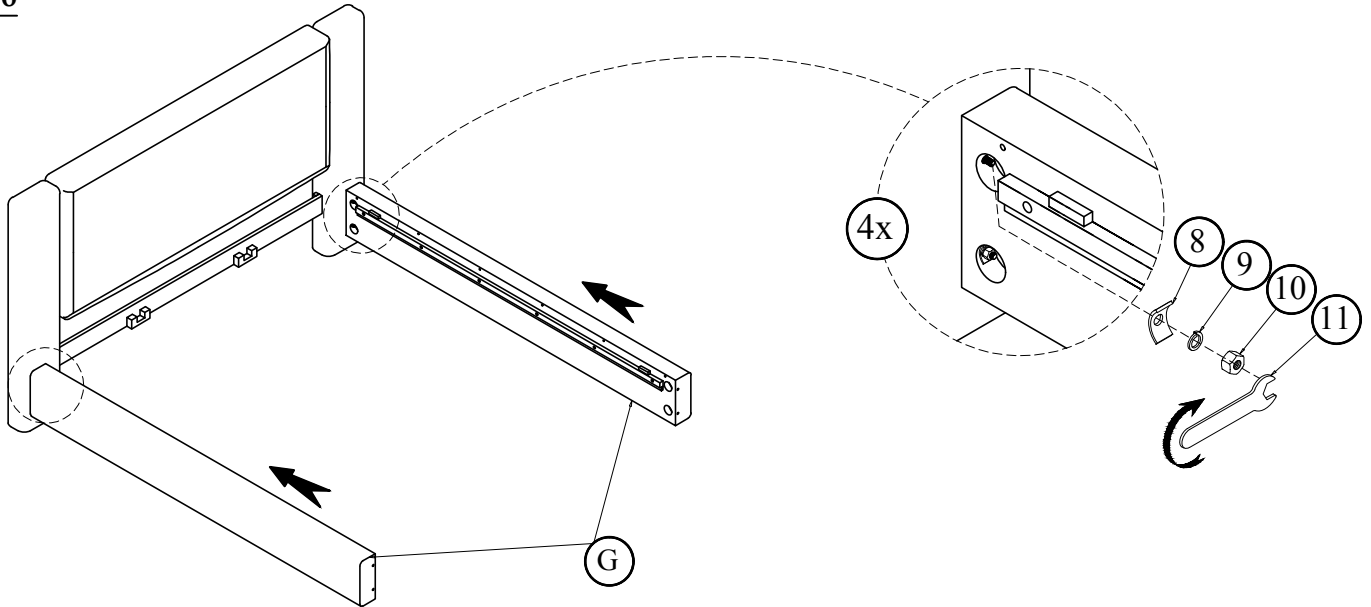


STEP 7

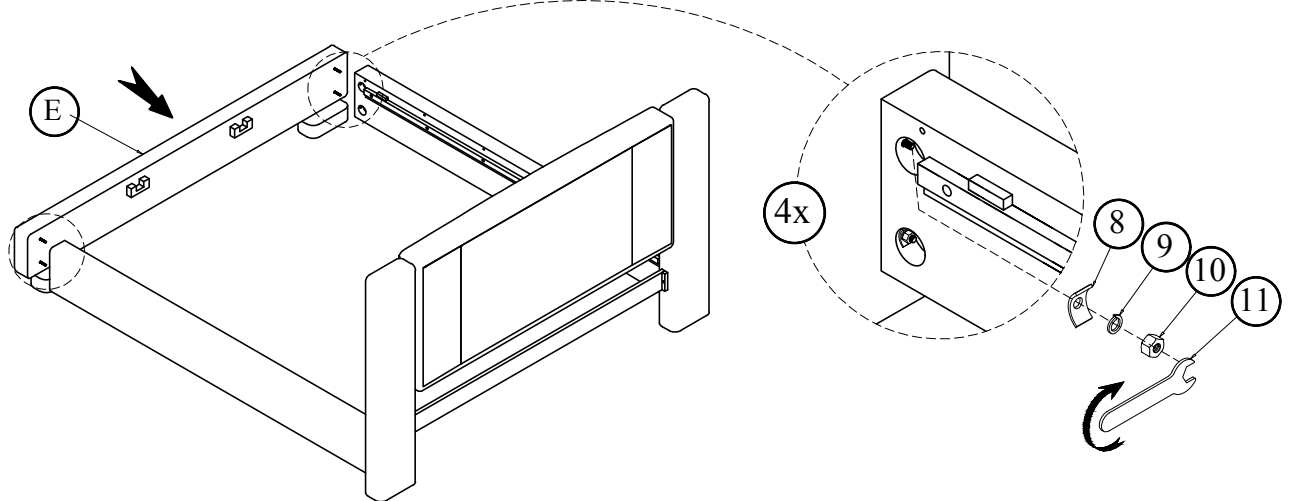

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 8, 9, 10, 11 & 12 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 8

STEP 8

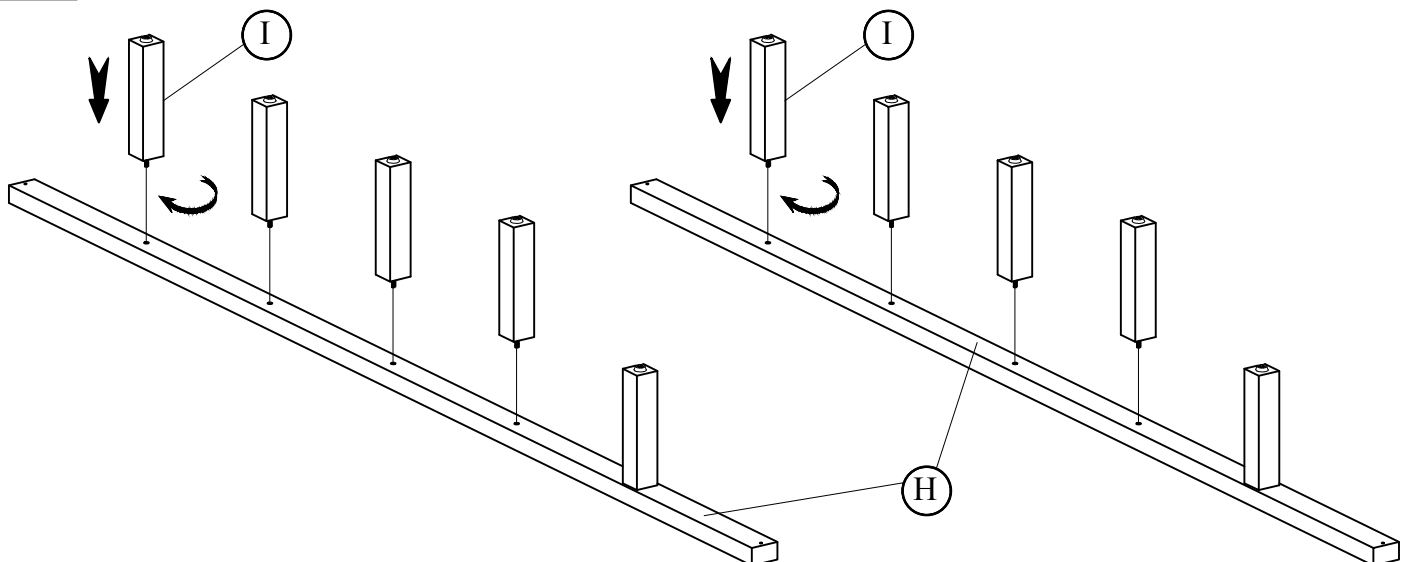


BOKA WOOD/UPH CAL KING BED


ASSEMBLY INSTRUCTIONS



STEP 9

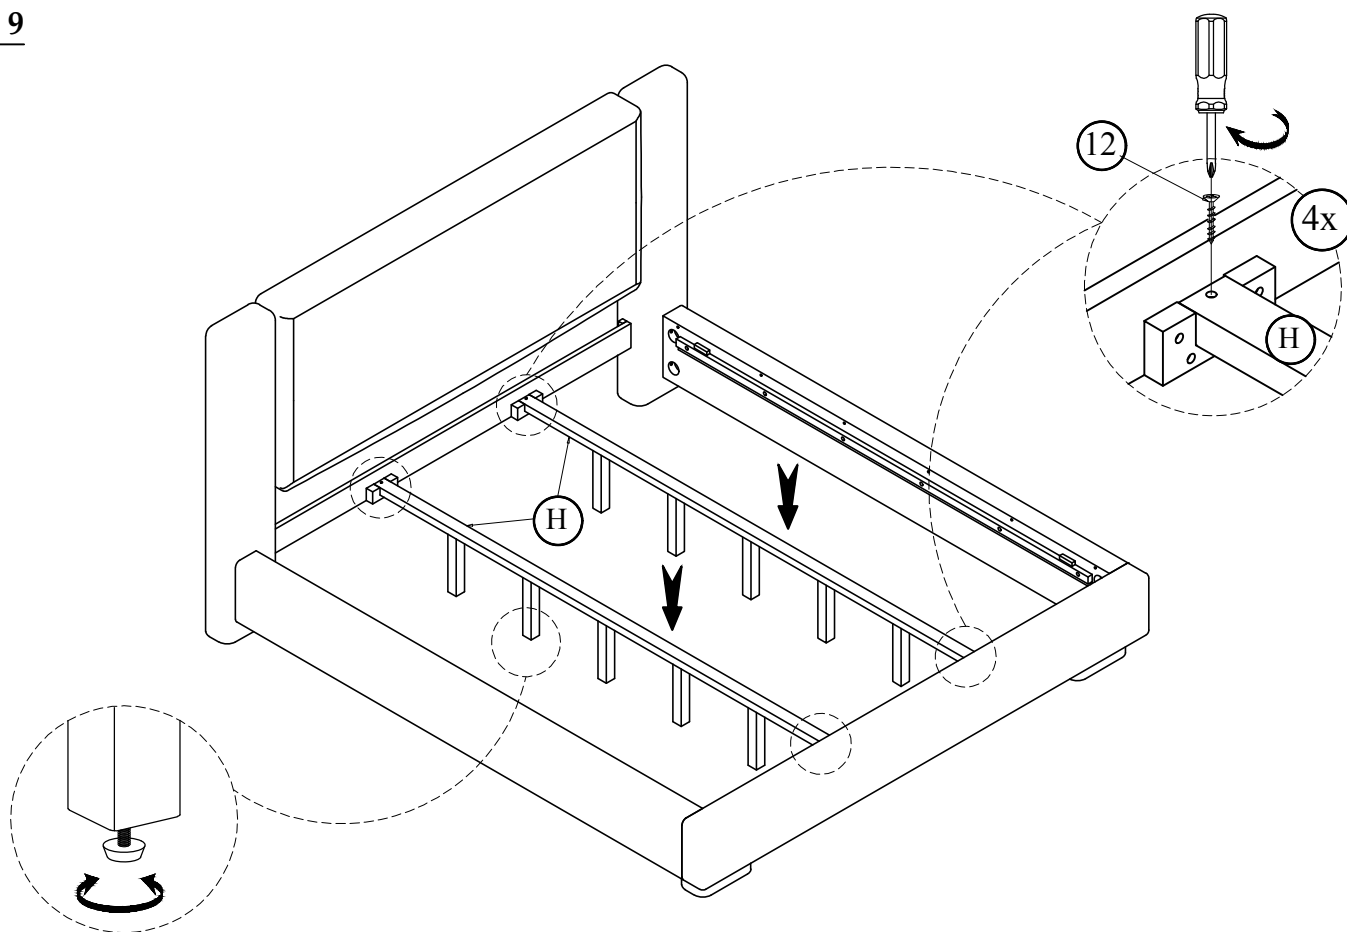

STEP 10

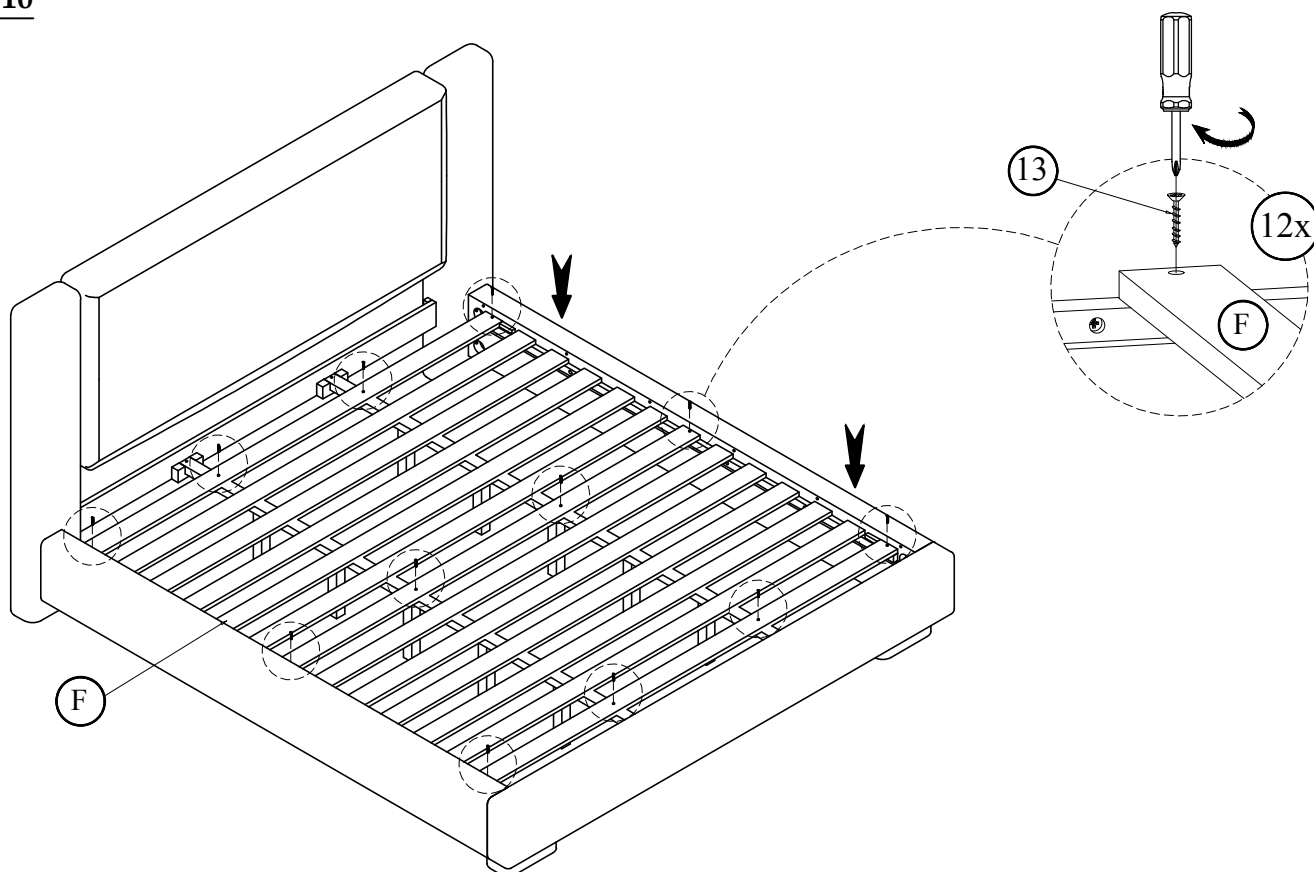


BOKA WOOD/UPH CAL KING BED


ASSEMBLY INSTRUCTIONS



STEP 11

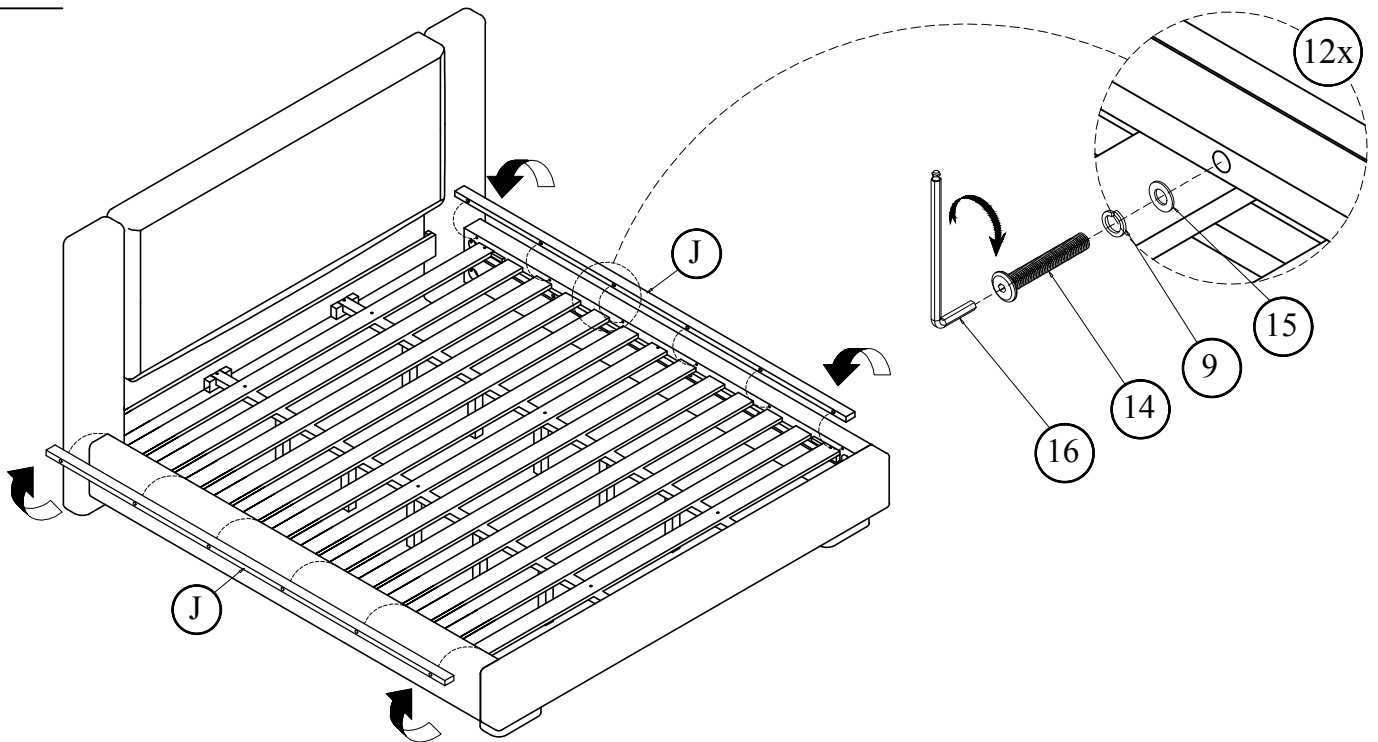

STEP 12

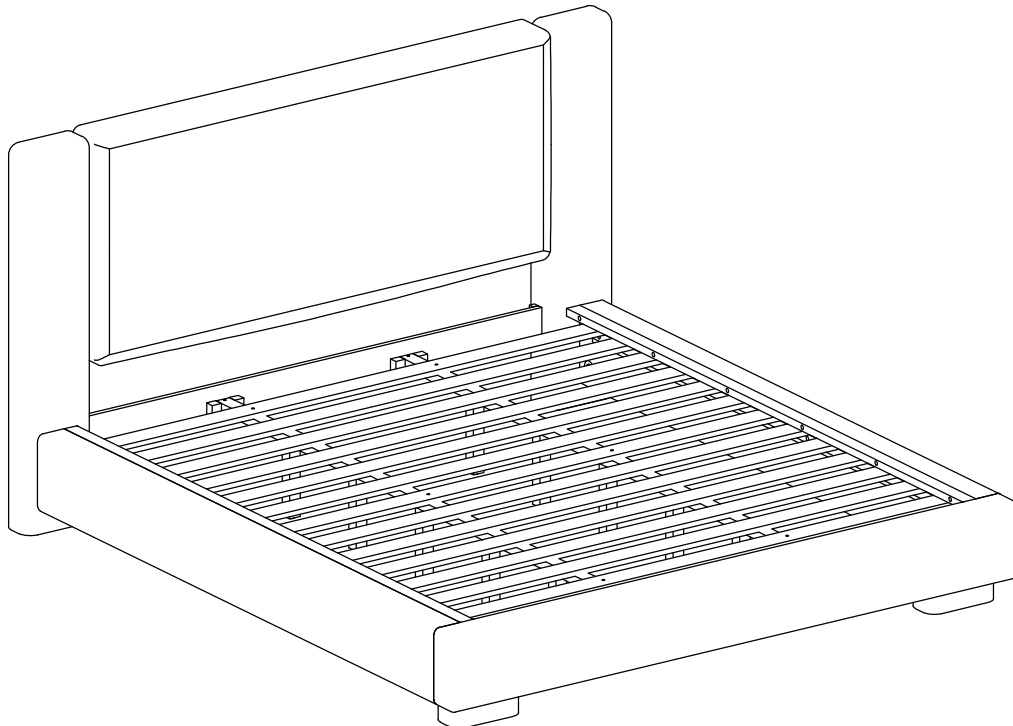

ASSEMBLY COMPLETE


PAGE 6 OF 7

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each leg support (I).

Turn the leveler counter-clockwise to extend and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the center slat.

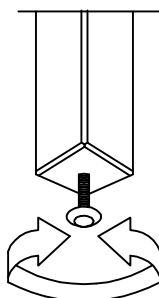

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

BOKA WOOD/UPH CAL KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL	: 1 SET	*WOOD SCREW (4x35mm)	: 4 PCS
H. CENTER SUPPORT	: 2 PCS	*WOOD SCREW (4x25mm)	: 12 PCS
I. SUPPORT LEG	: 10 PCS	*ALLEN BOLT (6x60mm)	: 12 PCS
J. MATTRESS SPACER	: 2 PCS	*LOCK WASHER (M9)	: 12 PCS
		*FLAT WASHER (M6)	: 12 PCS

STEP #1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

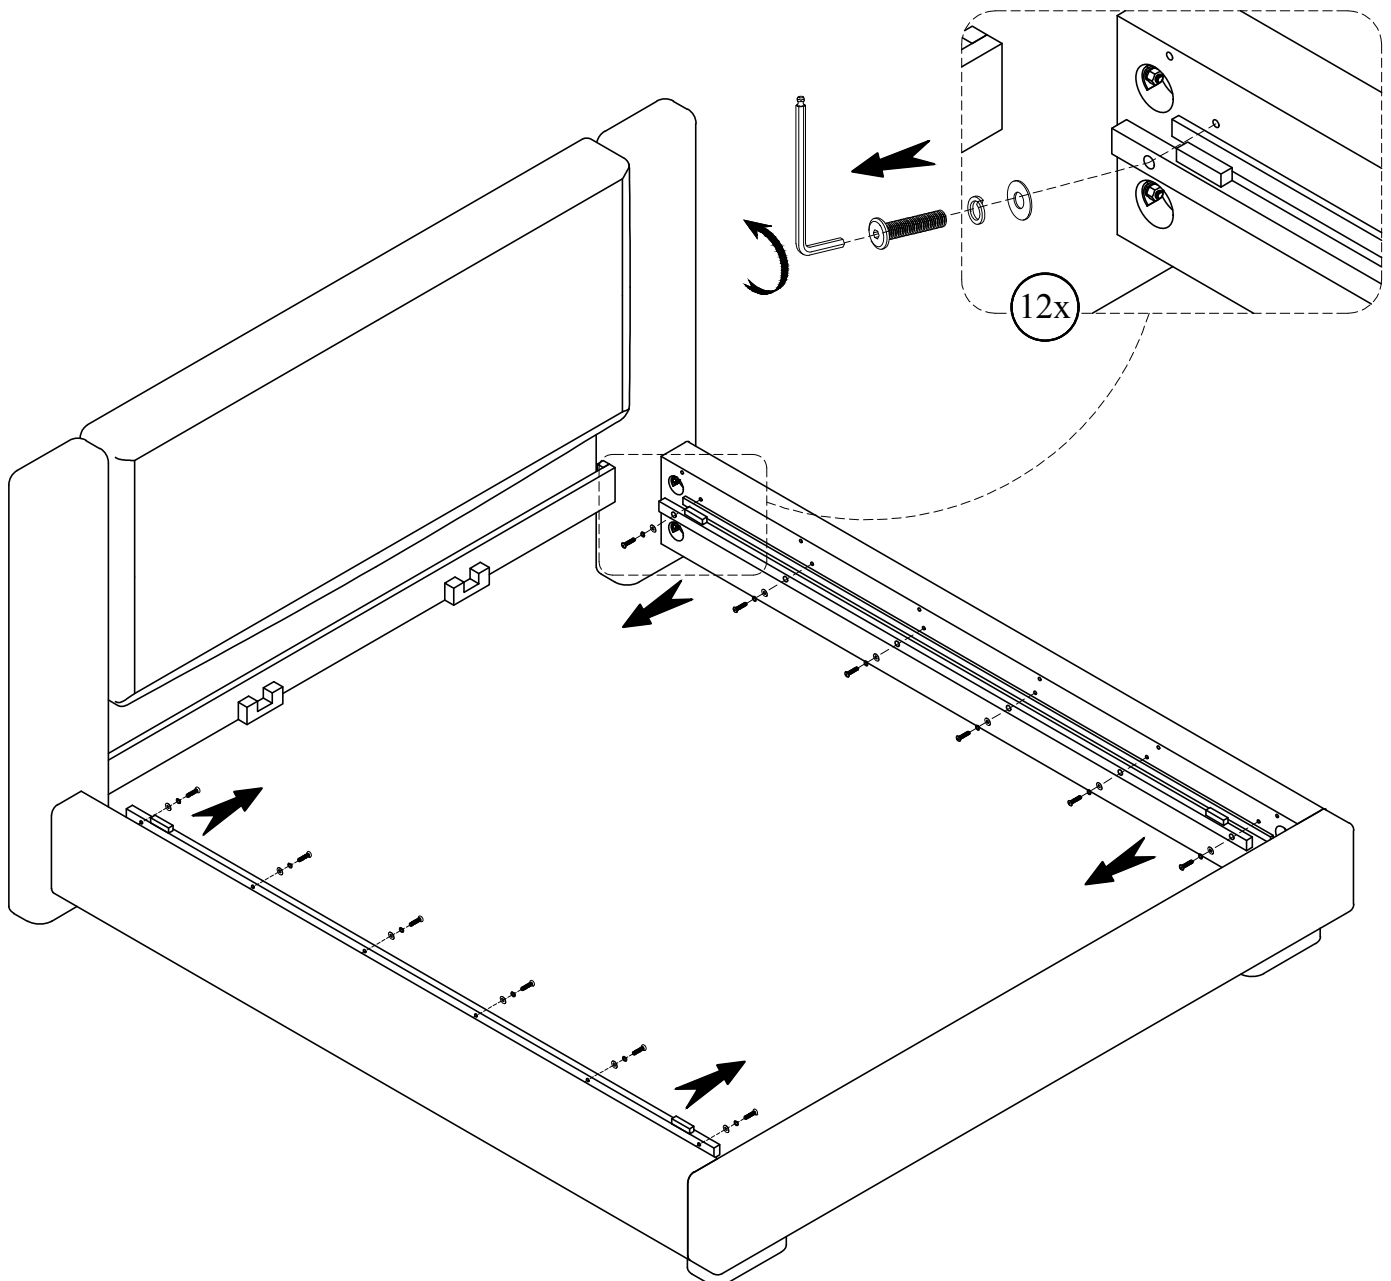

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

BOKA WOOD/UPH KING BED


ASSEMBLY INSTRUCTIONS



PARTS AND FITTING PACKAGING DETAIL


BOX #1

- A. HEADBOARD 1 PC
- B. LEFT LEG 1 PC
- C. RIGHT LEG 1 PC
- D. STRETCHER 1 PC

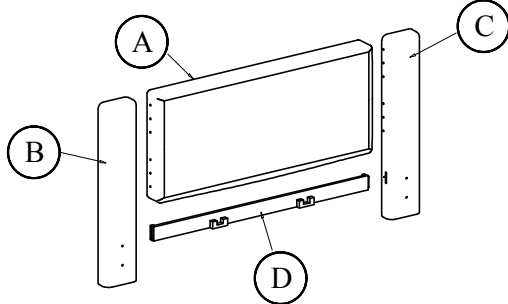


BOX #2

- E. FOOTBOARD 1 PC
- F. SLAT ROLL 1 SET

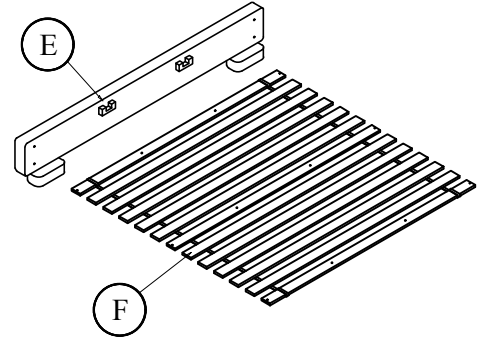


BOX #3

- G. SIDE RAILS 2 PCS
- H. CENTER SUPPORT 2 PCS
- I. SUPPORT LEG 10 PCS

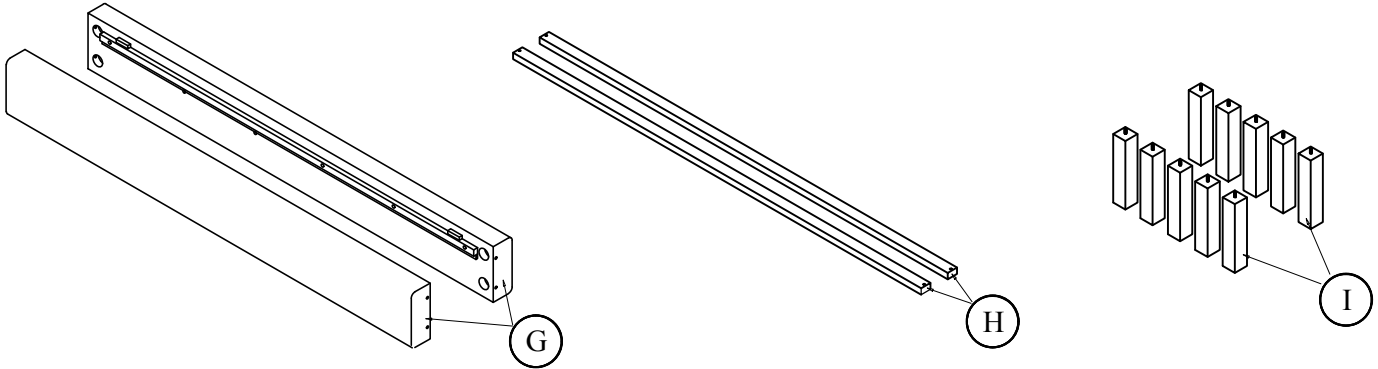

FULLY ASSEMBLED

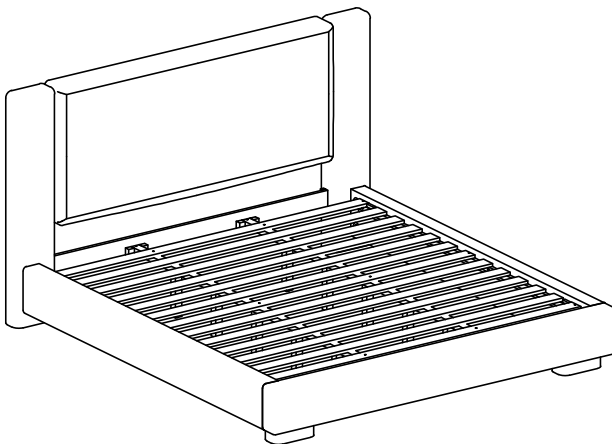


HARDWARE KIT PACKED IN BOX #1

NO.	DESCRIPTION	IMAGE	QTY
1	ALLEN BOLT (8x50mm)		8 PCS
2	ALLEN BOLT (6x40mm)		2 PCS
3	LOCK WASHER (M9)		10 PCS
4	FLAT WASHER (M8x20)		8 PCS
5	FLAT WASHER (M6x13)		2 PCS
6	ALLEN KEY		1 PC

HARDWARE KIT PACKED IN BOX #2


7	THREADED BOLT (8x70mm)		8 PCS
8	ARC WASHER (2x14x26mm)		8 PCS
9	LOCK WASHER (M9)		8 PCS
10	HEX NUT (M8)		8 PCS
11	WRENCH		1 PC
12	WOOD SCREW (4x35mm)		4 PCS
13	WOOD SCREW (4x25mm)		12 PCS
14	ALLEN KEY		1 PC




BOKA WOOD/UPH KING BED

ASSEMBLY INSTRUCTIONS

STEP 1

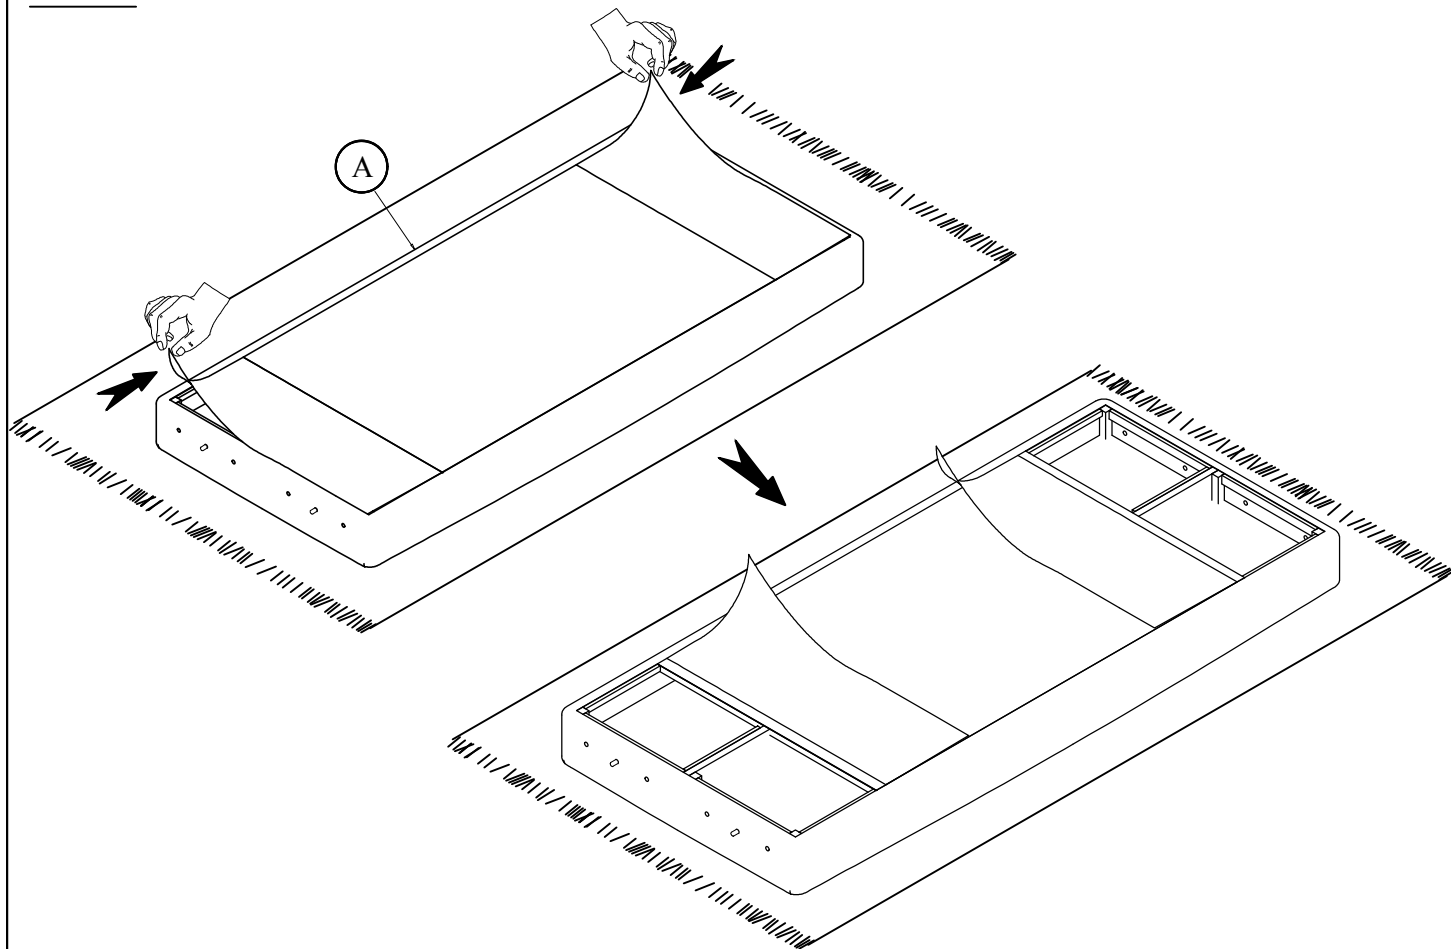


STEP 2

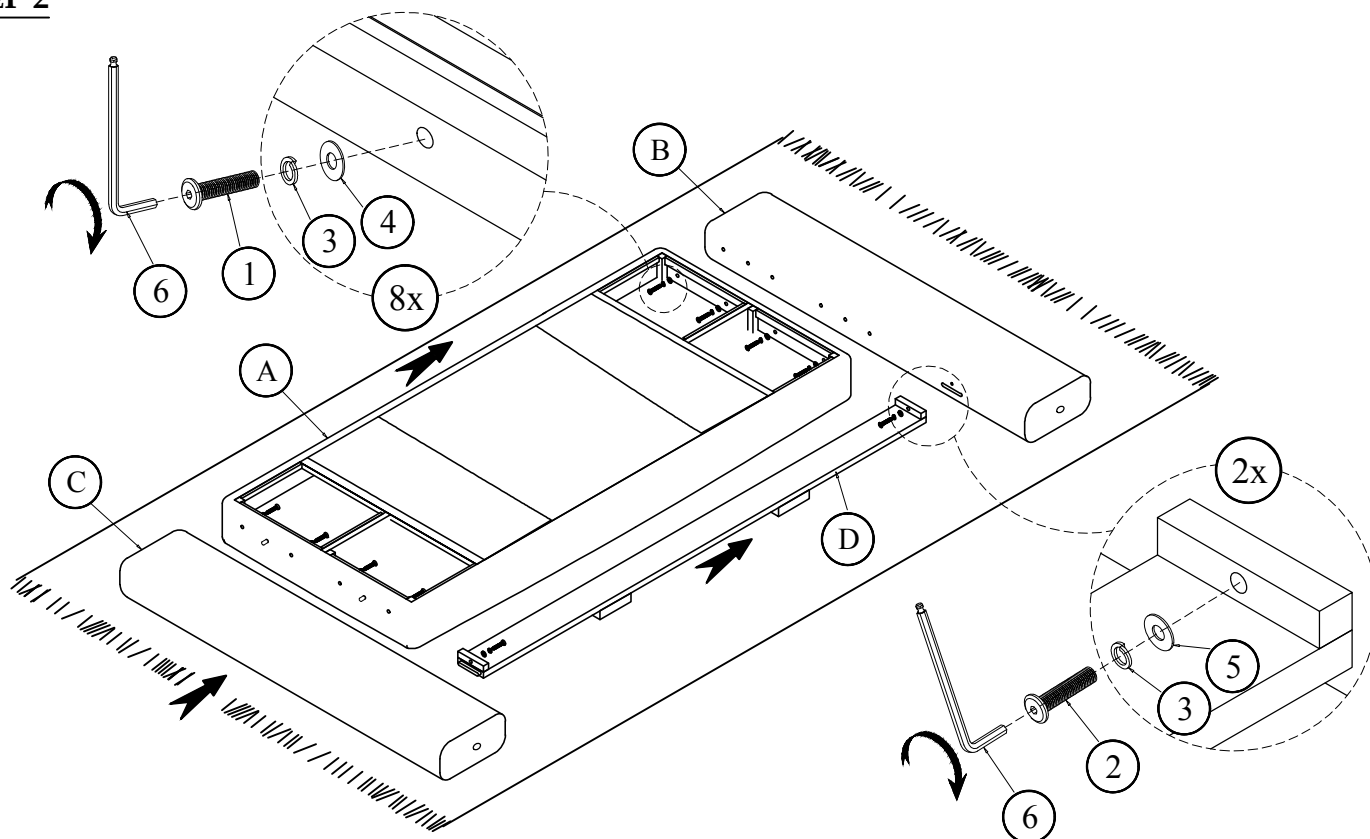


BOKA WOOD/UPH KING BED

ASSEMBLY INSTRUCTIONS


STEP 3

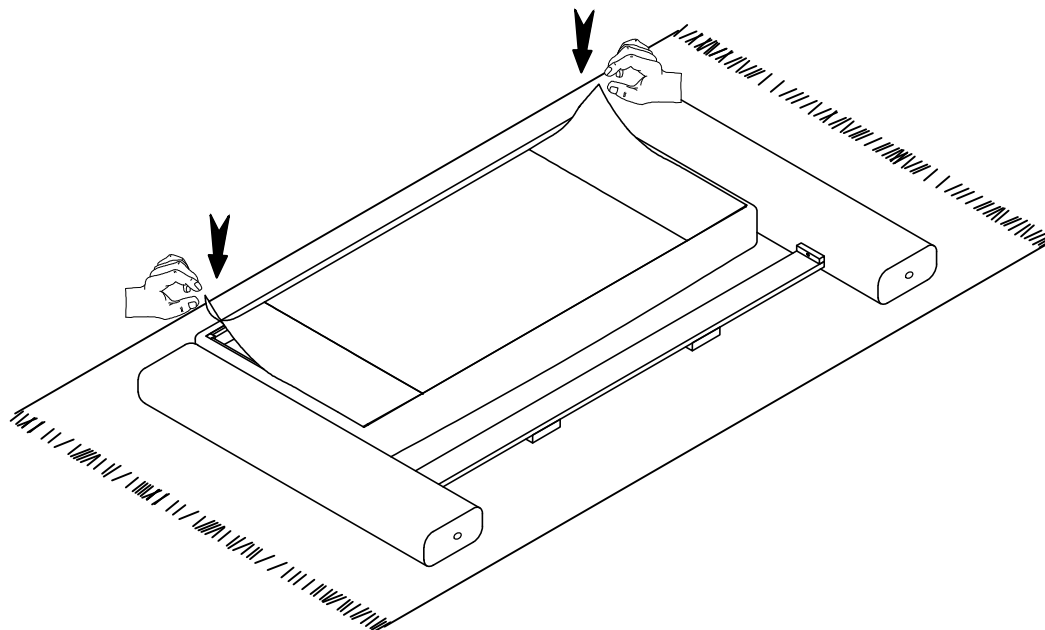

STEP 4

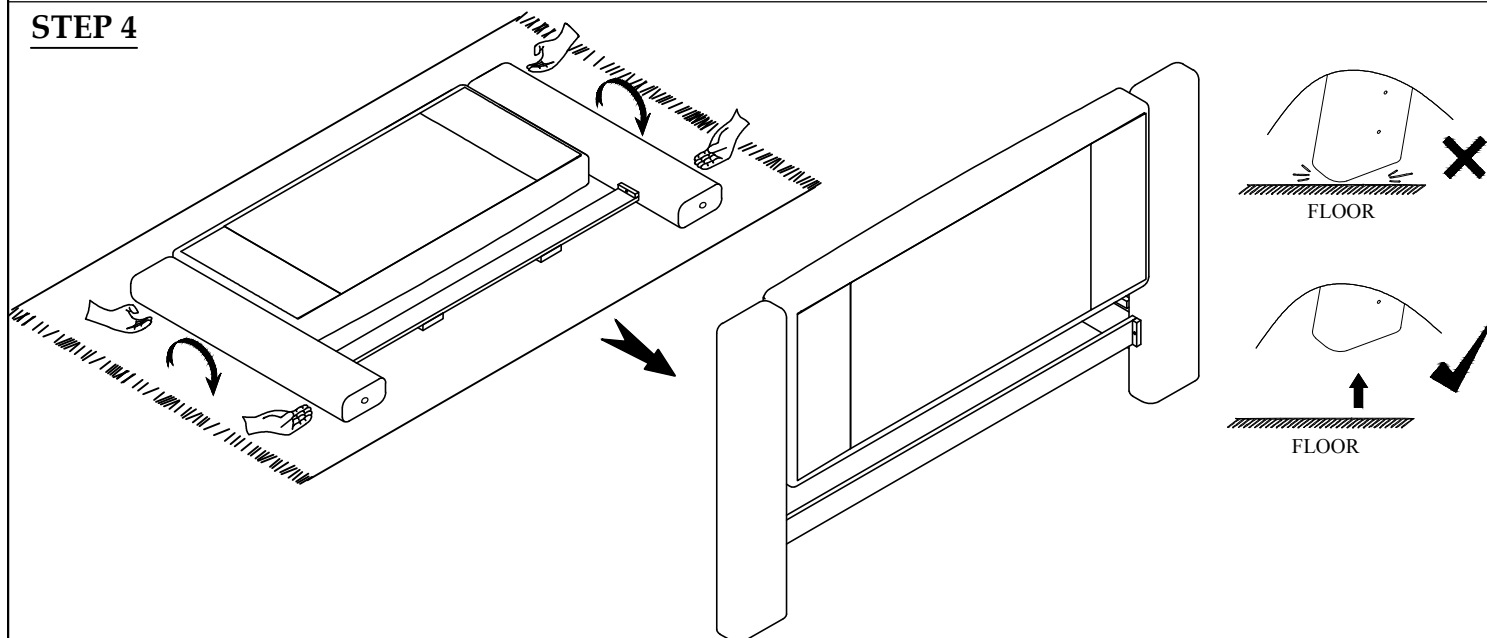

STEP 5

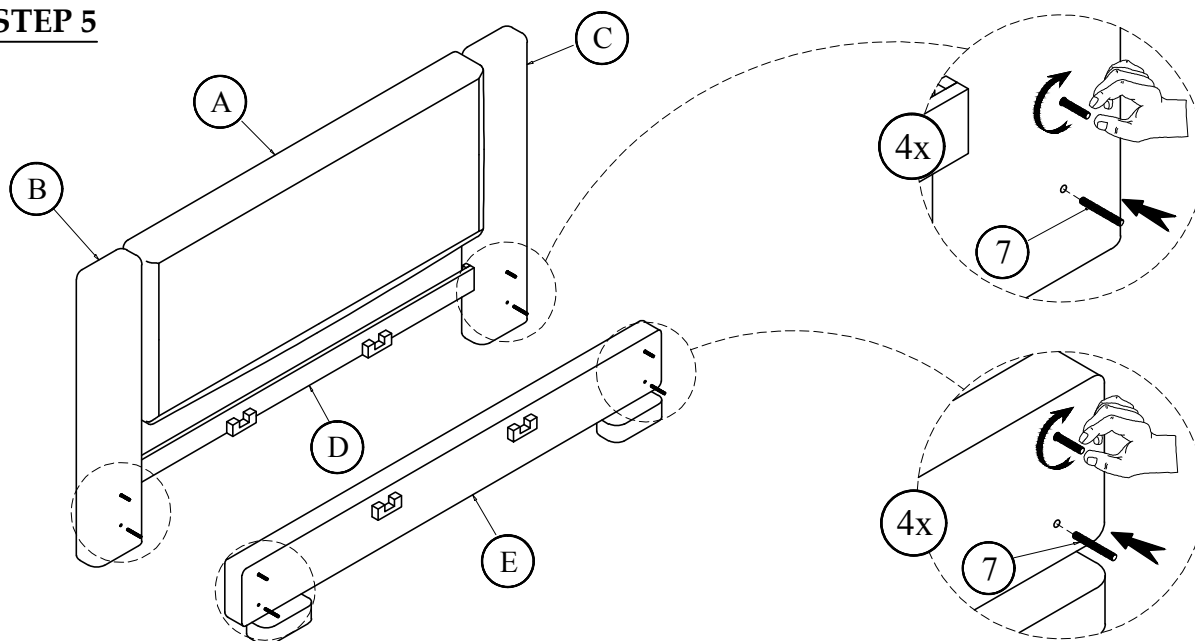


BOKA WOOD/UPH KING BED


ASSEMBLY INSTRUCTIONS



STEP 6

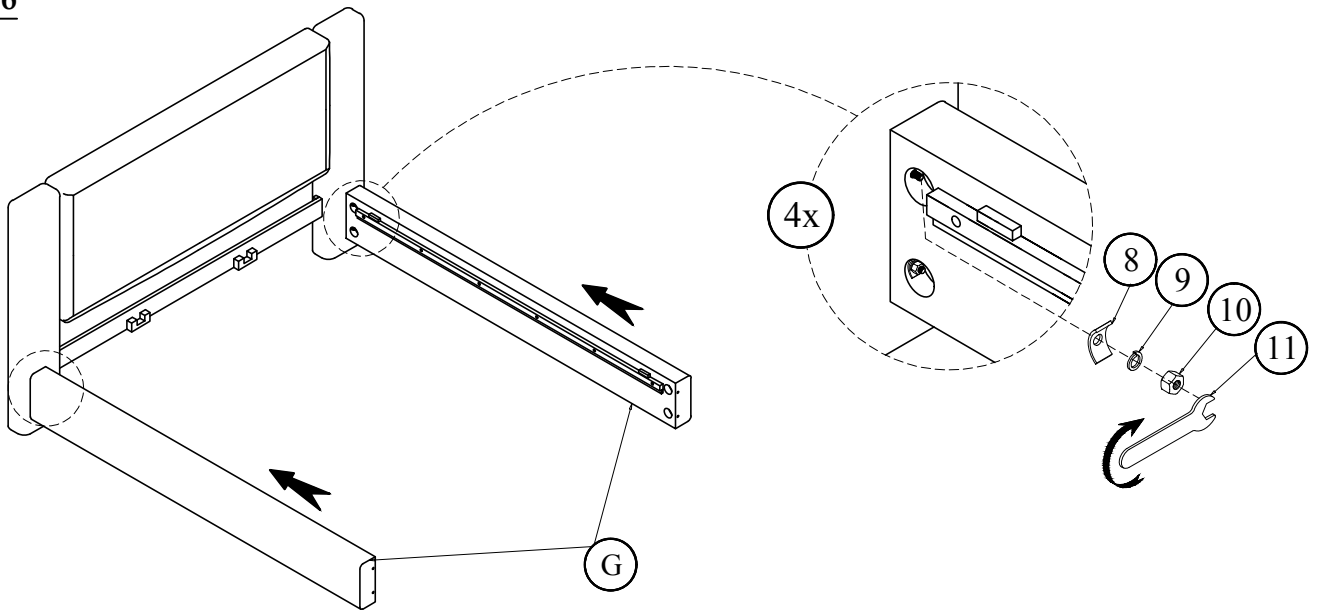


STEP 7

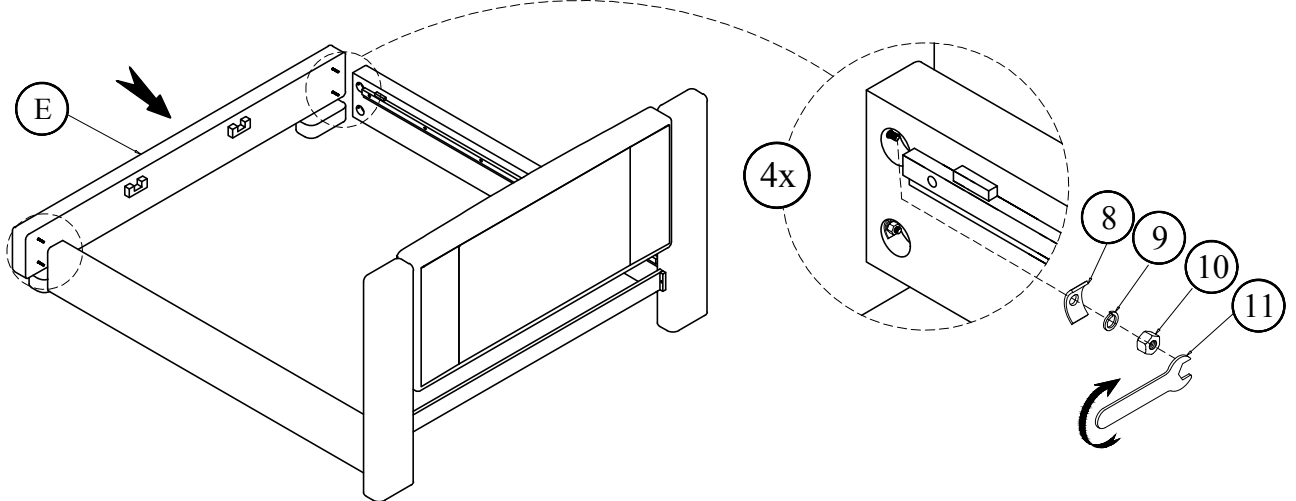

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 8, 9, 10 & 11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 8

STEP 8

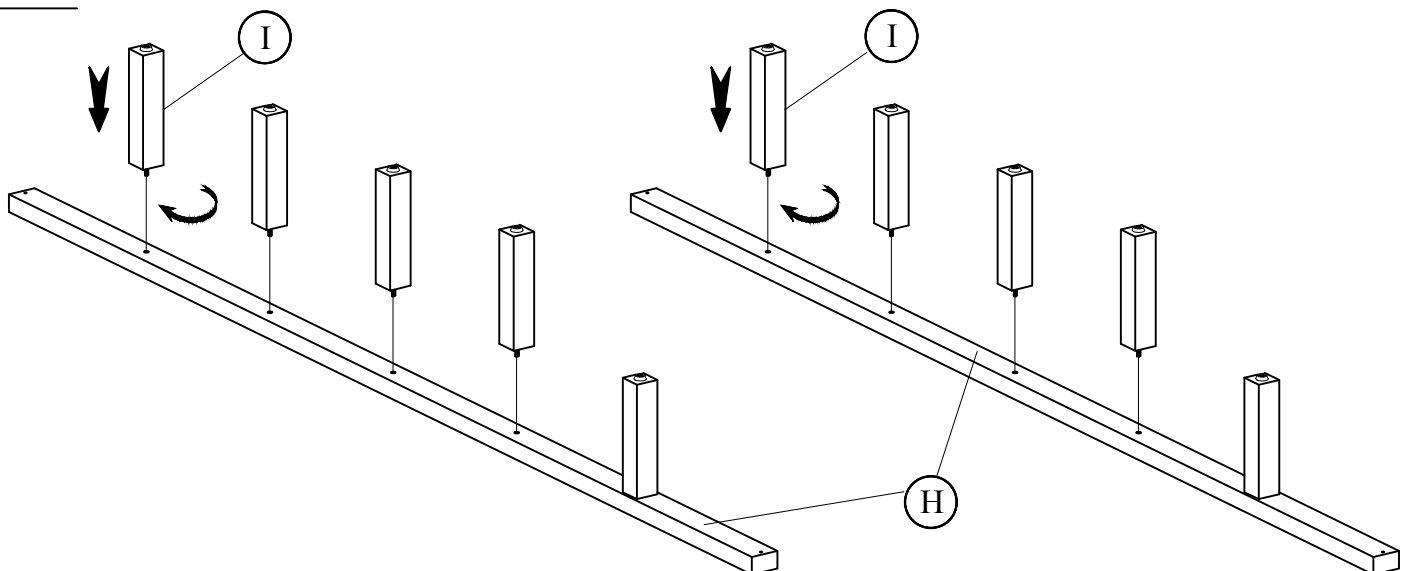


BOKA WOOD/UPH KING BED


ASSEMBLY INSTRUCTIONS




STEP 9

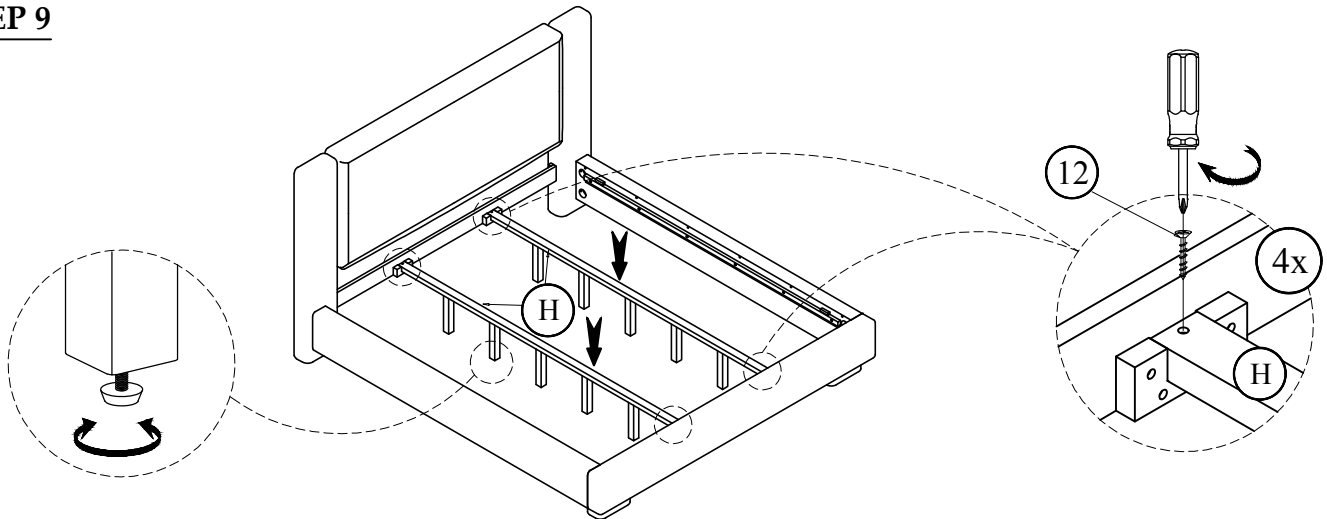

STEP 10

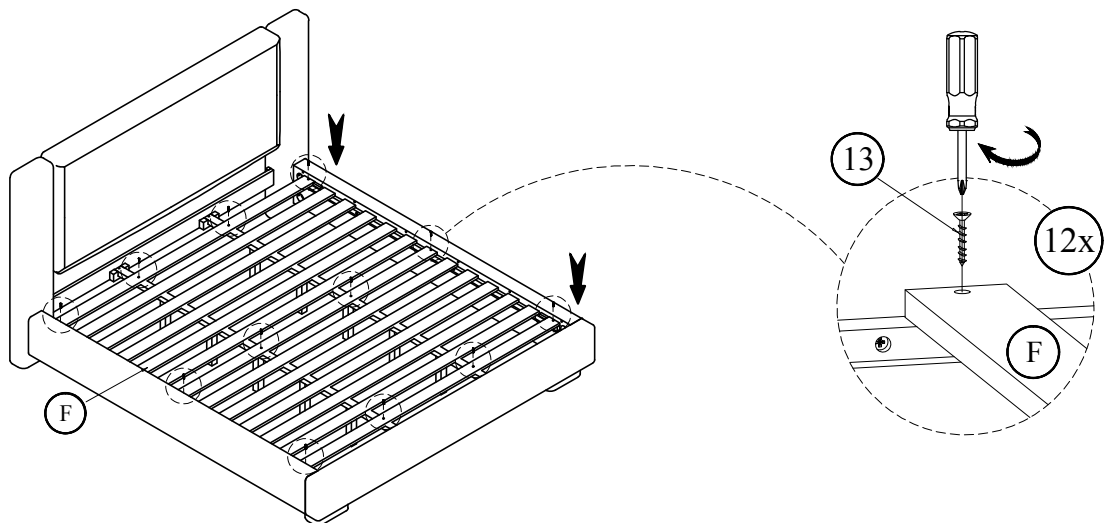

STEP 11

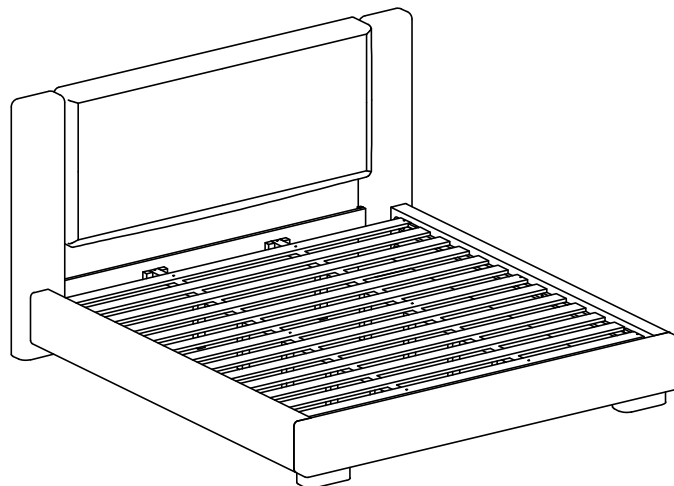

ASSEMBLY COMPLETE


PAGE 5 OF 6

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each leg support (I).

Turn the leveler counter-clockwise to extend and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the center slat.

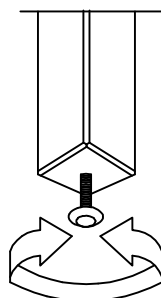

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

BOKA WOOD/UPH KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL	: 1 SET	*WOOD SCREW (4x35mm)	: 4 PCS
H. CENTER SUPPORT	: 2 PCS	*WOOD SCREW (4x25mm)	: 12 PCS
I. SUPPORT LEG	: 10 PCS		

STEP #1:

USE ALLEN KEY (14) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

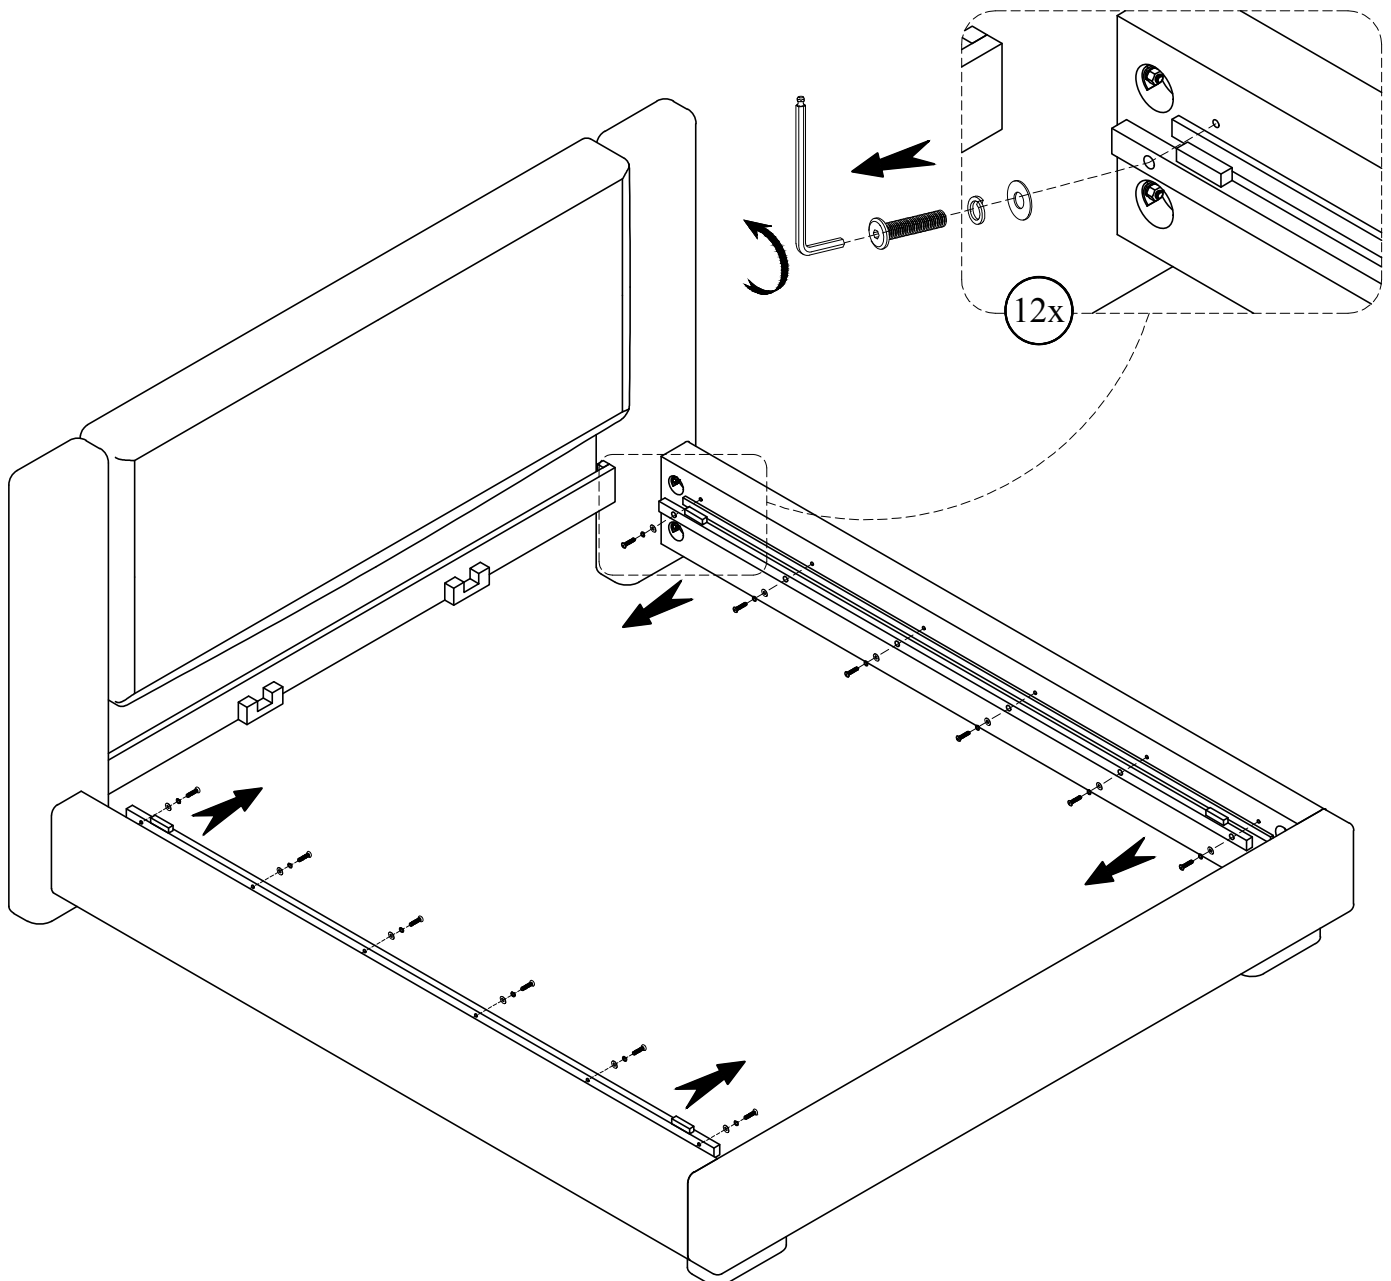

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.