


TANE ALARM PRODUCTS



Installation instructions for RB-32 3/4" Dia. True "Roller Ball" Reed Contact

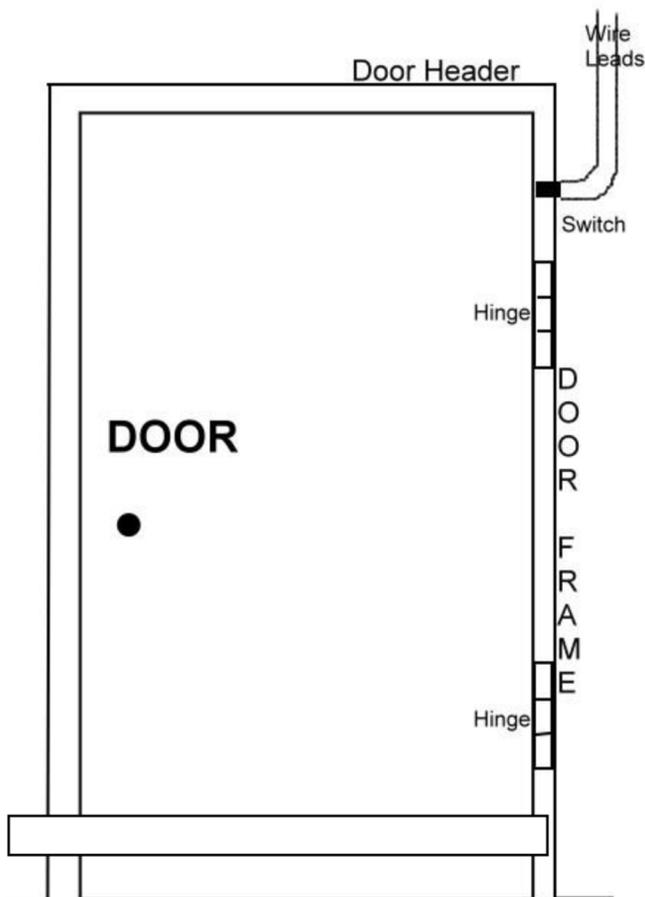

Drill 3/4" hole ON HINGE SIDE of window or door frame to mount switch*

Splice wire leads from switch into alarm circuit

*Closing door or window compresses Roller Ball into contact shell - closing loop and deactivating alarm - When door or window is opened the Roller Ball extends from shell - opening loop and activating alarm

WWW.TANEALARM.COM

906 Jericho Turnpike
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050
Fax: 516-326-9125 Email: info@tanealarm.com