american drew
• inspired design •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

924-910

TOOLS REQUIRED:

Allen key (supplied, part # E)
Phillips Head Screwdriver (Not supplied)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.


INSTRUCTIONS:

1. Lay the top on a clean and padded surface to prevent scratches,Attach the 4 long legs, using Bolt (A), Lock washers (C) and Flat washers (D).Tighten with Allen key (E)(See Figure 1)

2. Attach the frame iron to the 4 long legs,using Bolt (A), Lock washers (C) and Flat washers (D).Tighten with Allen key (E) (See Figure 2)

3. Attach the 4 shorts legs to the frame iron,using Bolt (A), Lock washers (C) and Flat washers (D).Tighten with Allen key (E)(See Figure 3)

4. Attach the 4 wheels to the frame floor,using Wood screw (B), Lock washers (C) and Flat washers (D).(See Figure 4)

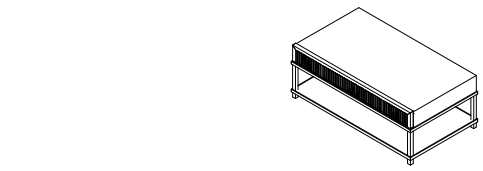

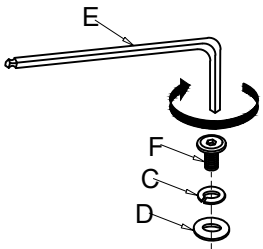


Figure 2

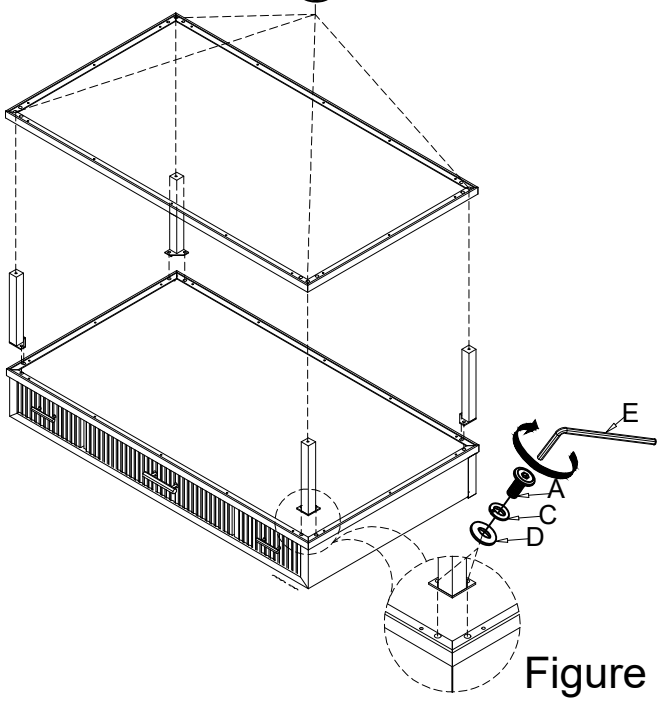


Figure 1

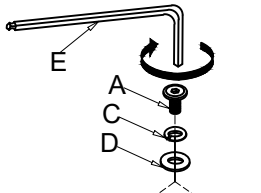


Figure 3


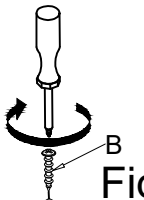


Figure 4

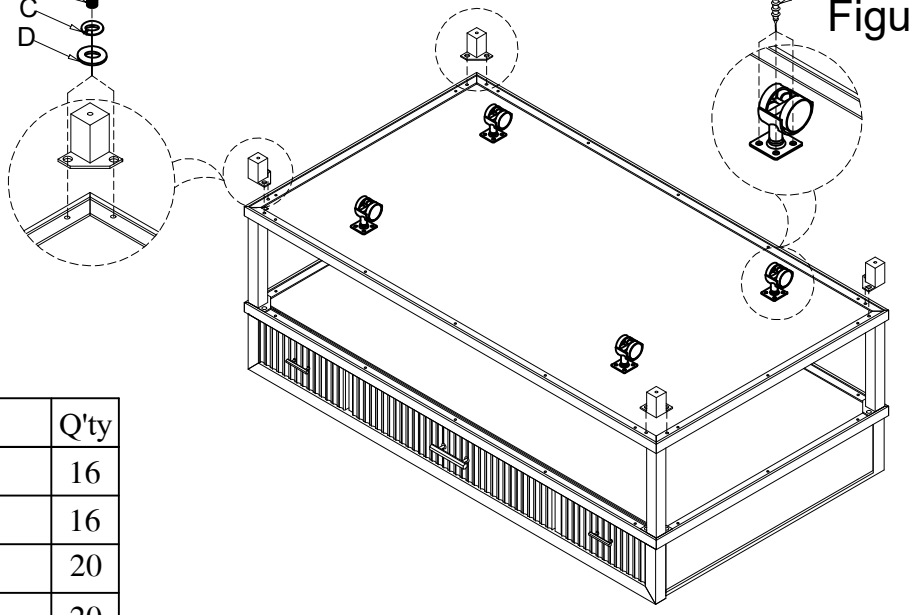

No.		Hardware List	Q'ty
A		Bolt Ø1/4" x 1/2"	16
B		Wood screw **Ø7xL5/8"**	16
C		Lock Washer Ø1/4"	20
D		Flat Washer Ø1/4"	20
E		Allen Key 4mm	1
F		Bolt Ø1/4" x 3/4"	4

Thank you for purchasing furniture from american drew!