
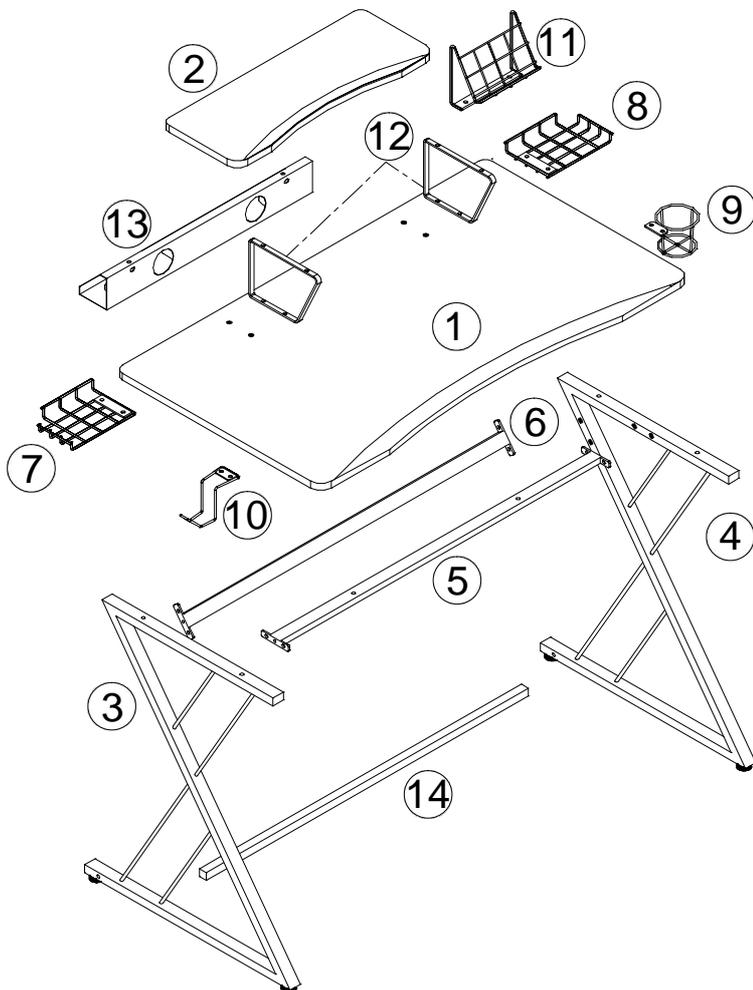


Assembly Instructions


ESS-1101

Attention: Do not tighten the screws until all of them are in right positions

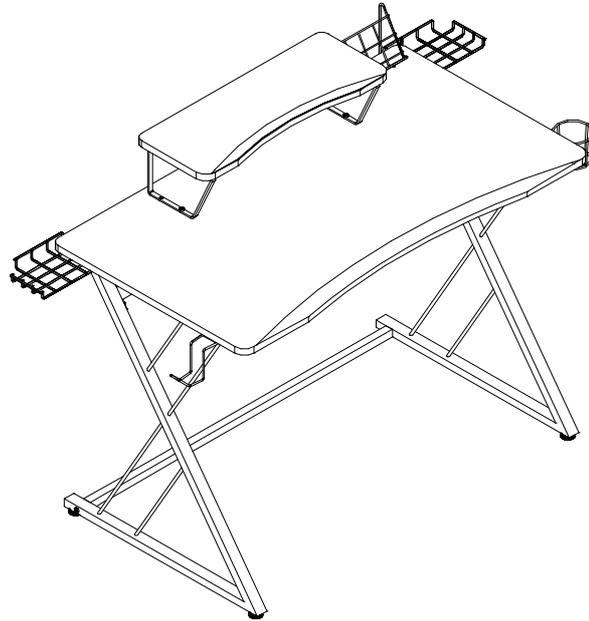


- | | | |
|-------|---|-------|
| A x2 |  | M6X12 |
| B x26 |  | M6X15 |
| C x6 |  | M6X30 |
| D x2 |  | M6X45 |
| E x4 |  | |
| F x1 |  | |

1

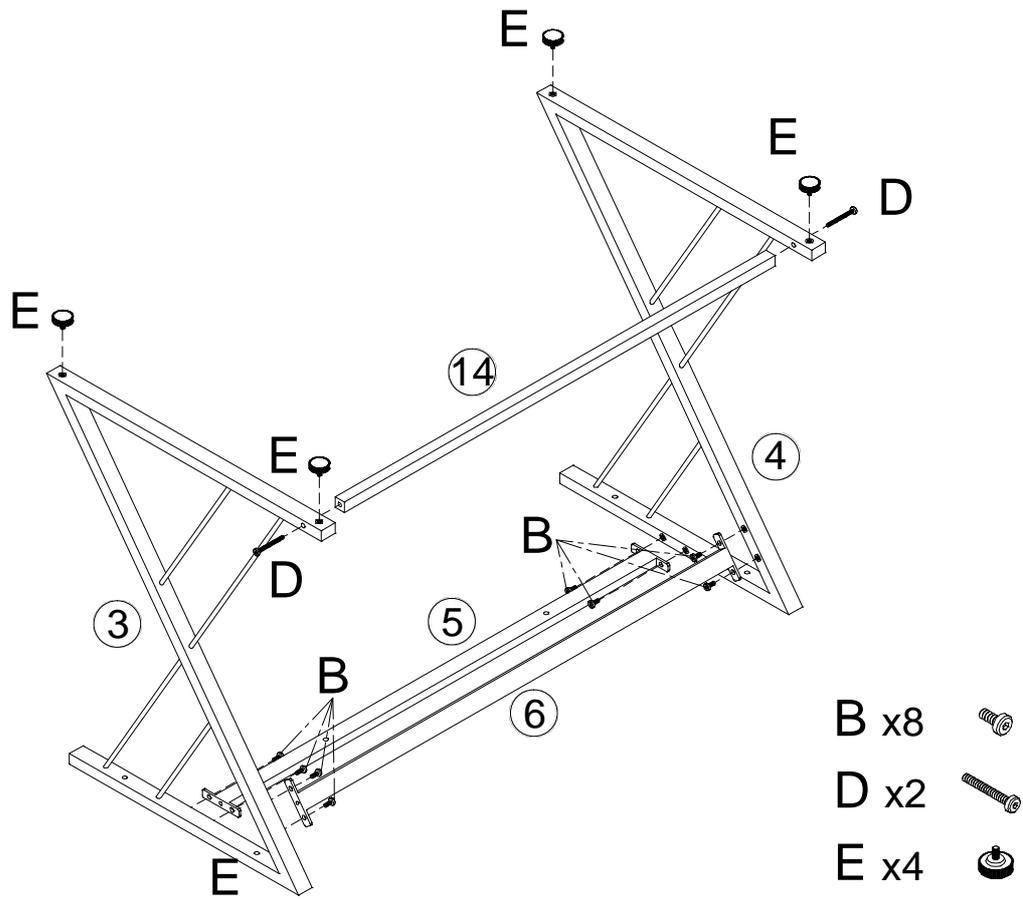


2

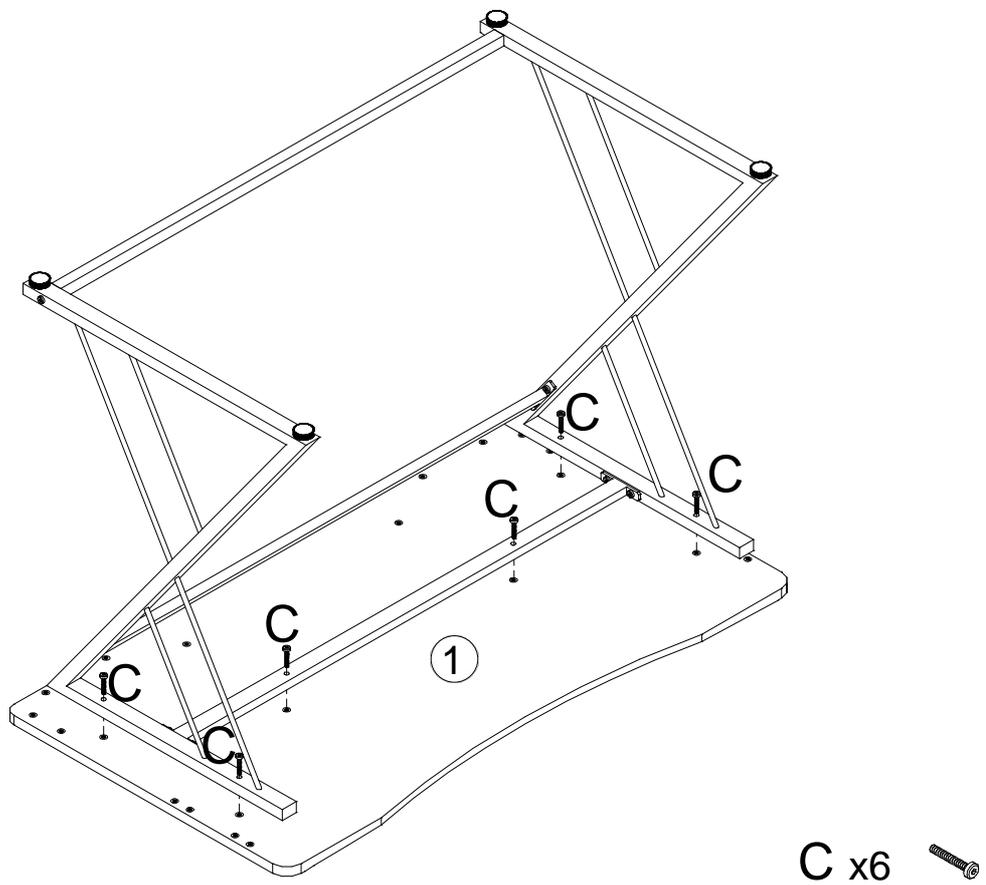


Note: Please keep the iron frame perpendicular to the back of the board

3

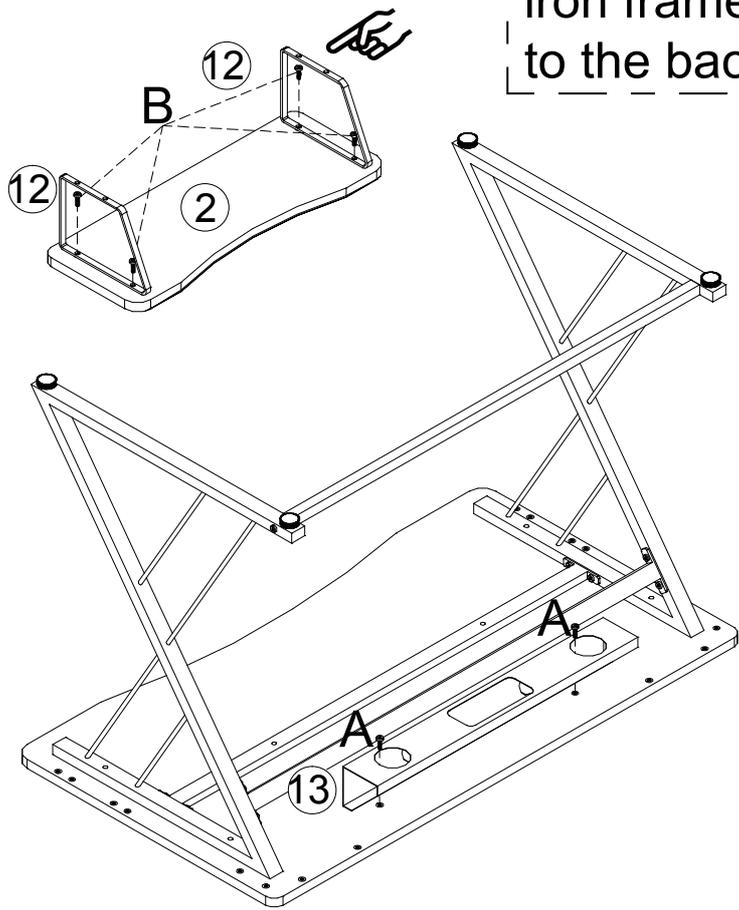

A x2 
B x4 


4

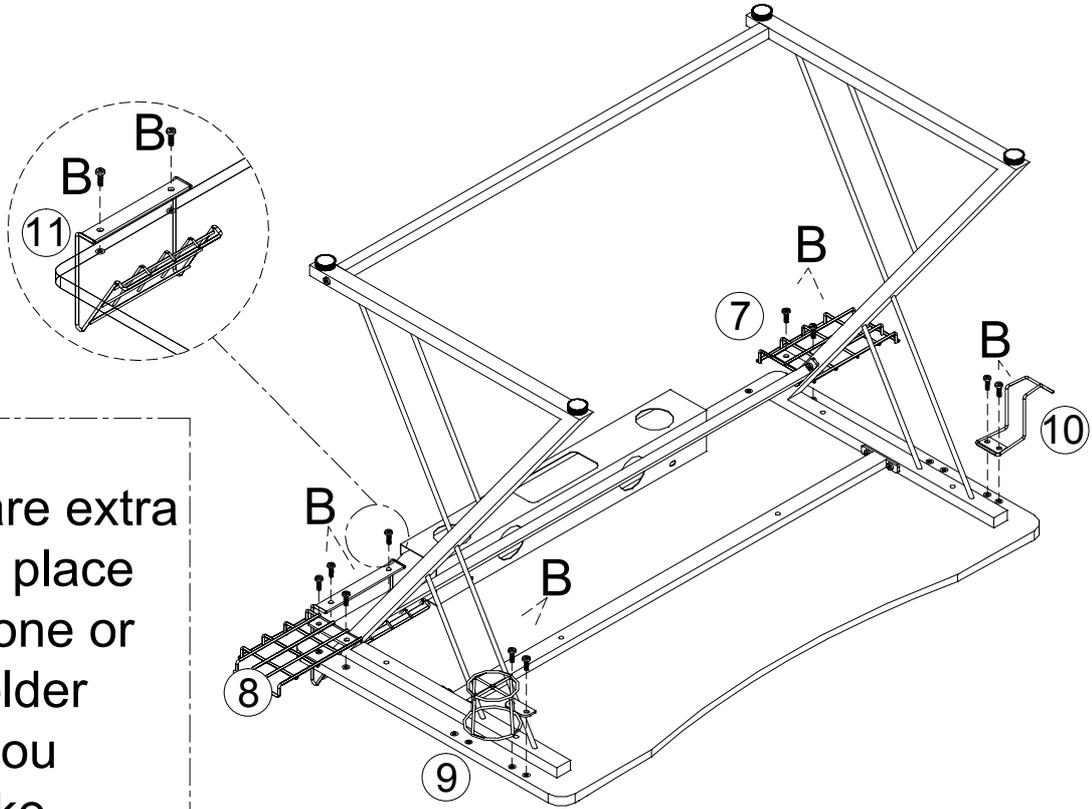

Note:
These are extra holes to place headphone or drink holder where you would like.

B x10 

5

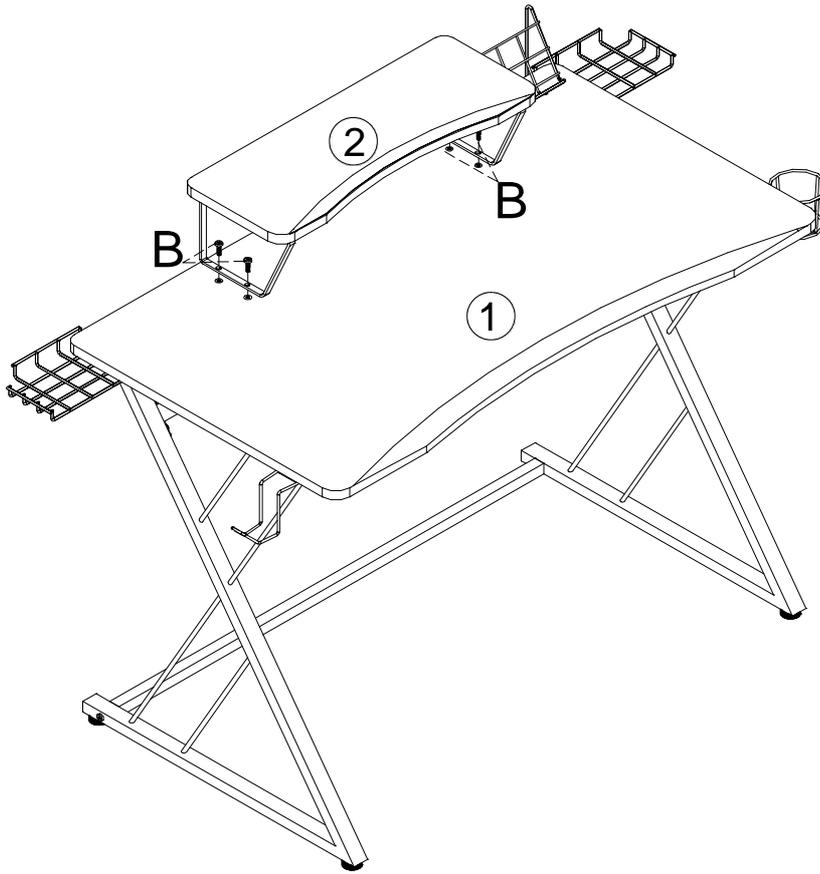

B x4 