



OUTDOOR ROCKING POLY ADIRONDACK CHAIR

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

https://westintrends.com/welcome



OUESTIONS OR COMMENTS?

If you have questions reach out to cs@westintrends.com

FOLLOW, SHARE, & LEARN













PRODUCT REGISTRATION

https://westintrends.com/apps/product-registration



(!) CARE & MAINTENANCE

Do not overtighten screws. (Insert all screws before tightening screws.)


- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.




HARDWARE




PARTS

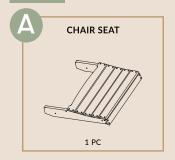


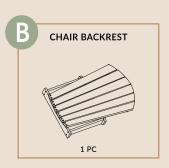






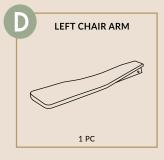

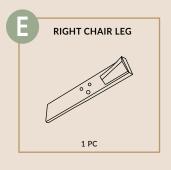



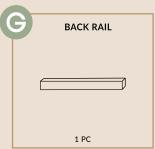






PRODUCT ASSEMBLY - OVERALL VIEW

Look at following overall view of this chair and learn the exact position of each part to be assembled.

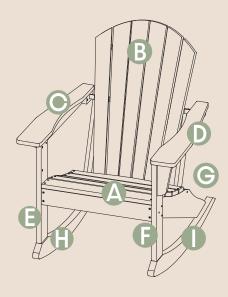


PRODUCT ASSEMBLY



Attach Part E Right Chair Leg to Part A Chair Seat with 3 pcs of Hardware #3 Bolt, Hardware #8 M6 Washer and Hardware #7 M6 Nut.


Do same to attach Part F Left Chair Leg to Part A Chair Seat.

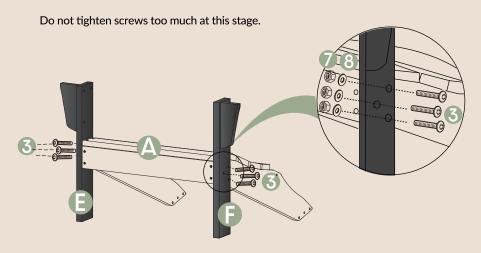

2

Attach Part C Right Chair Arm to Part E Right Chair Leg with 1 pc of Hardware #3 Bolt, Hardware #8 M6 Washer and Hardware #7 M6 Nut.

Do the same to attach Part D Left Chair Arm to Part F Left Chair Leg.

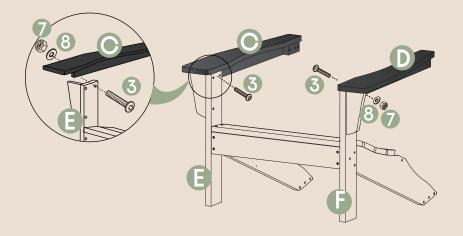




Put Part B Chair Backrest into Part A Chair Seat and attach them with 2 pcs of Hardware #4 Bolt then attach Part B Chair Backrest to Part C Right Chair Arm with 1 pc of Hardware #2 Bolt.

Do the same to attach Part B Backrest to Part D Left Chair Arm.

Attach Part G Back Rail to Part A Chair Seat with 2 pcs of Hardware #5 Bolt.

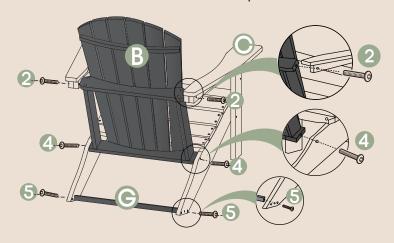




Attach Part H Right Rocking Feet to Part E Right Chair Leg with 2 pcs of Hardware #1 Screw and attach Part H Right Rocking Feet to Part A Chair Seat Rear Leg with 2 pcs of Hardware #6 Screw.

Do the same to attach Part I Left Rocking Feet to Part F Left Chair Leg and Part A Chair Seat Rear Leg.

Check and tighten all the bolts and screws again to finish the assembly.

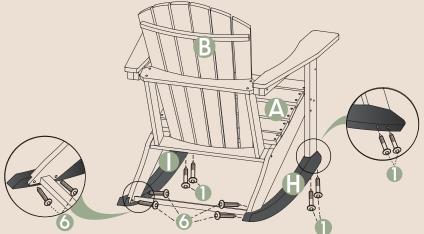

REGISTRATION & REFUND POLICY

https://westintrends.com/apps/product-registration



https://westintrends.com/policies/refund-policy



HAVING TROUBLE

Not sure how to assemble or missing pieces?
Please contact our Customer Service Team for assistance at cs@westintrends.com

Have Order #, Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning - DO NOT exceed 1500 PSI - this will remove any debris and dirt.