



Installation Instructions 4" AND 6"DRAIN GRID

NEWPORT BRASS
Flawless Beauty. From Faucet to Finish.™

Model No: NWP 233-401, 233-402, 233-403, 233-404, 233-405
233-406, 233-407, 233-408,
NWP 233-601, 233-602, 233-603, 233-604, 233-605
233-606, 233-607, 233-608

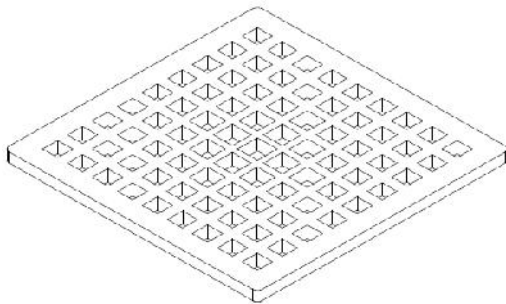

233-401 SHOWN

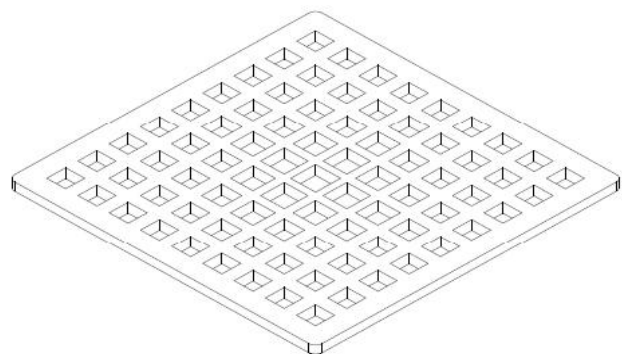

233-601 SHOWN

2001 CARNEGIE AVE, SANTA ANA CA 92705

(949) 417-5207

WWW.NEWPORTBRASS.COM

INSTALLATION INSTRUCTIONS

GRID INSTALLATION

1. After completion of finished flooring, remove plastic MUDGUARD [10] by drilling a hole in the center and pull out. (see figure 1)
2. Place decorative DRAIN GRID onto drain THROAT ASSEMBLY [8] (see figure 2).

GRID REMOVAL

1. Use flat screw driver as a lever to lift grid (see figure 3)

