a m e r i c a n d r e w
• i n s p i r e d d e s i g n •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

924-925

TOOLS REQUIRED:

Allen key (supplied, part # E)

BEFORE YOU START:

Assemble your furniture on a soft, flat surface to avoid scratching the finish.

INSTRUCTIONS:

1.Attach the slanting bar to the leg frame, using Bolt (B), Lock washers (C) and Flat washers (D). Tighten with Allen key (E). (See Figure 1)

2.Attach the table surface to the leg frame, using Bolt (A), Lock washers (C) and Flat washers (D). Tighten with Allen key (E). (See Figure 2)

3.Attach the slanting bar to the table surface, using Bolt (B), Lock washers (C) and Flat washers (D). Tighten with Allen key (E). (See Figure 3)

4.Attach the floor board to the leg frame, using Bolt (A), Lock washers (C) and Flat washers (D). Tighten with Allen key (E). (See Figure 4)

5.Attach the floor board to the slanting bar, using Bolt (B), Lock washers (C) and Flat washers (D). Tighten with Allen key (E). (See Figure 5)

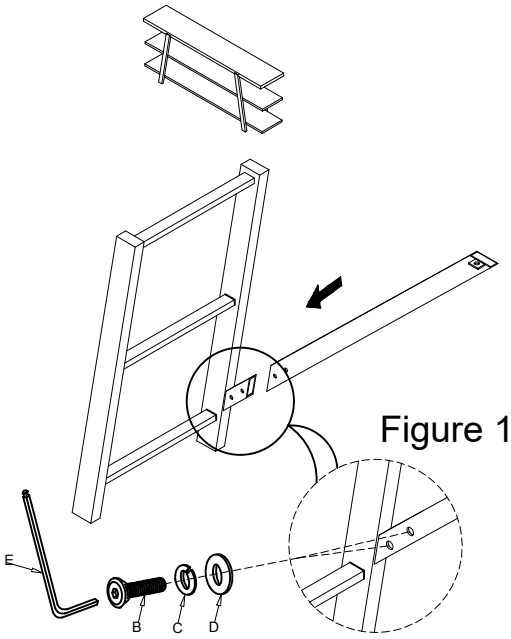


Figure 1

Figure 2

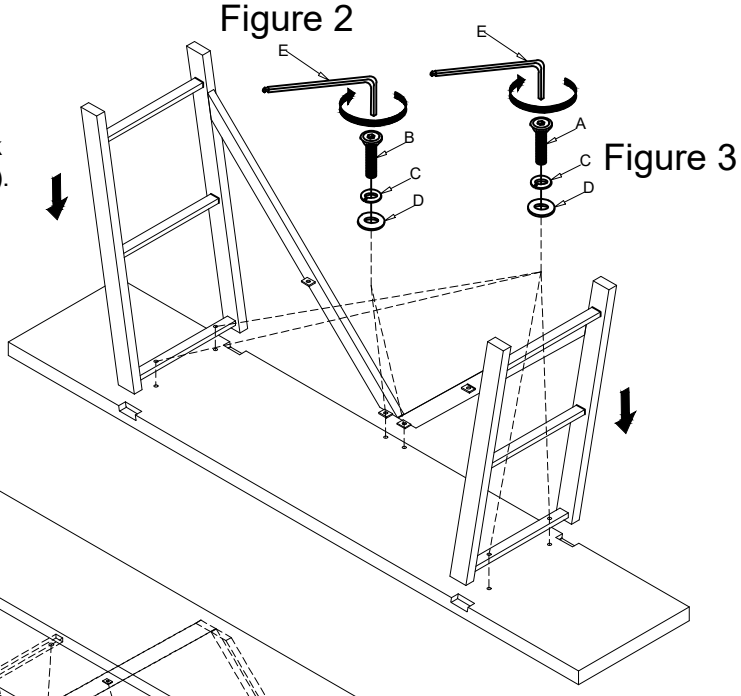


Figure 3

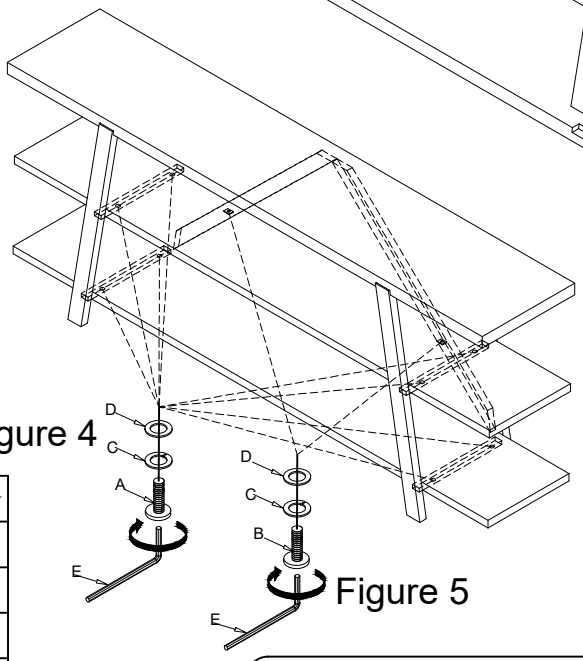


Figure 4

Figure 5

No.		Hardware List	Q'ty
A		Bolt Ø1/4" x 1"	12
B		Bolt Ø1/4" x 5/8"	8
C		Flat Washer Ø5/16"	20
D		Lock Washer Ø5/16"	20
E		Allen Key 4mm	1

Thank you for purchasing furniture from american drew!