
a m e r i c a n d r e w
• i n s p i r e d d e s i g n •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

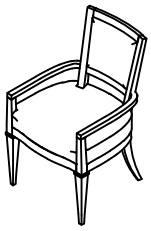

929-637

TOOLS REQUIRED:

Allen key (supplied, part # H)
Spanner Wrench (supplied, part # I)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Place the Chair Back facing upward on a soft and flat surface . Attach sitting frame to the chair back, using Flat Washer (C), Lock Washer (B), and Bolt (A). Tighten with Allen key (H). (See Figure 1).

2. Attach the front legs to the front corner block of the chair seat, using Flat Washer (F), Lock Washer (E), Nuts (G) and tighten all nuts with Wrench (I). (See Figure 2).

3.Attach the arm rails to the chair back, using Flat Washer (F), Lock Washer (E), bolts (D) and tighten all bolts with Allen key (H). (See Figure 3)

Figure 1

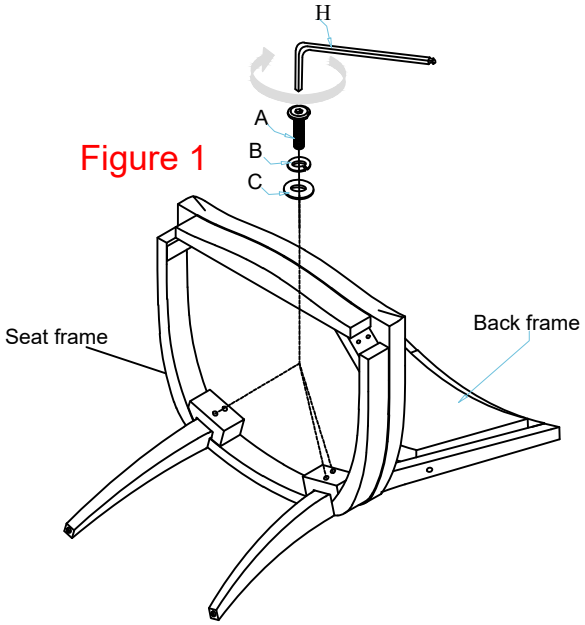


Figure 2


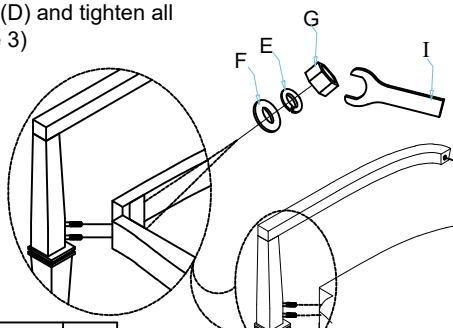


Figure 3

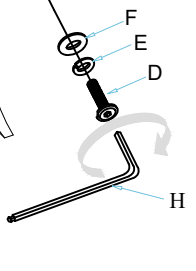

No.		Hardware List	Q'ty
A		Bolt Ø5/16"xL1-3/4"	4
B		Lock Washer Ø5/16"	8
C		Flat Washer Ø5/16"	8
D		Bolt Ø1/4"x1-1/4"	2
E		Lock Washer Ø1/4"	2
F		Flat Washer Ø1/4"	2
G		Hex Nut Ø5/16"	4
H		Allen Key 4mm	1
I		Spanner Wrench 12mm	1

Thank you for purchasing furniture from american drew!