


Model 161-FLC1 Fabric Lounge Chair with Ottoman

Parts Listing




A
Body
1 Unit




E
Ottoman Wood Leg
2 Units



B
Ottoman Cover
1 Unit




F
Ottoman Wood Leg
2 Units

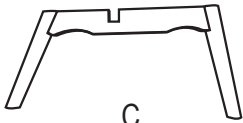

C
Chair Wood Leg
1 Unit




G
M8x55mm Screw
12 Unit

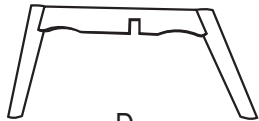


D
Chair Wood Leg
1 Unit



H
M8x45mm Screw
1 Unit



I
M6 Allen Key
1 Unit

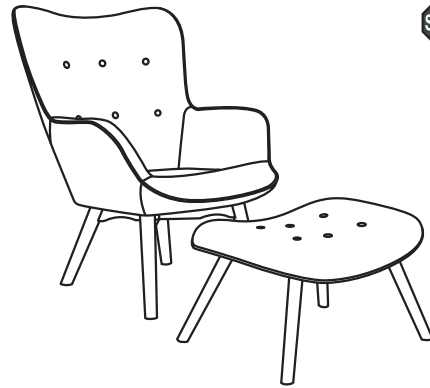

Assembly Instructions



Tools Needed: Allen Wrench - Provided

Please read all instructions before assembly.


Step 1: Attach Chair Wood Leg(D) to the Body(A) , using two M8x55mm Screws(G) as shown.Tighten with M6 Allen Key(I).

Step 2: Attach Chair Wood Leg(C) to the Body(A) , using two M8x55mm Screws(G) as shown.Tighten with M6 Allen Key(I).

Step 3: Attach Chair Wood Leg(C,D) to the Body(A) , using one M8x45mm Screw(H) as shown.Tighten with M6 Allen Key(I).

Step 4: Attach Ottoman Wood Legs(E) to the Ottoman Cover(B) , using four M8x55mm Screws(G) as shown.Tighten with M6 Allen Key(I).

Step 5: Attach Ottoman Wood Legs(F) to the Ottoman Cover(B) , using four M8x55mm Screws(G) as shown.Tighten with M6 Allen Key(I).

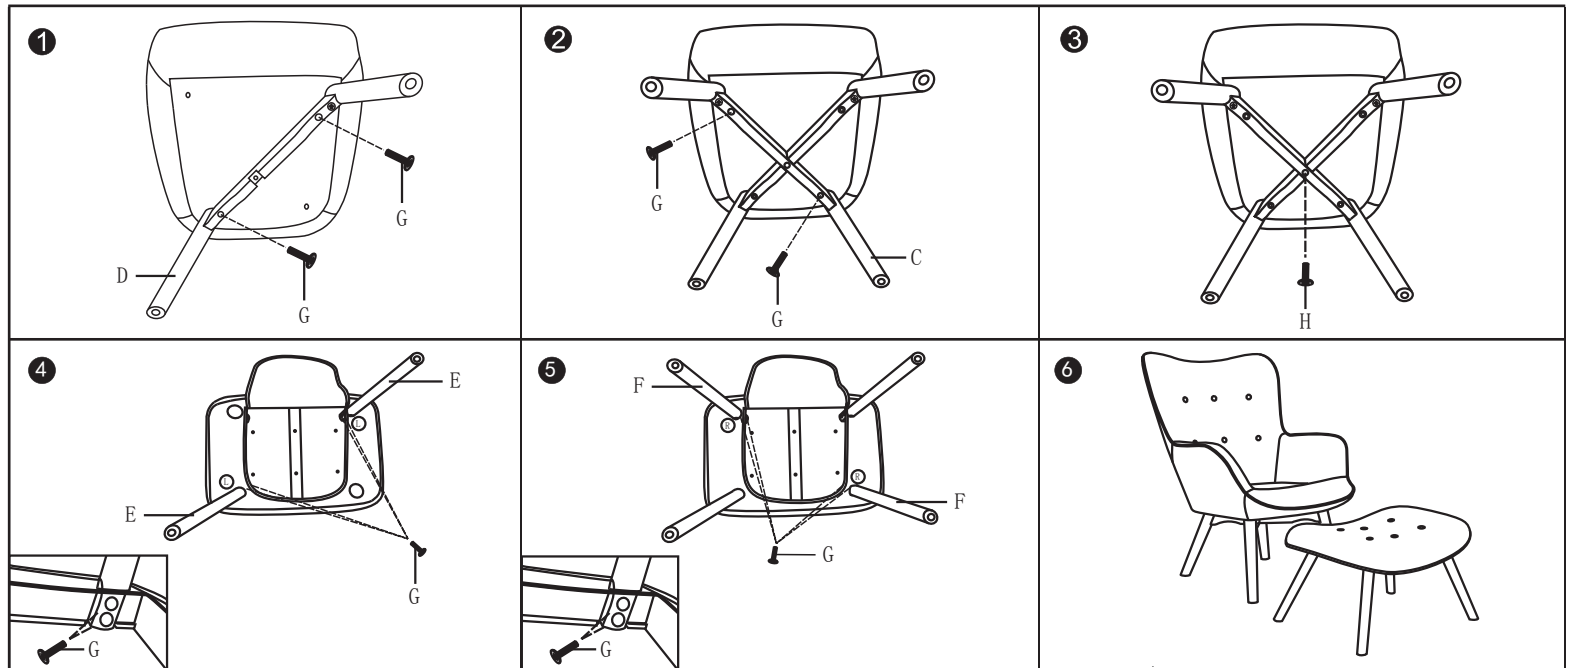

WEIGHT CAPACITY: 225 lbs.

Assembly Notes:

During assembly, hand tighten screw only when all screws are in place, you may then tighten all screws completely.

CAUTION:

1. Do not use this chair or ottoman as a step ladder.
2. Check for loose screws and tighten them every 6 months.

ofm

161 Tradition Trail Holly Springs, NC, 27540
800-520-7471 (voice) 919-362-4765 (fax)
919- 303-6389 (voice) www.ofminc.com
support@ofminc.com