

Installation Guide


Rain Showerheads

M product numbers are for Mexico (i.e. K-12345M)
Los números de productos seguidos de
M corresponden a México (Ej.
K-12345M)

THE BOLD LOOK
OF **KOHLER**®

1393862-2-A


Tools




Plumbers
Putty



Sealant
Tape

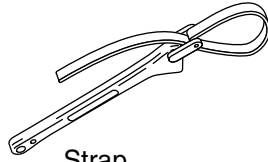

Strap
Wrench



Thin Bladed
Screwdriver

Important Information




WARNING: Risk of scalding. High water temperature can cause severe burns. Set the water temperature at or below 120°F (49°C) following the adjustment procedure in the valve Installation and Care Guide.

NOTICE: Choose an automatic compensating valve with the appropriate minimum flow rating to verify that your valve will provide safety at the lowest flow rates.

- Observe all local plumbing and building codes.

NOTE: After each use, tilt the showerhead to drain.

NOTE: For service parts information, visit your product page at kohler.com/serviceparts.

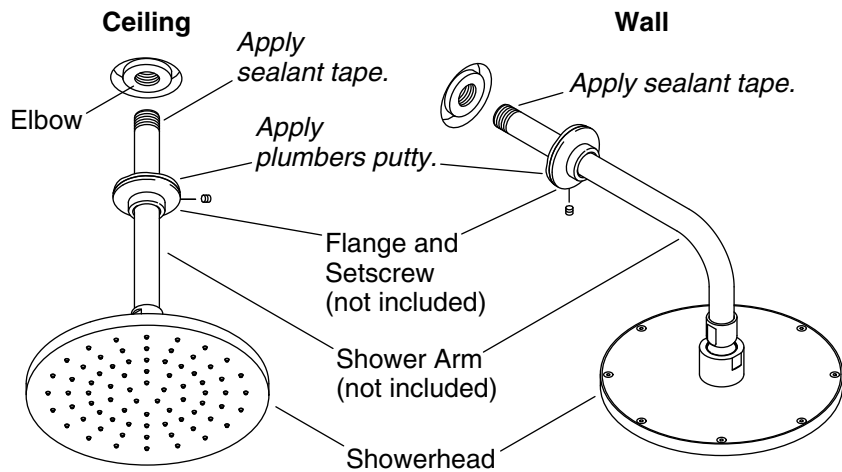


1. Install the Showerhead

NOTE: The shower arm with flange is not provided.

- Remove the existing showerhead and shower arm, if applicable.
- Install the shower elbow. Make sure that the elbow is securely mounted and has adequate strength to support the showerhead.
- Apply a bead of plumbers putty or other sealant to the back of the flange.
- Place the flange onto the long end of the shower arm as shown.
- Apply sealant tape to the threads of each end of the shower arm.
- Install the shower arm to the shower elbow and tighten securely with a clean strap wrench.
- Press the flange against the finished wall/ceiling and secure to the shower arm by tightening the setscrew.
- Remove any excess plumbers putty.
- Turn on the water to flush any debris through the shower arm.
- Turn off the water.
- Install the showerhead to the shower arm and tighten securely with a clean strap wrench.
- Check all connections for leaks.


NOTE: After each use some water may remain in the showerhead. To prevent dripping, tilt the showerhead to drain.

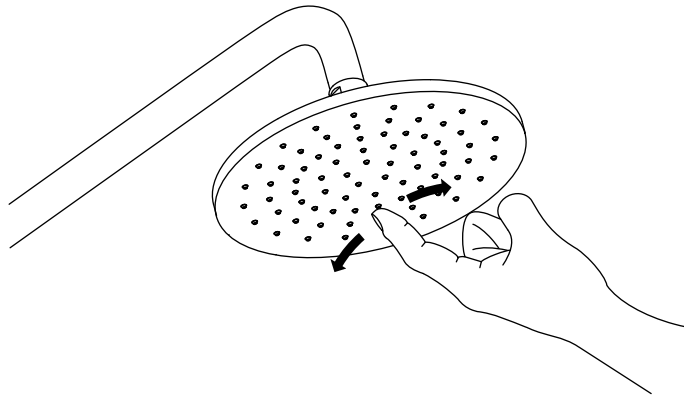

Clean the Spray Nozzles

To dislodge debris and mineral build-up:

- Run water through the showerhead.
- Firmly rub your finger back and forth across the spray holes in the showerhead face.
- If this procedure fails to improve the performance of the showerhead, proceed to the "Clean the Screen Washer" section of this guide.

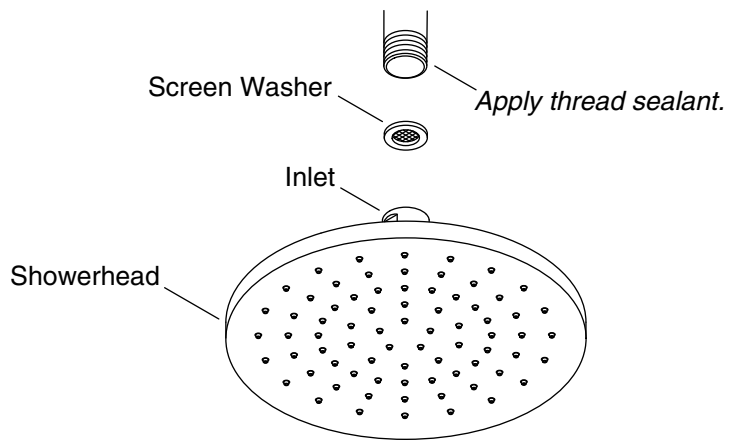

Clean the Screen Washer

- Use a clean wrench to remove the showerhead from the shower arm; be careful not to mar the finish.
- Use a thin flat-blade screwdriver to carefully pry up the edge of the screen washer. Remove and clean the screen washer.

NOTE: Do not attempt to remove the flow control.

- Reinstall the screen washer with the tapered end out.
- Apply sealant tape to the threads of the shower arm.
- Reinstall the showerhead.