KINCAID
SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTION

430-313 5/0 AFFINITY UPH BED - HEADBOARD
430-316 6/6 AFFINITY UPH BED - HEADBOARD
430-324 5/0 LINEAGE PANEL BED - HEADBOARD
430-326 6/6 LINEAGE PANEL BED - HEADBOARD

www.kincaidfurniture.com
Phone : 828-728-3261.

IMPORTANT NOTES :


. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.

. Check to be sure that you have all parts and hardware.

. Remove all wrapping materials,including staples and packing straps before you start to assemble.

. Do not tighten all screws and bolts until completely assembled.

. Keep all hardware out of the reach of children.

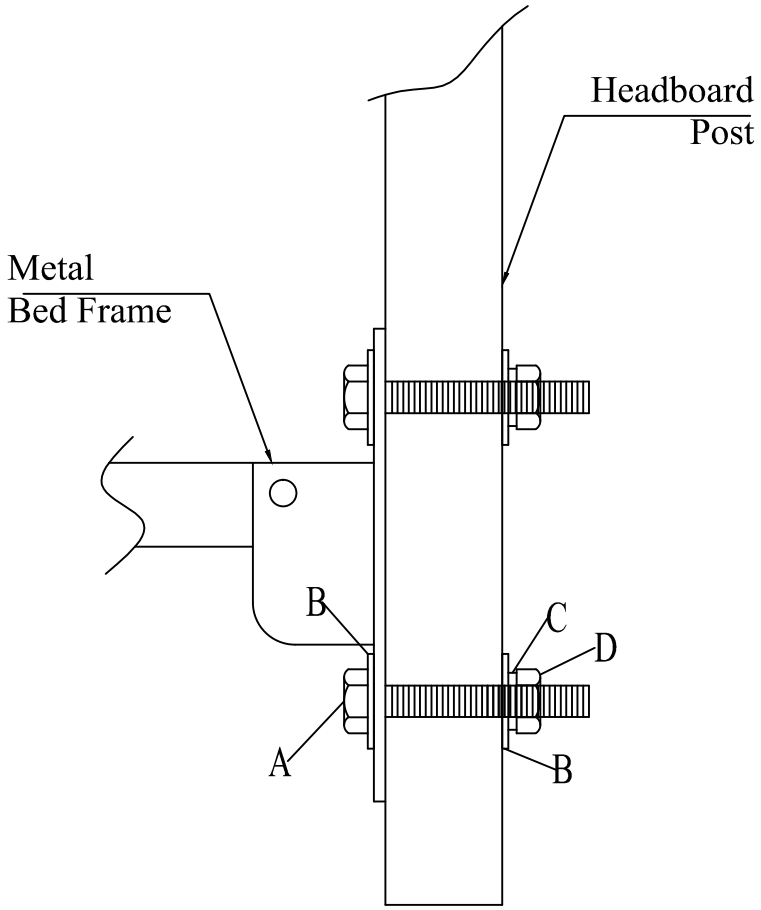

NO	Hardware List		Q'ty
A		Bolt Ø1/4"*89mm	4pcs
B		Ø1/4" Flat Washer	8pcs
C		Ø1/4" Lock Washer	4pcs
D		Ø1/4" Nut	4pcs